

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	
ALFA ROMEO													
145 1994 2000													
1.4	AR 33501	1351	66	1994	1996	X	X	X	X	X	X	X	X
1.4 TS 16V	AR 33503	1370	76	1996	2000	X	X	X	X	X	X	X	X
1.6	AR 33201	1596	76	1994	1996	X	X	X	X	X	X	X	X
1.6 TS 16V	AR 67601	1598	88	1996	2000	X	X	X	X	X	X	X	X
1.7 16V	AR 33401	1712	95	1994	1996	X	X	X	X	X	X	X	X
1.8 TS 16V	AR 32201	1747	106	1998	2000	X	X	X	X	X	X	X	X
1.8 TS 16V	AR 67106	1747	103	1996	1998	X	X	X	X	X	X	X	X
1.9 JTD	AR 32302	1910	77	1998	2000	X	X	X	X	X	X	X	X
1.9 TD	AR 33601	1929	66	1994	1999	X	X	X	X	X	X	X	X
1.9 TD	AR 67501	1929	66	1994	1999	X	X	X	X	X	X	X	X
2.0 TS 16V	AR 32301	1970	114	1998	2000	X	X	X	X	X	X	X	X
2.0 TS 16V	AR 67204	1970	110	1996	1998	X	X	X	X	X	X	X	X
146 1995 2000													
1.4	AR 33501	1351	66	1994	1996	X	X	X	X	X	X	X	X
1.4 TS 16V	AR 33503	1370	76	1996	2000	X	X	X	X	X	X	X	X
1.6	AR 33201	1596	76	1994	1996	X	X	X	X	X	X	X	X
1.6 TS 16V	AR 32101	1598	88	1996	2000	X	X	X	X	X	X	X	X
1.6 TS 16V	AR 67601	1598	88	1996	2000	X	X	X	X	X	X	X	X
1.7 16V	AR 33401	1712	95	1994	1996	X	X	X	X	X	X	X	X
1.8 TS 16V	AR 32201	1747	106	1998	2000	X	X	X	X	X	X	X	X
1.8 TS 16V	AR 67106	1747	103	1996	1998	X	X	X	X	X	X	X	X
1.9 JTD	AR 32302	1910	77	1998	2000	X	X	X	X	X	X	X	X
1.9 TD	AR 33601	1929	66	1994	1999	X	X	X	X	X	X	X	X
1.9 TD	AR 67501	1929	66	1994	1999	X	X	X	X	X	X	X	X
2.0 TS 16V	AR 32301	1970	114	1998	2000	X	X	X	X	X	X	X	X
2.0 TS 16V	AR 67204	1970	110	1996	1998	X	X	X	X	X	X	X	X
147 2000													
1.6 TS	AR 32103	1598	88	2004		X	X	X	X	X	X	X	X
1.6 TS	AR 32104	1598	88	2000		X	X	X	X	X	X	X	X
1.6 TS	AR 37203	1598	77	2000		X	X	X	X	X	X	X	X
1.9 JTD (100)	182 B9.000	1910	74	2002	2005	X	X	X	X	X	X	X	X
1.9 JTD (115)	937 A2.000	1910	85	2000	2005	X	X	X	X	X	X	X	X
1.9 JTD (115)	937 A7.000	1910	85	2005		X	X	X	X	X	X	X	X
1.9 JTD (120)	937 A3.000	1910	88	2005		X	X	X	X	X	X	X	X
1.9 JTD 16V (126)	937 A4.000	1910	93	2004	2005	X	X	X	X	X	X	X	X
1.9 JTD 16V (136)	192 B1.000	1910	100	2004		X	X	X	X	X	X	X	X
1.9 JTD 16V (140)	192 A5.000	1910	103	2002	2004	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagn.	Engine	Service Reset	Air Cond.	Wir. Diagn.	Repair Times	Fuses & Relays
ALFA ROMEO																			
147 2000																			
1.9 JTD 16V (150)	937 A5.000	1910	110	2004		X	X	X	X	X				X	X				X
2.0 TS	AR 32310	1970	110	2000		X	X	X	X	X	X	X		X	X		X	X	
3.2 V6 GTA	932 A.000	3179	184	2002		X	X	X	X	X	X	X		X	X				X
155 1992 1997																			
1.6 TS 16V	AR 67601	1598	88	1996	1997	X	X	X	X	X	X			X			X	X	
1.7 TS	AR 67103	1749	85	1992	1995	X	X	X	X	X	X		X	X		X	X	X	
1.7 TS (not used)	AR 67105	1749		1996		X			X										
1.8 TS	AR 67102	1773	93	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.8 TS 16V	AR 67106	1747	103	1996	1997	X	X	X	X	X	X			X			X	X	
2.0 16V Turbo Q4	AR 67203	1995	137	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.0 TD	AR 67502	1929	68	1992	1997	X	X	X	X	X			X	X		X	X	X	
2.0 TS	AR 67202	1995	104	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.0 TS 16V	AR 67204	1970	110	1996	1997	X	X	X	X	X	X	X		X			X	X	
2.5 TD	VM 07B	2500	92	1992	1997	X	X	X	X	X			X	X		X	X	X	
2.5 TD (not used)	VM 31B			1996	1997	X			X										
2.5 V6	AR 67301	2492	120	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.5 V6 (not used)	AR 67302	2492		1996	1997	X			X										
V6 (not used)	AR 67303			1995	1997	X			X										
156 1997 2006																			
1.6 TS	AR 32102	1598	82	2000	2001	X	X	X	X	X	X	X	X	X		X	X	X	
1.6 TS	AR 32103	1598	88	2001	2006	X	X	X	X	X	X	X		X			X	X	
1.6 TS	AR 32104	1598	88	2001	2006	X	X	X	X	X	X	X		X			X	X	
1.6 TS	AR 67601	1598	88	1997	2001	X	X	X	X	X	X	X	X	X			X	X	
1.8 TS	AR 32201	1747	106	1997	2001	X	X	X	X	X	X	X	X	X		X	X	X	
1.8 TS	AR 32205	1747	103	2001	2006	X	X	X	X	X	X	X		X			X	X	
1.9 JTD 16V	192 A5.000	1910	103	2002	2006	X	X	X	X	X	X	X		X				X	
1.9 JTD 16V	937 A4.000	1910	103	2003	2006	X	X	X	X	X	X	X		X				X	
1.9 JTD 16V	937 A5.000	1910	110	2004	2006	X	X	X	X	X				X					
1.9 JTD 8V	937 A2.000	1910	85	2002	2006	X	X	X	X	X	X			X				X	
1.9 JTD 8V	AR 32302	1910	77	1997	2001	X	X	X	X	X	X	X	X	X		X	X	X	
1.9 JTD 8V	AR 37101	1910	81	2001	2002	X	X	X	X	X	X	X		X			X	X	
2.0 JTS	932 A2.000	1970	121	2002	2006	X	X	X	X	X	X	X		X				X	
2.0 JTS	937 A1.000	1970	121	2002	2006	X	X	X	X	X	X	X		X				X	
2.0 TS	AR 32301	1970	114	1997	2001	X	X	X	X	X	X	X	X	X		X	X	X	
2.0 TS	AR 32310	1970	110	2001	2002	X	X	X	X	X	X	X		X			X	X	
2.4 JTD 10V	839 A6.000	2387	103	2001	2002	X	X	X	X	X	X	X		X			X	X	
2.4 JTD 10V	841 C.000	2387	110	2002	2006	X	X	X	X	X	X	X		X				X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
ALFA ROMEO													
156 1997 2006													
2.4 JTD 10V	AR 32501	2387	100	1997	2001	X	X	X	X	X	X	X	X
2.4 JTD 20V	841 G.000	2387	129	2003	2006	X	X	X	X		X		
2.4 JTD 20V	841 M.000	2387	129	2003	2006	X	X	X	X		X		
2.5 V6 24V	AR 32401	2492	140	1997	2001	X	X	X	X	X	X	X	X
2.5 V6 24V	AR 32405	2492	141	2001	2006	X	X	X	X	X	X	X	X
3.2 V6 GTA	932 A.000	3179	184	2002	2006	X	X	X	X	X	X		X
159 2005													
1.8 16V	939 A4.000	1796	103	2006		X		X	X				X
1.9 JTDm (115)	939 A7.000	1910	85	2005		X	X	X	X				X
1.9 JTDm (120)	939 A1.000	1910	88	2005		X	X	X	X		X		X
1.9 JTDm 16V (136)	939 A8.000	1910	100	2005		X	X	X	X				X
1.9 JTDm 16V (150)	939 A2.000	1910	110	2005		X	X	X	X		X		X
1.9 JTS	939 A6.000	1859	117	2005		X	X	X	X		X		X
2.2 JTS	939 A5.000	2198	136	2005		X	X	X	X		X		X
2.4 JTDm 20V	939 A3.000	2387	147	2005		X	X	X	X		X		X
3.2 V6 JTS Q4	939 A.000	3195	191	2005		X		X	X				X
164 1988 1998													
2.0 Super V6 TB	AR 641.01/.02	1996	152	1992	1998	X	X	X	X		X	X	X
2.0 TS	AR 064.16	1962	105	1988	1993	X	X	X	X		X	X	X
2.0 TS	AR 064.20	1962	109	1988	1993	X	X	X	X	X	X	X	X
2.0 TS	AR 641.03	1995	106	1993	1998	X	X	X	X	X	X	X	X
2.0 Turbo	AR 064.76	1995	123	1988	1993	X	X	X	X	X	X	X	X
2.0 V6 TB	AR 641.01	1996	152	1990	1992	X	X		X				
2.5 Super TD	VM 32B			1992	1998	X	X		X				
2.5 Super TD	VM 84B	2500	92	1993	1998	X	X	X	X		X	X	X
2.5 TD	VM 84A	2500	86	1988	1993	X	X	X	X		X	X	X
3.0 Q4	AR 643.07	2959	168	1993	1998	X	X	X	X		X	X	X
3.0 Super V6	AR 663.03	2959	132	1993	1998	X	X		X				
3.0 Super V6 24V	AR 643.01/.04	2959	152	1992	1998	X	X	X	X		X	X	X
3.0 Super V6 24V	AR 663.01	2959	155	1992	1995	X	X	X	X	X	X	X	X
3.0 Super V6 24V	AR 663.02	2959	155	1995	1998	X	X	X	X	X	X	X	X
3.0 V6	AR 064.10/.12	2959	141	1988	1992	X	X	X	X	X	X	X	X
3.0 V6	AR 643.05	2959	132	1993	1998	X	X	X	X		X		X
3.0 V6 24V Quadrifoglio	AR 643.08	2959	168	1993	1994	X	X	X	X	X		X	X
3.0 V6 kat.	AR 064.10/.12	2959	138	1988	1992	X	X	X	X	X	X	X	X
3.0 V6 Quadrifoglio	AR 643.01	2959	147	1990	1993	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
ALFA ROMEO													
166 1999													
2.0 TS	AR 34103	1970	114	1999	2002		X	X	X	X	X	X	X
2.0 TS	AR 36301	1970	110	2002			X	X	X	X	X		X
2.0 V6 TB	AR 34102	1996	151	1999	2002		X	X	X	X	X	X	X
2.4 JTD	841 C.000	2387	110	2002			X	X	X	X	X		X
2.4 JTD	AR 34202	2387	100	2000	2002		X	X	X	X	X	X	X
2.4 JTD	AR 36202	2387	103	2002	2004		X	X	X	X	X		X
2.4 JTD 20V	841 G.000	2387	129	2003			X	X	X	X	X		X
2.4 JTD 20V C.A.	841 H.000	2387	129	2003			X	X	X	X	X		X
2.5 V6	AR 34201	2492	140	1999	2002		X	X	X	X	X	X	X
2.5 V6	AR 36201	2492	138	2002			X	X	X	X	X		X
3.0 V6	AR 34301	2959	166	1999	2002		X	X	X	X	X	X	X
3.0 V6 C.A.	AR 36101	2959	162	2002			X	X	X	X	X		X
3.2 V6	936 A.000	3179	177	2003			X	X	X	X	X		X
Moet weg	0	0	0	0			X		X	X	X		X
Moet weg	0	0	0	0			X		X	X	X		X
Moet weg	0	0	0	0			X	X	X	X	X		X
Moet weg	0	0	0	0			X		X	X	X		X
33 1983 1990													
1.3	301.68	1350	63	1986	1988		X	X	X	X	X		X
1.3 / 1.3 QV	305.02/305.85	1350	58	1983	1990		X	X	X	X	X		X
1.3 S	305.87	1350	63	1988	1989		X	X	X	X	X		X
1.5	301.82	1490	70	1983	1988		X	X	X	X	X		X
1.5	305.14	1490	70	1983	1988		X	X	X	X	X		X
1.5	305.20/305.88	1490	70	1985	1988		X	X	X	X	X		X
1.5 4x4	305.14	1490	70	1983	1988		X	X	X	X	X		X
1.5 4x4	305.20/305.88	1490	70	1985	1988		X	X	X	X	X		X
1.5 4x4 Giardinetta	305.08	1490	70	1989	1990		X	X	X	X	X		X
1.5 Giardinetta	305.08	1490	70	1989	1990		X	X	X	X	X		X
1.5 Quadrifoglio	305.04	1490	62	1983	1988		X	X	X	X	X		X
1.5 Ti	301.46	1490	77	1984	1990		X	X	X	X	X		X
1.7	305.50	1712	87	1986	1990		X	X	X	X	X		X
1.7 IE	305.58	1712	79	1988	1990		X	X	X	X	X		X
1.8 TD	VM82 A	1779	62	1989	1990		X	X	X	X	X		X
33 1990 1994													
1.2	307.43	1186	58	1990	1994		X	X	X	X	X		X
1.3 S	307.32	1351	63	1990	1994		X	X	X	X	X		X
1.3 Sportwagon	301.68	1351	63	1990	1994		X	X	X	X	X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
ALFA ROMEO													
33 1990 1994													
1.3 Sportwagon	307.32	1351	63	1990	1994	X	X	X	X		X		X
1.3 Sportwagon 4x4	307.32	1351	63	1990	1994	X	X	X	X	X		X	X
1.4 IE	307.55	1350	66	1990	1994	X	X	X	X		X	X	X
1.4 IE Sportwagon	307.53	1351	65	1990	1994	X	X	X	X	X		X	X
1.5	307.34	1490	63	1990	1994	X	X	X	X		X	X	X
1.5 IE	307.50	1490	71	1990	1994	X	X	X	X	X		X	X
1.5 IE	307.51	1490	70	1990	1994	X	X	X	X	X		X	X
1.5 IE	307.51 A	1490	70	1990	1994	X	X	X	X		X	X	X
1.5 IE Sportwagon	307.51	1490	70	1991	1994	X	X	X	X	X		X	X
1.5 IE Sportwagon	307.51 A	1490	70	1991	1994	X	X	X	X		X	X	X
1.7 IE	307.36	1712	77	1990	1994	X	X	X	X	X		X	X
1.7 IE	307.37	1712	79	1990	1994	X	X	X			X		X
1.7 IE 16V	307.46/307.47	1712	95	1990	1994	X	X	X	X	X		X	X
1.7 IE 4x4	307.37	1712	79	1990	1994	X	X	X	X	X		X	X
1.7 IE S 16V QV 4	307.46/307.47	1712	95	1992	1994	X	X	X	X	X		X	X
1.8 TD	VM 96 A	1779	62	1990	1994	X	X	X	X		X	X	X
75 1985 1992													
1.6	061.00	1570	81	1985	1990	X	X	X	X		X	X	X
1.6 IE	061.01	1570	79	1990	1992	X	X	X	X	X		X	X
1.6 IE	061.02	1570	76	1990	1992	X	X	X	X	X		X	X
1.8	062.02	1779	88	1985	1990	X	X	X	X		X	X	X
1.8 IE	61.201	1779	90	1988	1992	X	X	X	X	X		X	X
1.8 IE	061.68	1779	88	1988	1992	X	X	X	X	X		X	X
1.8 Turbo	061.34	1779	118	1986	1989	X	X	X	X	X		X	X
1.8 Turbo	61.203	1779	114	1987	1992	X	X	X	X	X		X	X
2.0	062.12	1962	94	1985	1989	X	X	X	X		X	X	X
2.0 TD	VM80 A	1995	70	1985	1992	X	X	X	X		X	X	X
2.0 TS	0.17.13	1962	109	1987	1992	X	X	X	X		X	X	X
2.0 TS	062.24	1962	109	1987	1992	X	X	X	X	X		X	X
2.4 TD	VM81A	2393	82	1987	1992	X	X	X	X		X	X	X
2.5 V6	016.46	2492	115	1987	1992	X	X	X	X		X	X	X
3.0 V6	061.20	2959	136	1987	1990	X	X	X	X		X	X	X
3.0 V6	061.24	2959	138	1987	1992	X	X	X	X		X	X	X
3.0 V6	61.503	2959	138	1987	1992	X	X	X	X	X		X	X
3.0 V6 Quadrifoglio	061.24	2959	136	1990	1992	X	X	X	X		X	X	X
Crosswagon 2004													
1.9 JTD 16V Q4	937 A5.000	1910	110	2004		X	X	X	X		X		

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
ALFA ROMEO																			
GT 2004																			
1.8 TS 16V	AR 32205	1747	103	2005		X		X	X	X				X					
1.9 JTD 16V	937 A5.000	1910	110	2004		X	X	X	X	X	X			X					X
2.0 JTS	932 A2.000	1970	119	2005		X	X	X	X	X				X					X
2.0 JTS	937 A1.000	1970	121	2004		X	X	X	X	X	X			X					X
3.2 V6	936 A.000	3179	177	2004		X	X	X	X	X	X			X					X
GTV 1995 2005																			
1.8 TS	AR 32201	1747	106	1998	2001	X	X	X	X	X	X			X				X	X
2.0 JTS 16V	937 A1.000	1970	121	2003	2005	X	X	X	X	X				X					X
2.0 TS 16V	AR 16201	1970	110	1995	1998	X	X	X	X	X	X			X			X	X	
2.0 TS 16V	AR 32301	1970	114	1998	2001	X	X	X	X	X				X			X	X	
2.0 TS 16V	AR 32310	1970	110	2001	2005	X	X	X	X	X				X			X	X	
2.0 V6 TB	AR 16202	1996	147	1995	2001	X	X	X	X	X	X			X			X	X	
3.0 V6 24V	AR 16102	2959	165	1996	2001	X	X	X	X	X	X			X			X	X	
3.0 V6 24V	AR 16105	2959	162	2001	2003	X	X	X	X	X				X			X	X	
3.2 V6 32V	936 A.000	3179	176	2003	2005	X	X	X	X	X				X				X	
Spider 1983 1995																			
2.0	005.15	1962	94	1983	1990	X	X	X	X	X				X				X	X
2.0	015.88/015.90	1962	94	1990	1995	X	X	X	X	X				X				X	X
Spider 1995																			
1.8 TS	AR 32201	1747	106	1998	2001	X	X	X	X	X	X			X				X	X
2.0 JTS 16V	937 A1.000	1970	121	2003		X	X	X	X	X				X				X	X
2.0 TS 16V	AR 16201	1970	110	1995	1998	X	X	X	X	X	X			X				X	X
2.0 TS 16V	AR 32301	1970	114	1998	2001	X	X	X	X	X				X				X	X
2.0 TS 16V	AR 32310	1970	110	2001		X	X	X	X	X				X				X	X
2.0 V6 TB	AR 16202	1996	147	1998	2001	X	X	X	X	X	X			X				X	X
3.0 V6	AR 16101	2959	141	1995	2001	X	X	X	X	X	X			X				X	X
3.0 V6 24V	AR 16105	2959	162	2001	2003	X	X	X	X	X				X				X	X
3.2 V6 24V	936 A.000	3179	176	2003		X	X	X	X	X				X				X	X
Sprint 1986 1990																			
1.5 Ti	301.46	1490	77	1986	1988	X	X	X	X	X				X					
1.7	305.50	1712	81	1989	1990	X	X	X	X	X				X					
SZ/RZ 1990 1993																			
ES30 Cabrio	AR 61501	2959	152	1990	1992	X	X	X	X	X				X					
ES30 Coupe	AR 61501	2959	154	1990	1993	X	X	X	X	X				X					

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
AUDI													
100 / 200 / V8	1982	1991											
1.8	4B	1781	66	1988	1990	X	X	X	X	X	X	X	X
1.8	DR	1781	55	1982	1987	X	X	X	X		X		X
1.8	DS	1781	66	1982	1991	X	X	X	X		X	X	X
1.8	JW	1781	66	1983	1988	X	X	X	X	X	X		X
1.8	NP	1781	66	1985	1990	X	X	X	X	X	X	X	X
1.8	PH	1781	66	1985	1990	X	X	X	X	X	X		X
1.8	RS	1781	55	1986	1987	X	X	X	X		X	X	X
1.8	SH	1781	65	1986	1990	X	X	X	X	X	X	X	X
1.8 quattro	PH	1781	66	1985	1990	X	X	X	X	X	X		X
2.0	KP	1994	85	1984	1987	X	X	X	X		X		X
2.0	RT	1994	85	1988	1990	X	X	X	X	X	X	X	X
2.0	SL	1994	83	1986	1987	X	X	X	X		X		X
2.0 D	CN	1986	51	1982	1989	X	X	X	X		X	X	X
2.0 TD	NC	1986	74	1988	1990	X	X	X	X		X	X	X
2.1 Turbo	JY	2144	134	1983	1987	X	X	X	X	X	X		X
2.1 Turbo	KG	2144	134	1983	1988	X	X	X	X	X	X		X
2.2	HX	2226	101	1984	1987	X	X	X	X		X		X
2.2	KU	2226	101	1984	1991	X	X	X	X	X	X	X	X
2.2	KZ	2226	85	1984	1986	X	X	X	X		X		X
2.2 quattro	KU	2226	101	1984	1984	X	X	X	X	X	X	X	X
2.3	KU (mag weg)	2309	101	1983	1990	X		X	X	X			
2.3	KZ (mag weg)	2309	85	1984	1986	X		X	X	X			
2.3	NF	2309	100	1985	1990	X	X	X	X	X	X	X	X
2.3 20V Turbo quattro	3B	2226	162	1989	1990	X	X	X	X	X	X		X
2.3 20V Turbo quattro	RR	2226	162	1989	1990	X	X	X	X		X		X
2.3 quattro	PX	2309	88	1985	1988	X	X	X	X		X		X
2.3 Turbo quattro	1B	2309	147	1988	1990	X	X	X	X	X	X		X
2.3 Turbo quattro	2B	2309	140	1988	1990	X	X	X	X	X	X		X
2.3 Turbo quattro	MC	2309	121	1985	1990	X	X	X	X	X	X	X	X
2.4 D	3D	2370	60	1989	1990	X	X	X	X		X	X	X
2.5 TDi	1T	2460	88	1990	1990	X	X	X	X		X	X	X
3.6 V8	PT	3562	184	1990	1992	X	X	X	X	X		X	X
4.2 V8	ABH	4172	206	1992	1993	X	X	X	X	X	X	X	X
100 / A6	1991	1997											
1.6	ABB	1595	75	1992	1993	X	X	X	X		X	X	X
1.6 mag weg	ADA (bestaat niet)	1595	74	1993	1997	X		X	X				X
1.8 20V (A6)	ADR	1781	92	1995	1997	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
AUDI													
100 / A6 1991 1997													
1.9 TDi (A6)	1Z	1896	66	1994	1997	X	X	X	X	X	X	X	X
2.0	AAD	1984	85	1991	1993	X	X	X	X	X	X	X	X
2.0	AAE	1984	74	1991	1995	X	X	X	X	X	X	X	X
2.0	ABK	1984	85	1993	1997	X	X	X	X	X	X	X	X
2.0 16V	ACE	1984	103	1992	1997	X	X	X	X	X	X	X	X
2.3	AAR	2309	98	1991	1997	X	X	X	X	X	X	X	X
2.3 quattro	AAR	2309	98	1991	1997	X	X	X	X	X	X	X	X
2.4 D	AAS	2370	60	1991	1995	X	X	X	X	X	X	X	X
2.5 TDi	AAT	2460	85	1991	1997	X	X	X	X	X	X	X	X
2.5 TDi	ABP	2460	85	1991	1992	X	X	X	X	X	X	X	X
2.5 TDi (A6)	AEL	2461	103	1996	1997	X	X	X	X	X	X	X	X
2.6 V6	ABC	2598	110	1992	1997	X	X	X	X	X	X	X	X
2.6 V6 quattro	ABC	2598	110	1992	1997	X	X	X	X	X	X	X	X
2.8 V6	AAH	2771	128	1991	1997	X	X	X	X	X	X	X	X
2.8 V6 30V (A6)	ACK	2771	142	1995	1996	X	X	X	X	X	X	X	X
2.8 V6 quattro	AAH	2771	128	1991	1997	X	X	X	X	X	X	X	X
S4 / S6 2.2	AAN	2226	169	1991	1997	X	X	X	X	X	X	X	X
S4 4.2	ABH	4172	213	1992	1994	X	X	X	X	X	X	X	X
S6 4.2 V8	AEC	4172	213	1994	1997	X	X	X	X	X	X	X	X
80 1992 1995													
1.6	ABB	1595	75	1990	1994	X	X	X	X	X	X	X	X
1.6	ABM	1595	51	1992	1994	X	X	X	X	X	X	X	X
1.6	ADA	1595	74	1993	1995	X	X	X	X	X	X	X	X
1.8	PM	1781	66	1991	1995	X	X	X	X	X	X	X	X
1.9 TD	AAZ	1896	55	1991	1995	X	X	X	X	X	X	X	X
1.9 TDi	1Z	1896	66	1991	1995	X	X	X	X	X	X	X	X
2.0	ABK	1984	85	1991	1995	X	X	X	X	X	X	X	X
2.0	ABT	1984	66	1991	1995	X	X	X	X	X	X	X	X
2.0 16V	ACE	1984	103	1992	1995	X	X	X	X	X	X	X	X
2.0 16V quattro	ACE	1984	103	1992	1995	X	X	X	X	X	X	X	X
2.0 quattro	ABK	1984	85	1991	1995	X	X	X	X	X	X	X	X
2.3	NG	2309	98	1991	1995	X	X	X	X	X	X	X	X
2.6 V6	ABC	2598	110	1992	1995	X	X	X	X	X	X	X	X
2.6 V6 quattro	ABC	2598	110	1992	1995	X	X	X	X	X	X	X	X
2.8 V6	AAH	2771	128	1991	1995	X	X	X	X	X	X	X	X
2.8 V6 quattro	AAH	2771	128	1991	1995	X	X	X	X	X	X	X	X
S2	3B	2226	169	1990	1995	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond. Wir.	Diagr.	Repair Times	Fuses & Relays
AUDI																			
80 1992 1995																			
S2	ABY	2226	169	1993	1995	X	X	X	X	X	X	X	X	X		X	X	X	
80 / 90 1986 1991																			
1.4	SE	1391	48	1986	1988	X	X		X	X									
1.6	PP	1595	51	1986	1991	X	X	X	X	X	X	X		X				X	
1.6	RN	1595	51	1986	1987	X	X	X	X	X		X		X				X	
1.6	RNA	1595	51	1986	1987	X	X	X	X	X		X		X				X	
1.6 D	JK	1588	40	1986	1989	X	X	X	X	X				X				X	
1.6 D	JKA	1588	37	1986	1989	X	X	X	X	X				X				X	
1.6 TD	RA	1588	59	1986	1989	X	X	X	X	X				X				X	
1.6 TD	SB	1588	59	1987	1991	X	X	X	X	X				X				X	
1.8	DZ	1781	82	1986	1991	X	X	X	X	X	X	X		X				X	
1.8	JN	1781	66	1986	1991	X	X	X	X	X	X	X		X				X	
1.8	JV	1781	66	1986	1988	X	X	X	X	X		X		X				X	
1.8	MU	1781	82	1986	1987	X		X	X	X		X							
1.8	NE	1781	66	1986	1991	X	X	X	X	X		X		X				X	
1.8	PM	1781	66	1988	1991	X	X	X	X	X	X	X		X				X	
1.8	PV	1781	79	1986	1991	X	X	X	X	X	X			X				X	
1.8	RU	1781	55	1986	1991	X	X	X	X	X		X		X				X	
1.8	SF	1781	65	1986	1990	X	X	X	X	X		X		X				X	
1.8 quattro	DZ	1781	82	1986	1991	X	X	X	X	X	X			X				X	
1.8 quattro	JN	1781	66	1986	1990	X	X		X	X		X							
1.8 quattro	PM	1781	66	1986	1990	X	X		X	X									
1.8 quattro	SF	1781	65	1986	1990	X	X	X	X	X		X							
1.9	SD	1847	83	1986	1988	X	X	X	X	X	X	X		X				X	
1.9 D	1Y	1896	48	1989	1991	X	X	X	X	X				X				X	
1.9 quattro	SD	1847	83	1986	1988	X	X		X	X		X							
2.0	3A	1984	83	1988	1991	X	X	X	X	X	X			X				X	
2.0	AAD	1984	83	1990	1991	X	X	X	X	X	X	X		X				X	
2.0	NM	1994	82	1988	1991	X	X	X	X	X	X	X		X				X	
2.0	PS	1994	85	1987	1991	X	X	X	X	X	X	X		X				X	
2.0 16V	6A	1984	101	1989	1991	X	X	X	X	X	X	X	X	X		X		X	
2.0 16V quattro	6A	1984	101	1990	1991	X	X	X	X	X	X	X	X	X		X		X	
2.0 quattro	3A	1984	83	1988	1991	X	X	X	X	X	X	X		X				X	
2.0 quattro	AAD	1984	83	1990	1991	X	X	X	X	X	X	X		X				X	
2.3	KV	2309	100	1986	1991	X	X	X	X	X	X	X		X				X	
2.3	NG	2309	100	1987	1991	X	X	X	X	X	X	X	X	X		X		X	
2.3 20V	7A	2309	125	1988	1991	X	X	X	X	X	X	X		X				X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
AUDI													
80 / 90 1986 1991													
2.3 20V quattro	7A	2309	125	1988	1991		X	X	X	X	X		X
2.3 quattro	NG	2309	100	1987	1991		X	X	X	X	X	X	X
2.3 quattro	NG	2309	100	1989	1991		X	X	X	X	X	X	X
A2 2000 2005													
1.2 TDi	ANY	1191	45	2001	2005		X	X	X		X	X	X
1.4 16V	AUA	1390	55	2000	2003		X	X	X		X	X	X
1.4 16V	BBY	1390	55	2002	2005		X	X	X		X	X	X
1.4 TDi	AMF	1422	55	2000	2005		X	X	X		X	X	X
1.4 TDi	ATL	1422	66	2004	2005		X	X	X		X	X	X
1.4 TDi	BHC	1422	55	2003	2005		X	X	X		X	X	X
1.6 FSi	BAD	1598	81	2002	2005		X	X	X		X	X	X
A3 1997 2003													
1.6	AEH	1595	74	1996	2001		X	X	X	X	X	X	X
1.6	AKL	1595	74	1997	2003		X	X	X	X	X	X	X
1.6	APF	1595	74	1999	2001		X	X	X	X	X	X	X
1.6	BAH	1598	74	2003	2003		X	X	X		X		X
1.6	BFQ	1595	75	2002	2003		X	X	X		X		X
1.6	AVU	1595	75	2000	2003		X	X	X	X	X	X	X
1.8 20V	AGN	1781	92	1996	2001		X	X	X	X	X	X	X
1.8 20V	APG	1781	92	1999	2003		X	X	X	X	X	X	X
1.8 20V Turbo	AGU	1781	110	1996	2003		X	X	X	X	X	X	X
1.8 20V Turbo	AJQ	1781	132	1998	2001		X	X	X	X	X	X	X
1.8 20V Turbo	APP	1781	132	1999	2001		X	X	X	X	X	X	X
1.8 20V Turbo	AQA	1781	132	1998	2002		X	X	X	X	X	X	X
1.8 20V Turbo	ARX	1781	110	2000	2003		X	X	X	X	X	X	X
1.8 20V Turbo	ARY	1781	132	2000	2003		X	X	X	X	X	X	X
1.8 20V Turbo	ARZ	1781	110	1999	2001		X	X	X	X	X	X	X
1.8 20V Turbo	AUM	1781	110	2000	2003		X	X	X	X	X	X	X
1.8 20V Turbo	AUQ	1781	132	2000	2003		X	X	X	X	X	X	X
1.9 TDi	AGR	1896	66	1996	2001		X	X	X	X	X	X	X
1.9 TDi	AHF	1896	81	1997	2003		X	X	X	X	X	X	X
1.9 TDi	ALH	1896	66	1997	2002		X	X	X	X	X	X	X
1.9 TDi	ASV	1896	81	1999	2002		X	X	X		X	X	X
1.9 TDi	ASZ	1896	96	2000	2003		X	X	X	X	X	X	X
1.9 TDi	ATD	1896	74	2001	2003		X	X	X	X	X	X	X
1.9 TDi	AXR	1896	74	2001	2003		X	X	X		X		X
S3	AMK	1781	154	2000	2003		X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagn.	
AUDI													
A3 1997 2003													
S3	APY	1781	154	1998	2001		X	X	X	X	X	X	X
S3	BAM	1781	165	2001	2003		X	X	X	X	X	X	X
A3 2003													
1.6 8V	BGU	1595	75	2003			X	X	X	X	X		X
1.6 FSi 16V	BAG	1598	85	2004	2005		X	X	X	X			X
1.6 FSi 16V	BLP	1598	85	2005			X	X	X	X			X
1.9 TDi 8V	BKC	1896	77	2004			X	X	X	X			X
1.9 TDi? Insufficient data on elsa	AVQ	1896	74	2004	2005		X	X					X
2.0 FSi 16V	AXW	1984	110	2003	2004		X	X	X	X	X		X
2.0 FSi 16V	BHD	1984	110	2004	2005		X	X	X	X			X
2.0 FSi 16V	BLX	1984	110	2005			X	X	X	X			X
2.0 FSi 16V	BLY	1984	110	2005			X	X	X	X			X
2.0 FSi 16V	BMB	1984	110	2004			X	X	X	X			X
2.0 no engine data on elsa	BPY	1984	147	2005			X						X
2.0 TDi 16V	AZV	1968	100	2003			X	X	X	X	X		X
2.0 TDi 16V	BKD	1968	103	2004			X	X	X	X	X		X
2.0 TDi 8V no eng data on elsa	BMM	1968	103	2005			X						X
2.0 TFSi 16V	AXX	1984	147	2005			X	X	X	X			X
3.2 VR6	BDB	3189	184	2004			X	X	X	X			X
3.2 VR6 insufficient data on elsa	BMJ	3189	184	2005			X	X					X
wa							X		X				X
A4 2001 2005													
1.6 8V	ALZ	1595	75	2001	2005		X	X	X	X	X	X	X
1.8 20V Turbo	AVJ	1781	110	2001	2003		X	X	X	X	X	X	X
1.8 20V Turbo	BEX	1781	140	2002	2004		X	X	X	X	X	X	X
1.8 20V Turbo	BFB	1781	120	2002	2005		X	X	X	X	X	X	X
1.8 20V Turbo (Mexicoooooo!)	AMB	1781	125	2001	2004		X		X	X	X	X	X
1.8 20V Turbo China	BKB	1781	120	2004	2004		X		X				X
1.9 TDi	AVB	1896	74	2001	2004		X	X	X	X	X	X	X
1.9 TDi	AVF	1896	96	2001	2004		X	X	X	X	X	X	X
1.9 TDi	AWX	1896	96	2001	2004		X	X	X	X	X	X	X
1.9 TDi	BKE	1896	85	2005	2005		X	X	X	X	X	X	X
2.0 16V FSi	AWA	1984	110	2002	2005		X	X	X	X	X	X	X
2.0 16V FSi Turbo	BGB	1984	147	2005	2005		X	X	X	X	X		X
2.0 20V	ALT	1984	96	2001	2005		X	X	X	X	X	X	X
2.0 TDi 16V	BLB	1968	103	2005	2005		X	X	X	X	X		X
2.4 V6 30V	AMM	2393	120	2001	2004		X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
AUDI													
A4 2001 2005													
2.4 V6 30V	BDV	2393	125	2001	2004	X	X	X	X		X	X	X X
2.5 TDi V6 24V	AKE	2496	132	2001	2003	X	X	X	X	X	X	X	X X
2.5 TDi V6 24V	AYM	2496	114	2001	2003	X	X	X	X		X	X	X X
2.5 TDi V6 24V	BCZ	2496	120	2004	2004	X	X	X	X		X	X	X X
2.5 TDi V6 24V	BDG	2496	120	2003	2005	X	X	X	X		X	X	X X
2.5 TDi V6 24V	BDH	2496	132	2002	2004	X	X	X	X		X	X	X X
2.5 TDi V6 24V	BFC	2496	120	2002	2003	X	X	X	X		X	X	X X
2.5 TDi V6 24V Quattro	BAU	2496	132	2003	2004	X	X	X	X		X	X	X X
3.0 TDi V6 24V	BKN	2967	150	2005	2005	X		X			X		X
3.0 V6 30V	ASN	2976	162	2001	2005	X	X	X	X	X	X	X	X X
3.0 V6 30V	BBJ	2976	160	2001	2005	X	X	X	X		X	X	X X
3.0 V6 30V NO data	BGN	2976	162	2004	2005	X		X					X
S4 4.2 V8 40V	BBK	4163	253	2003	2005	X	X	X	X		X	X	X X
S4 4.2 V8 40V U.S. of America	BHF	4163	253	2005	2005	X		X	X		X	X	X
A4 2005													
1.6 8V	ALZ	1595	75	2005		X	X	X			X	X	X
1.8 20V Turbo	BFB	1781	120	2005		X	X	X			X	X	X
1.9 TDi	BKE	1896	85	2005	2006	X	X	X			X	X	X
1.9 TDi	BRB	1896	85	2005		X					X	X	X
2.0 16V FSi Turbo	BGB	1984	147	2005	2006	X					X	X	X
2.0 16V FSi Turbo	BPG	1984	147	2006		X						X	X
2.0 16V FSi Turbo	BUL	1984	162	2006		X						X	X
2.0 16V FSi Turbo	BWE	1984	147	2006		X						X	X
2.0 20V	ALT	1984	96	2005		X	X	X			X	X	X
2.0 TDi 16V	BLB	1968	103	2005		X	X	X			X	X	X
2.0 TDi 16V	BNA	1968	100	2005		X	X	X			X	X	X
2.0 TDi 16V	BRD	1968	125	2006		X						X	X
2.0 TDi 16V	BRE	1968	103	2006		X	X					X	X
2.0 TDi 8V	BPW	1968	103	2005	2006	X					X	X	X
2.0 TDi 8V	BRC	1986	100	2005		X					X	X	
2.5 TDi V6	BDG	2496	120	2005		X	X	X			X	X	X
2.7 TDi V6	BPP	2698	132	2006		X	X	X			X	X	X
3.0 TDi V6	BKN	2967	150	2005		X	X	X			X	X	X
3.0 V6 30V	ASN	2976	162	2005	2006	X	X	X			X	X	X
3.0 V6 30V	BBJ	2976	160	2005		X	X	X			X	X	X
3.2 V6 24V FSi	AUK	3123	188	2005		X	X	X				X	X
3.2 V6 24V FSi USA	BKH	3123	188	2005		X						X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
AUDI																			
A4 2005																			
capacit						X		X											
RS4 4.2 V8 32V FSi	BNS	4163	309	2006		X									X				X
S4 4.2 V8 40V	BBK	4163	253	2005		X									X				X
S4 4.2 V8 40V USA	BHF	4163	253	2005		X									X				X
wa						X		X											
A4 1994 2001																			
1.6	ADP	1595	76	1994	1997	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6	AHL	1595	74	1996	1999	X	X	X	X	X	X	X	X	X	X		X	X	X
1.6	ALZ	1595	75	2000	2001	X	X	X	X	X	X	X		X	X		X	X	X
1.6	ANA	1595	74	1998	2000	X	X	X	X	X			X	X	X		X	X	X
1.6	ARM	1595	74	1998	2001	X	X	X	X	X	X		X	X	X		X	X	X
1.8 20V	AFY	1781	88	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
1.8 20V	APT	1781	92	1999	2001	X	X	X	X	X	X		X	X	X		X	X	X
1.8 20V	ARG	1781	92	1998	2001	X	X	X	X	X			X	X	X		X	X	X
1.8 20V	AVV	1781	92	2000	2001	X	X	X	X	X	X			X	X		X	X	X
1.8 20V	ADR	1781	92	1994	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.8 20V Turbo	AEB	1781	110	1995	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.8 20V Turbo	AJL	1781	132	1997	2001	X	X	X	X	X	X	X	X	X	X		X	X	X
1.8 20V Turbo	ANB	1781	110	1999	2001	X	X	X	X	X	X		X	X	X		X	X	X
1.8 20V Turbo	APU	1781	110	1998	2001	X	X	X	X	X	X		X	X	X		X	X	X
1.8 20V Turbo	ARK	1781	110	1998	1999	X	X	X	X				X	X	X		X	X	X
1.8 20V Turbo	AWT	1781	110	2000	2001	X	X	X	X	X	X			X	X		X	X	X
1.8 20V Turbo quattro	AEB	1781	110	1995	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.8 20V Turbo quattro	AJL	1781	132	1997	2001	X	X	X	X	X		X	X	X	X		X	X	X
1.9 TDi	1Z	1896	66	1994	2000	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.9 TDi	AFF	1896	55	1996	2000	X	X	X	X	X	X		X	X	X	X	X	X	X
1.9 TDi	AFN	1896	81	1996	2000	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.9 TDi	AHH	1896	66	1997	2001	X	X	X	X	X	X	X	X	X	X		X	X	X
1.9 TDi	AHU	1896	66	1996	2001	X	X	X	X	X	X	X	X	X	X		X	X	X
1.9 TDi	AJM	1896	85	1998	2001	X	X	X	X	X	X		X	X	X		X	X	X
1.9 TDi	ATJ	1896	85	2000	2001	X	X	X	X	X	X			X	X		X	X	X
1.9 TDi	AVG	1896	81	1999	2001	X	X	X	X	X	X		X	X	X		X	X	X
2.4 V6 30V	AGA	2393	121	1997	1998	X	X	X	X	X	X	X	X	X	X		X	X	X
2.4 V6 30V	ALF	2393	121	1997	1999	X	X	X	X		X	X	X	X	X		X	X	X
2.4 V6 30V	AML	2393	121	1998	2001	X	X	X	X	X	X		X	X	X		X	X	X
2.4 V6 30V	AMM	2393	120	2000	2001	X	X	X	X	X	X			X	X		X	X	X
2.4 V6 30V	APZ	2393	120	1998	2000	X	X	X	X	X	X		X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir. Diagram	Repair Times	Fuses & Relays
AUDI																		
A4 1994 2001																		
2.4 V6 30V	AJG	2393	121	1997	1999	X	X	X	X	X		X	X	X	X		X	X
2.4 V6 30V	ARJ	2393	121	1998	2001	X	X	X	X	X	X	X	X	X	X		X	X
2.4 V6 30V quattro	AGA	2393	121	1997	1998	X	X	X	X	X	X	X	X	X	X		X	X
2.4 V6 30V quattro	APS	2393	121	1998	2001	X	X	X	X	X	X	X	X	X	X		X	X
2.5 V6 TDi	AFB	2496	110	1997	2001	X	X	X	X	X	X	X	X	X	X		X	X
2.5 V6 TDi	AKN	2496	110	1998	2001	X	X	X	X	X	X		X	X	X		X	X
2.5 V6 TDi quattro	AFB	2496	110	1997	2001	X	X	X	X	X		X	X	X	X		X	X
2.6 V6	ABC	2598	110	1994	1998	X	X	X	X	X	X	X	X	X	X	X	X	X
2.6 V6 quattro	ABC	2598	110	1994	1998	X	X	X	X	X	X	X	X	X	X	X	X	X
2.8 V6	AAH	2771	128	1994	1998	X	X	X	X	X	X	X	X	X	X	X	X	X
2.8 V6 30V	ACK	2771	142	1996	1999	X	X	X	X	X	X	X	X	X	X	X	X	X
2.8 V6 30V	ALG	2771	142	1997	1999	X	X	X	X	X	X	X	X	X	X		X	X
2.8 V6 30V	AMX	2771	142	1998	2001	X	X	X	X	X	X		X	X	X		X	X
2.8 V6 30V	APR	2771	142	1998	2000	X	X	X	X	X	X	X	X	X	X		X	X
2.8 V6 30V	AQD	2771	142	1998	2000	X	X	X	X	X	X	X	X	X	X		X	X
2.8 V6 30V	ATX	2771	140	1999	2001	X	X	X	X	X			X	X	X			X
2.8 V6 quattro	AAH	2771	128	1994	1998	X	X	X	X	X	X	X	X	X	X	X	X	X
RS4	ASJ	2671	280	2000	2001	X	X	X	X	X	X			X	X		X	X
RS4	AZR	2671	280	2000	2001	X	X	X	X	X	X			X	X		X	X
S4	APB (empty)	2671	187	1998	1999	X	X	X	X									X
S4	AGB	2671	195	1997	2001	X	X	X	X	X			X	X	X		X	X
A6 1997 2004																		
1.8 20V	AJP	1781	92	1998	2000	X	X	X	X	X	X	X	X	X	X		X	X
1.8 20V	AQE	1781	92	1999	2002	X	X	X	X	X	X		X	X	X	X	X	X
1.8 20V	ARH	1781	92	1999	2002	X	X	X	X	X	X		X	X		X	X	X
1.8 20V Turbo	AEB	1781	110	1997	1999	X	X	X	X	X	X	X	X	X	X		X	X
1.8 20V Turbo	AJL	1781	132	1997	2001	X	X	X	X	X	X		X	X	X	X	X	X
1.8 20V Turbo	ANB	1781	110	1999	2002	X	X	X	X	X	X		X	X	X	X	X	X
1.8 20V Turbo	APU	1781	110	1998	2002	X	X	X	X	X	X		X	X	X	X	X	X
1.8 20V Turbo	AWT	1781	110	2000	2004	X	X	X	X	X	X		X	X	X	X	X	X
1.9 TDi	AFN	1896	81	1997	2002	X	X	X	X	X	X	X	X	X	X	X	X	X
1.9 TDi	AJM	1896	85	2001	2001	X	X	X	X	X	X		X	X	X	X	X	X
1.9 TDi	AVF	1896	96	2001	2004	X	X	X	X	X	X			X	X		X	X
1.9 TDi	AVG	1896	81	1999	2001	X	X	X	X	X	X			X	X		X	X
1.9 TDi	AWX	1896	96	2001	2004	X	X	X	X	X	X			X	X		X	X
2.0 20V	ALT	1984	96	2001	2004	X	X	X	X	X	X				X		X	X
2.4 V6 30V	AGA	2393	121	1997	1999	X	X	X	X	X	X	X	X	X	X		X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
AUDI													
A6 1997 2004													
2.4 V6 30V	AJG	2393	121	1997	1999	X	X	X	X	X	X	X	X
2.4 V6 30V	ALF	2393	121	1997	1999	X	X	X	X	X	X	X	X
2.4 V6 30V	ALW	2393	100	1997	2000	X	X	X	X	X	X	X	X
2.4 V6 30V	AML	2393	121	2000	2002	X	X	X	X	X	X	X	X
2.4 V6 30V	AMM	2393	120	2000	2004	X	X	X	X	X	X	X	X
2.4 V6 30V	APC	2393	115	1998	2001	X	X	X	X	X	X	X	X
2.4 V6 30V	APS	2393	121	1998	2002	X	X	X	X	X	X	X	X
2.4 V6 30V	APZ	2393	121	1998	2002	X	X	X	X	X	X	X	X
2.4 V6 30V	ARJ	2393	121	1998	2002	X	X	X	X	X	X	X	X
2.4 V6 30V	ARN	2392	100	1999	2001	X	X	X	X	X	X	X	X
2.4 V6 30V	ASM	2393	100	2000	2004	X	X	X	X	X	X	X	X
2.4 V6 30V	BDV	2393	125	2001	2004	X	X	X	X	X	X	X	X
2.5 V6 TDi	AFB	2496	110	1997	2001	X	X	X	X	X	X	X	X
2.5 V6 TDi	AKE	2496	132	1999	2003	X	X	X	X	X	X	X	X
2.5 V6 TDi	AKN	2496	110	1998	2002	X	X	X	X	X	X	X	X
2.5 V6 TDi	AYM	2496	114	2001	2004	X	X	X	X	X	X	X	X
2.5 V6 TDi	BAU	2496	132	2003	2004	X	X	X	X	X	X	X	X
2.5 V6 TDi	BCZ	2496	120	2003	2004	X	X	X	X	X	X	X	X
2.5 V6 TDi	BDG	2496	120	2003	2004	X	X	X	X	X	X	X	X
2.5 V6 TDi	BDH	2496	132	2003	2004	X	X	X	X	X	X	X	X
2.5 V6 TDi	BFC	2496	120	2002	2003	X	X	X	X	X	X	X	X
2.5 V6 TDi quattro	AFB (mag weg)	2496	110	1997	2001	X	X	X	X	X	X	X	X
2.7 V6 30V	BES	2671	184	2002	2004	X	X	X	X	X	X	X	X
2.7 V6 30V Biturbo	AJK	2671	169	1998	2004	X	X	X	X	X	X	X	X
2.7 V6 30V Biturbo	ARE	2671	184	2000	2003	X	X	X	X	X	X	X	X
2.7 V6 30V Biturbo	AZA	2671	169	2000	2002	X	X	X	X	X	X	X	X
2.8 V6 30V	ACK	2771	142	1997	1999	X	X	X	X	X	X	X	X
2.8 V6 30V	AGE	2771	132	1997	2002	X	X	X	X	X	X	X	X
2.8 V6 30V	ALG	2771	142	1997	2000	X	X	X	X	X	X	X	X
2.8 V6 30V	AMX	2771	142	2000	2002	X	X	X	X	X	X	X	X
2.8 V6 30V	APR	2771	142	1998	2001	X	X	X	X	X	X	X	X
2.8 V6 30V	AQD	2771	142	1998	2002	X	X	X	X	X	X	X	X
2.8 V6 30V	ATX	2771	140	1999	2001	X	X	X	X	X	X	X	X
3.0 V6 30V	ASN	2976	162	2001	2004	X	X	X	X	X	X	X	X
3.0 V6 30V	BBJ	2976	160	2001	2004	X	X	X	X	X	X	X	X
3.7 V8 40V	AQG	3697	191	1999	2004	X	X	X	X	X	X	X	X
4.2 V8 40V	ARS	4172	220	1999	2002	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
AUDI													
A6 1997 2004													
4.2 V8 40V	ASG	4172	220	2000	2004	X	X	X	X	X	X	X	X
RS6	BCY	4172	331	2002	2004	X	X	X	X	X		X	X
S6	ANK	4172	250	2000	2004	X	X	X	X	X	X	X	X
S6	AQJ	4172	250	1999	2002	X	X	X	X	X	X	X	X
A6 2005													
2.0 TDi	BLB	1968	103	2005		X							X
2.0 TDi	BRE	1968	103	2005		X	X				X		X
2.4 V6	BDW	2393	130	2005		X	X	X	X		X		X
2.7 V6 TDi	BPP	2698	132	2005		X	X			X	X		X
3.0	ASB	2967	171	2005		X							X
3.0	BMZ	2967	165	2005		X							X
3.0 V6	BBJ	2976	160	2005		X	X	X		X	X		X
3.0 V6 not in elswin!	AVK	2976	160	2005		X	X				X		X
3.0 V6 TDi	BMK	2967	165	2005		X	X	X	X		X		X
3.0 V6 TDi	BNG	2967	155	2005		X	X	X	X	X	X		X
3.2 V6 FSi	AUK	3123	188	2005		X	X	X	X		X		X
3.2 V6 FSi USA	BKH	3123	188	2005		X	X	X			X		X
4.2	BNK	4163	246	2005		X	X						X
4.2 V8	BAT	4163	246	2005		X	X	X	X		X		X
A8 1994 2003													
2.5 V6 TDi	AFB	2496	110	1997	2003	X	X	X	X	X	X	X	X
2.5 V6 TDi	AKE	2496	132	1999	2003	X	X	X	X	X	X	X	X
2.5 V6 TDi	AKN	2496	110	1997	2003	X	X	X	X	X	X	X	X
2.8 V6	AAH (kan weg)	2771	128	1994	1997	X		X	X	X		X	
2.8 V6 12V	AAH	2771	128	1994	1997	X	X	X	X	X	X	X	X
2.8 V6 12V	AEJ	2771	120	1995	1996	X	X	X	X	X	X	X	X
2.8 V6 30V	ACK	2771	142	1995	1999	X	X	X	X	X	X	X	X
2.8 V6 30V	ALG	2771	142	1997	1999	X	X	X	X	X	X	X	X
2.8 V6 30V	AMX	2771	142	2000	2003	X	X	X	X	X	X		X
2.8 V6 30V	APR	2771	142	1999	2003	X	X	X	X	X	X	X	X
2.8 V6 30V	AQD	2771	142	1999	2001	X	X	X	X	X	X	X	X
3.3 V8 TDi	AKF	3328	165	2000	2003	X	X	X	X	X	X	X	X
3.7 V8 32V	AEW	3697	169	1995	1999	X	X	X	X	X	X	X	X
3.7 V8 32V	AKJ	3697	169	1997	1999	X	X	X	X	X	X	X	X
3.7 V8 40V	AKC	3697	191	2000	2003	X	X	X	X	X	X		X
3.7 V8 40V	AQG	3697	191	1998	2001	X	X	X	X	X	X	X	X
4.2 V8 32V	AGH	4172	213	1995	1996	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
AUDI													
A8 1994 2003													
4.2 V8 32V	AKG	4172	220	1997	1999	X	X	X	X		X	X	X
4.2 V8 32V	ABZ	4172	220	1994	2000	X	X	X	X	X	X	X	X
4.2 V8 40V	AQF	4172	191	1998	2001	X	X	X	X		X	X	X
4.2 V8 40V	ARU	4172	175	1999	2001	X	X	X	X		X	X	X
4.2 V8 40V	AUW	4172	228	2000	2003	X	X	X	X		X	X	X
4.2 V8 40V	AVN	4172	175	2000	2000	X	X	X	X		X	X	X
6.0 W12	AZC	5998	309	2001	2003	X	X	X	X	X	X	X	X
S8 4.2 V8 32V	AHC	4172	250	1996	1999	X	X	X	X	X	X	X	X
S8 4.2 V8 32V	AKH	4172	250	1997	1999	X	X	X	X	X	X	X	X
S8 4.2 V8 40V	AQH	4172	264	1999	2001	X	X	X	X	X	X	X	X
S8 4.2 V8 40V	AVP	4172	264	2000	2003	X	X	X	X	X	X	X	X
A8 2003													
3.0 V6	ASN	2976	162	2003		X	X	X	X			X	X
3.0 V6	BBJ	2976	160	2004		X	X	X	X			X	X
3.0 V6 TDi	ASB	2967	171	2004		X	X	X	X			X	X
3.0 V6 TDi	BNG	2967	155	2004		X	X	X	X			X	X
3.2 no engine data on elsawin	AUK	3200	188	2005		X		X	X				
3.7 V8	BFL	3697	206	2003		X	X	X	X		X		X
3.7 V8	BJT	3697	208	2003		X	X	X	X		X		X
4.0 V8 TDi	ASE	3936	202	2003		X	X	X	X		X		X
4.2 FSi no engine data on elsawin	BAR	4163	254	2005		X		X	X				
4.2 V8	BFM	4172	246	2003		X	X	X	X		X		X
4.2D no engine data on elsawin	BMC	4134	213	2005		X		X	X				
6.0 W12	BHT	5998	331	2004		X	X	X	X		X		X
Allroad 2000													
2.5 V6 TDi	AKE	2496	132	2000	2003	X	X	X	X		X	X	X
2.5 V6 TDi	BAU	2496	132	2003		X	X	X	X		X	X	X
2.5 V6 TDi	BCZ	2496	120	2004		X	X	X	X		X	X	X
2.5 V6 TDi	BDG	2496	120	2003		X	X	X	X		X	X	X
2.5 V6 TDi	BDH	2496	132	2003		X	X	X	X		X	X	X
2.5 V6 TDi	BFC	2496	120	2002		X	X	X	X		X	X	X
2.7 No eng data in elsawin	APB	2671	187	2000	2003	X							
2.7 No eng data in elsawin	BEL	2671	195	2003		X							
2.7 V6 Biturbo	ARE	2671	184	2000	2002	X	X	X	X		X	X	X
2.7 V6 Biturbo	BES	2671	184	2003		X	X	X	X		X	X	X
4.2 No eng data in elsawin	BAT	4163	246	2002	2002	X							
4.2 V8	BAS	4163	220	2002		X	X	X	X		X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance		Techn. Drawings		Motor Manag.		Wiring Diag.		Service Reset		Repair Times	
						Identification	Adjustment		Lubricants		ABS		Engine	Air Cond.	Wir. Diag.	Fuses & Relays	
AUDI																	
Coupe/Cabriolet 1989 2001																	
Cabriolet 2.0	ABK	1984	85	1991	2001	X	X	X	X	X	X	X	X		X	X	X
Cabriolet 2.3	NG	2309	98	1991	2001	X	X	X	X	X	X	X	X		X	X	X
Cabriolet 2.6 V6	ABC	2598	110	1994	2001	X	X	X	X	X	X	X	X		X	X	X
Cabriolet 2.8 V6	AAH	2771	128	1992	2001	X	X	X	X	X	X	X	X		X	X	X
Coupe 2.0	ABK	1984	85	1991	1996	X	X	X	X	X	X	X	X		X	X	X
Coupe 2.0 16V	ACE	1984	103	1992	1996	X	X	X	X	X	X	X	X		X	X	X
Coupe 2.3	NG	2309	98	1991	1996	X	X	X	X	X	X	X	X		X	X	X
Coupe 2.3 20V	7A	2309	125	1990	1996	X	X	X	X	X	X		X			X	X
Coupe 2.3 20V quattro	7A	2309	125	1989	1991	X	X	X	X	X	X		X			X	X
Coupe 2.6 V6	ABC	2598	110	1992	1996	X	X	X	X	X		X	X		X	X	X
Coupe 2.6 V6 quattro	ABC	2598	110	1992	1996	X	X	X	X	X		X	X		X	X	X
Coupe 2.8 V6	AAH	2771	128	1991	1996	X	X	X	X	X	X	X	X		X	X	X
Coupe S2	3B	2226	162	1990	1996	X	X	X	X	X	X	X	X		X	X	X
Coupe S2	ABY	2226	169	1993	1996	X	X	X	X	X	X	X	X		X	X	X
quattro 1981 1991																	
2.2 20V quattro (162kW)	3B	2226	162	1989						X	X						
TT 1999																	
1.8 20V Turbo	AJQ	1781	132	1999	2002	X	X	X	X	X	X	X	X	X		X	X
1.8 20V Turbo	AMU	1781	165	2000	2002	X	X		X	X				X		X	X
1.8 20V Turbo	APP	1781	132	1999	2002	X	X	X	X	X			X	X		X	X
1.8 20V Turbo	ARY	1781	132	2000		X	X	X	X	X			X	X		X	X
1.8 20V Turbo	AUM	1781	110	2001		X	X	X	X	X			X	X		X	X
1.8 20V Turbo	AUQ	1781	132	2000		X	X	X	X	X			X	X		X	X
1.8 20V Turbo	BAM	1781	165	2001		X	X	X	X	X			X	X		X	X
1.8 20V Turbo	APX	1781	165	1999	2002	X	X	X	X	X	X	X	X	X		X	X
1.8 no engine data on elsawin	ATC	1781	132	1999	2000	X			X								
1.8 no engine data on elsawin	AWP	1781	132	2000		X			X								
1.8 no engine data on elsawin	BEA	1781	165	2003		X			X								
3.2 V6	BHE	3189	184	2003		X	X	X	X	X			X	X		X	X
3.2 V6	BPF	3189	184	2004		X	X	X	X	X			X	X			X
BMW																	
1 E87 2003																	
116i	N45 B16	1596	85	2003		X	X	X	X	X			X	X			X
118d	M47/T2 CHECK					X	X	X	X					X			X
118d	M47TU2oL	1995	90	2003		X	X	X	X	X			X	X			X
118i	NOT YET KNOWN	1995	95			X	X		X					X			X
120d	M47/T2 CHECK					X	X		X					X			X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
BMW													
1 E87 2003													
120d	M47TU2uL	1995	120	2003		X	X	X	X	X	X	X	X
120i	N46 B20	1995	110	2003		X	X	X	X	X	X	X	X
3 E30 1982 1994													
316	M10 B18	1766	66	1982	1987	X	X	X	X	X	X	X	X
316i	M10 B18	1766	77	1987	1989	X	X	X	X	X	X	X	X
316i	M40 B16	1596	73	1988	1990	X	X	X	X	X	X	X	X
316i Cabrio	M40 B16	1596	73	1988	1993	X	X	X	X	X	X	X	X
316i Touring	M40 B16	1596	73	1991	1994	X	X	X	X	X	X	X	X
318i	M10 B18	1766	77	1982	1994	X	X	X	X	X	X	X	X
318i	M40 B18	1796	84	1987	1992	X	X	X	X	X	X	X	X
318i Cabrio	M40 B18	1796	83	1990	1993	X	X	X	X	X	X	X	X
318i Touring	M40 B18	1796	83	1989	1994	X	X	X	X	X	X	X	X
318is	M42 B18	1796	100	1989	1991	X	X	X	X	X	X	X	X
320i	M20 B20	1990	95	1982	1987	X	X	X	X	X	X	X	X
320i	M20 B20	1990	95	1987	1992	X	X	X	X	X	X	X	X
320i Cabrio	M20 B20	1990	95	1986	1993	X	X	X	X	X	X	X	X
320i Touring	M20 B20	1990	95	1988	1991	X	X	X	X	X	X	X	X
320is	S14 B20	1991	141	1988	1991	X	X	X	X	X	X	X	X
323i	M20 B23	2316	110	1982	1987	X	X	X	X	X	X	X	X
324d	M21 D24W	2443	63	1985	1988	X	X	X	X	X	X	X	X
324d	M21 D24W	2443	63	1988	1991	X	X	X	X	X	X	X	X
324td	M21 D24WA	2443	85	1987	1991	X	X	X	X	X	X	X	X
324td Touring	M21 D24WA	2443	85	1988	1993	X	X	X	X	X	X	X	X
325e	M20 B27	2693	95	1984	1988	X	X	X	X	X	X	X	X
325i	M20 B25	2494	126	1983	1992	X	X	X	X	X	X	X	X
325i Cabrio	M20 B25	2494	126	1987	1993	X	X	X	X	X	X	X	X
325i Touring	M20 B25	2494	126	1987	1993	X	X	X	X	X	X	X	X
325iX	M20 B25	2494	126	1985	1991	X	X	X	X	X	X	X	X
325iX Touring	M20 B25	2494	125	1988	1993	X	X	X	X	X	X	X	X
M3	S14 B23	2302	143	1985	1991	X	X	X	X	X	X	X	X
M3 Cabrio	S14 B23	2302	143	1988	1991	X	X	X	X	X	X	X	X
3 E36 1990 1998													
316i	M40 B16	1596	73	1991	1994	X	X	X	X	X	X	X	X
316i	M43 B16	1596	73	1993	2000	X	X	X	X	X	X	X	X
316i	M43TU B19	1895	77	1998	2000	X	X	X	X	X	X	X	X
318i	M40 B18	1796	83	1990	1995	X	X	X	X	X	X	X	X
318i	M43 B18	1796	83	1992	2000	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
BMW													
3 E36 1990 1998													
318is	M42 B18	1796	103	1991	1996	X	X	X	X	X	X	X	X
318is	M44 B19	1895	103	1995	1999	X	X	X	X	X	X	X	X
318tds	M41 D	1665	66	1994	2000	X	X	X	X	X	X	X	X
320i	M50 B20	1990	110	1990	1996	X	X	X	X	X	X	X	X
320i	M52 B20	1990	110	1994	2000	X	X	X	X	X	X	X	X
323i	M52 B25	2494	125	1994	2000	X	X	X	X	X	X	X	X
325i	M50 B25	2494	141	1990	1995	X	X	X	X	X	X	X	X
325i (kan weg)	M50 B25	2494	141	1990	1995	X	X	X	X	X	X	X	X
325td	M51 D25	2498	85	1991	1998	X	X	X	X	X	X	X	X
325tds	M51 D25	2498	105	1993	1999	X	X	X	X	X	X	X	X
328i	M52 B28	2793	142	1994	2000	X	X	X	X	X	X	X	X
M3	S50 B30	2956	210	1992	1999	X	X	X	X	X	X	X	X
M3	S50 B32	3201	236	1994	1999	X	X	X	X	X	X	X	X
M3	S52 B32	3152	176	1996	1999	X	X	X	X	X	X	X	X
3 E46 1998 2005													
316i, Ci	M43TU B19	1895	77	1998	2002	X	X	X	X	X	X	X	X
316i, Ci	N40 B16	1596	77	2001	2004	X	X	X	X	X	X	X	X
316i, Ci	N42 B18	1796	85	2001	2005	X	X	X	X	X	X	X	X
316i, Ci	N45 B16	1596	85	2004	2005	X	X	X	X	X	X	X	X
316ti Compact	N40 B16	1596	77	2001	2004	X	X	X	X	X	X	X	X
316ti Compact	N42 B18	1796	85	2000	2005	X	X	X	X	X	X	X	X
316ti Compact	N45 B16	1596	85	2004	2005	X	X	X	X	X	X	X	X
318d	M47	1951	85	2000	2003	X	X	X	X	X	X	X	X
318d	M47TU	1995	85	2003	2005	X	X	X	X	X	X	X	X
318i	M43TU B19	1895	87	1997	2002	X	X	X	X	X	X	X	X
318i, Ci, Cabrio	N42 B20	1995	105	2000	2005	X	X	X	X	X	X	X	X
318i, Ci, Cabrio	N46 B20	1796	105	2004	2005	X	X	X	X	X	X	X	X
318td Compact	M47TU	1995	85	2002	2005	X	X	X	X	X	X	X	X
318ti Compact	N42 B20	1995	105	2001	2005	X	X	X	X	X	X	X	X
318ti Compact SEDAN TEST	N46 B20	1995	105	2004	2005	X	X	X	X	X	X	X	X
320d	M47	1951	100	1997	2002	X	X	X	X	X	X	X	X
320d, Cd	M47TU	1995	110	2001	2005	X	X	X	X	X	X	X	X
320i, Ci	M52TU B20	1991	110	1997	2001	X	X	X	X	X	X	X	X
320i, Ci, Cabrio	M54 B22	2171	125	2000	2005	X	X	X	X	X	X	X	X
320td Compact	M47TU	1995	110	2000	2005	X	X	X	X	X	X	X	X
323i, Ci, Cabrio	M52TU B25	2494	125	1997	2002	X	X	X	X	X	X	X	X
325i, Ci (USA only?)	M56 B25	2494	141	2002	2005	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
BMW													
3 E46 1998 2005													
325i, Ci, Cabrio	M54 B25	2494	141	2000	2005		X	X	X	X	X	X	X
325ti Compact	M54 B25	2494	141	2000	2005		X	X	X	X	X	X	X
325xi	M54 B25	2494	141	2000	2005		X	X	X	X	X	X	X
328i, Ci	M52TU B28	2793	142	1997	2001		X	X	X	X	X	X	X
330d	M57 D30	2926	135	1999	2003		X	X	X	X	X	X	X
330d, Cd	M57TU	2993	150	2002	2005		X	X	X	X	X	X	X
330i, Ci, Cabrio	M54 B30	2979	170	2000	2005		X	X	X	X	X	X	X
330xd	M57 D30	2926	135	2000	2003		X	X	X	X	X	X	X
330xd	M57TU	2993	150	2003	2005		X	X	X	X	X	X	X
330xi	M54 B30	2979	170	2000	2005		X	X	X	X	X	X	X
compi							X	X	X	X	X	X	X
M3, M3 Cabrio	S54 B32	3246	252	2000			X	X	X	X	X	X	X
3 E90 2005													
316i	N45 B16	1596	85	2006			X	X	X	X	X	X	X
318d	M47T2 D20	1995	90	2006			X	X	X	X	X	X	X
318i	N46 B20	1995	95	2005			X	X	X	X	X	X	X
320d	M47T2 D20	1995	120	2005			X	X	X	X	X	X	X
320i	N46 B20	1995	110	2005			X	X	X	X	X	X	X
320Si	N46??	1997	127	2006	2006		X	X	X	X	X	X	X
325i, xi	N52 B25	2497	160	2005			X	X	X	X	X	X	X
330d, xd	M57T2 D30	2993	170	2005			X	X	X	X	X	X	X
330i, xi	N52 B30	2996	190	2005			X	X	X	X	X	X	X
3 Touring E91 2005													
318d	M47T2 D20	1995	90	2006			X	X	X	X	X	X	X
318i	N46 B20	1995	95	2006			X	X	X	X	X	X	X
320d	M47T2 D20	1995	120	2005			X	X	X	X	X	X	X
320i	N46 B20	1995	110	2005			X	X	X	X	X	X	X
325i, xi	N52 B25	2497	160	2005			X	X	X	X	X	X	X
330d, xd	M57T2 D30	2993	170	2005			X	X	X	X	X	X	X
330i, xi	N52 B30	2996	170	2005			X	X	X	X	X	X	X
5 E34 1988 1995													
518i	M40 B18	1796	83	1989	1994		X	X	X	X	X	X	X
518i	M43 B18	1796	83	1990	1996		X	X	X	X	X	X	X
520i	M20 B20M	1990	95	1987	1992		X	X	X	X	X	X	X
520i 24V	M50 B20	1990	110	1989	1997		X	X	X	X	X	X	X
520i 24V	M50 B20	1991	110	1991	1996		X	X	X	X	X	X	X
524td	M21 D24WA	2443	85	1987	1991		X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
BMW													
5 E34 1988 1995													
525i	M20 B25M	2494	125	1987	1992	X	X	X	X	X	X	X	X
525i 24V	M50 B25	2494	141	1989	1997	X	X	X	X	X	X	X	X
525iX 24V	M50 B25	2494	141	1991	1996	X	X	X	X	X	X	X	X
525td	M51 D25	2498	85	1993	1996	X	X	X	X	X	X	X	X
525tds	M51 D25	2498	105	1990	1996	X	X	X	X	X	X	X	X
530i	M30 B30M	2986	138	1987	1990	X	X	X	X	X	X	X	X
530i V8	M60 B30	2997	160	1992	1997	X	X	X	X	X	X	X	X
535i	M30 B35M	3430	155	1987	1993	X	X	X	X	X	X	X	X
540i	M60 B40	3982	210	1992	1996	X	X	X	X	X	X	X	X
M5 3.6	S38 B36	3535	232	1988	1992	X	X	X	X	X	X	X	X
M5 3.8	S38 B38	3795	250	1992	1995	X	X	X	X	X	X	X	X
5 E39 1995 2003													
520d	M47/20 4 D1	1951	100	1999	2003	X	X	X	X		X	X	X
520i	M52 B20/20 6 S3	1991	110	1996	1999	X	X	X	X	X	X	X	X
520i	M52TU B20/20 6 S4	1991	110	1998	2003	X	X	X	X		X	X	X
520i	M54 B22/22 6 S1	2171	125	2000	2003	X	X	X	X		X	X	X
523i	M52 B25/25 6 S3	2494	125	1996	1999	X	X	X	X	X	X	X	X
523i	M52TU B25/25 6 S4	2494	125	1998	2003	X	X	X	X		X	X	X
525d	M57 D25/25 6 D1	2497	120	1999	2003	X	X	X	X		X	X	X
525i	M54 B25/25 6 S5	2494	141	2000	2003	X	X	X	X		X	X	X
525td, tds	M51 D25/25 6 T1	2499	105	1996	2000	X	X	X	X		X	X	X
528i	M52 B28/28 6 S1	2793	142	1996	2000	X	X	X	X	X	X	X	X
528i	M52TU B28/28 6 S2	2793	142	1998	2001	X	X	X	X		X	X	X
530d	M57 D30/30 6 D1	2926	142	1998	2003	X	X	X	X		X	X	X
530i	M54 B30/30 6 S3	2979	170	2000	2003	X	X	X	X		X	X	X
535i	M62 B35/35 8 S1	3498	173	1997	2003	X	X	X	X	X	X	X	X
540i	M62 B44/44 8 S1	4398	210	1996	2003	X	X	X	X	X	X	X	X
540i	M62TU B44/44 8 S2	4398	210	1998	2003	X	X	X	X		X	X	X
M5	S62 B50/50 8 S1	4941	294	1998	2003	X	X	X	X		X	X	X
5 E60 2002													
520d (110/120 kW)	M47TU2 D20	1995	120	2005		X	X	X	X		X		
520i	M54 B22	2171	125	2002	2006	X	X	X	X		X		X
523i	N52 B25	2497	130	2004		X	X	X	X		X		X
525d	M57TU D25	2497	130	2002		X	X	X	X		X		X
525i	M54 B25	2494	141	2002	2005	X	X	X	X		X		X
525i, xi	N52 B25	2497	160	2004		X	X	X	X		X		X
530d	M57TU D30	2993	160	2002	2006	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
BMW																
5 E60 2002																
530d, xd	M57TU2 D30	2993	170	2005	2005	X	X		X				X			
530i	M54 B30	2979	170	2002		X	X	X	X				X			X
530i, xi	N52 B30	2996	190	2005		X	X		X				X			X
535d	M57TU D30 (TOP)	2993	200	2004		X	X	X	X				X			X
535d (fake??)	M57X CHECK	2993				X	X		X							
540i	N62TU B40	4000	225	2005	2005	X	X		X			X				
545i	N62 B44	4398	245	2002		X	X	X	X			X				X
550i	N62TU B48	4799	270	2005		X	X		X			X				
9988						X		X	X							
M5	S85 B50	4999	373	2003		X	X		X			X				X
5 Touring E61 2003																
520d	M47T2 D20	1995	120	2005	2005	X	X		X			X				
523i	N52 B25	2497	130	2005		X	X		X			X				X
525d	M57TU D25	2497	130	2003		X	X	X	X			X				X
525i	M54 B25	2494	141	2003		X	X	X	X			X				X
525i, xi	N52 B25	2497	160	2005		X	X		X			X				X
530d	M57TU D30	2993	160	2003		X	X	X	X			X				X
530d, xd	M57T2 D30	2993	170	2005		X	X		X			X				
530i, xi	N52 B30	2996	190	2005		X	X		X			X				X
535d	M57TU D30 (TOP)	2993	200	2004		X	X	X	X			X				X
535d	M57X CHECK	2993		2004		X	X		X			X				
545i	N62 B44	4398	245	2003		X	X	X	X			X				X
550i	N62TU B48	4799	270	2005		X	X		X			X				
6 E63 Coupe 2004																
630i	N52 B30	2996	190	2004												X
645i	N62 B44	4398	245	2003												X
6 E64 Cabrio 2004																
630i	N52 B30	2996	190	2004												X
645i	N62 B44	4398	245	2003												X
7 E32 1986 1994																
730i	M30 B30M	2986	145	1986	1994	X	X	X	X	X	X	X	X	X	X	X
730i V8	M60 B30	2997	160	1991	1994	X	X	X	X	X	X	X	X	X	X	X
735i	M30 B35M	3430	162	1986	1993	X	X	X	X	X	X	X	X	X	X	X
740i V8	M60 B40	3982	210	1992	1995	X	X	X	X	X	X	X	X	X	X	X
750i	M70 B50 12A	4988	220	1987	1994	X	X	X	X	X		X	X	X	X	X
7 E38 1994 2001																
725tds	M51 D25	2499	105	1996	2000	X	X	X	X	X		X	X		X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
BMW													
7 E38 1994 2001													
728i	M52 B28	2793	142	1995	1998	X	X	X	X		X	X	X
728i	M52TU B28	2793	142	1998	2001	X	X		X		X		X
730d	M57	2926	142	1998	2001	X	X	X	X		X	X	X
730i	M60/1 B30	2997	160	1994	1996	X	X	X	X		X	X	X
735i	M62 B35	3498	173	1996	2001	X	X	X	X		X	X	X
740d	M67	3901	180	1999	2001	X	X	X	X		X	X	X
740i	M60/2 B40	3982	210	1994	1996	X	X	X	X	X	X	X	X
740i	M62 B44	4398	210	1995	2001	X	X	X	X		X	X	X
750i	M73 B54	5379	240	1994	2001	X	X	X	X		X	X	X
7 E65 2001													
730d	M57TU	2993	160	2002		X	X		X		X		X
730i	M54 B30	2979	170	2002		X	X		X		X		X
735i	N62 B36	3600	200	2000		X	X	X	X		X		X
740d	M67	3901	190	2002		X	X		X		X		X
745i	N62 B44	4398	245	2000		X	X	X	X		X		X
760i	N73 B60	5972	327	2002		X	X		X		X		X
7 L E66 2002													
730Li	M54 B30	2979	170	2002		X	X		X		X		X
735Li	N62 B36	3600	200	2002		X	X		X		X		X
745Li	N62 B44	4398	245	2002		X	X		X		X		X
760Li	N73 B60	5972	327	2002		X	X		X		X		X
8 E31 1989 1999													
840Ci	M60 B40	3982	210	1993	1996	X	X	X		X	X	X	X
840Ci	M62 B44	4398	210	1995	1999	X	X	X			X	X	X
850Ci	M73 B54	5379	240	1994	1999	X	X	X		X	X	X	X
850CSi	S70 B56	5576	280	1992	1997	X	X	X		X	X	X	X
850i	M70 B50M	4988	220	1989	1995	X	X	X		X	X	X	X
X3 E83 2003													
2.0d	M47/T2	1995	110	2004		X	X		X				
2.0d	M47TU2oL	1995	110	2003		X	X	X	X		X	X	
2.5i	M54 B25	2494	141	2003		X	X	X	X		X	X	
3.0d	M57TU D30	2993	150	2003		X	X	X	X		X	X	
3.0i	M54 B30	2979	170	2003		X	X	X	X		X	X	
89						X		X	X				
X5 E53 1999													
3.0d	M57 D30	2926	135	2000	2003	X	X	X	X		X	X	
3.0d	M57TU D30	2993	160	2003		X	X	X	X		X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
BMW													
X5 E53 1999													
3.0i	M54 B30	2979	170	1999		X	X	X	X		X	X	
4.4i	M62 B44	4398	210	1999	2003	X	X	X	X		X	X	
4.4i	N62 B44	4398	245	2003		X	X		X			X	
4.6is	M62 B46	4619	255	2001	2004	X	X	X	X		X	X	
4.8is	N62/S	4799	265	2004		X		X				X	
wa						X		X					
Z1 E30 1988 1991													
2.5	M20 B25	2494	126	1988	1991	X	X	X	X		X	X	
Z3 E36 1995 2003													
1.8	M43 B18	1796	85	1996	1999	X	X	X	X		X	X	X
1.9	M43TU B19	1895	87	1998	2002	X	X		X			X	X
1.9	M44 B19	1895	103	1996	1999	X	X	X	X	X	X	X	X
2.0	M52TU B20	1991	110	1999	2001	X	X		X			X	X
2.2	M54 B22	2171	125	2000	2003	X	X		X			X	X
2.8	M52 B28	2793	141	1997	1999	X	X	X	X		X	X	X
2.8	M52TU B28	2793	142	1999	2001	X	X		X				
3.0	M54 B30	2979	170	2000	2003	X	X		X			X	
M Roadster	S50 B32	3201	236	1997	2000	X	X	X	X		X	X	X
Z4 E85 2002													
2.2i	M54 B22	2171	125	2003		X	X						
2.5i	M54 B25	2494	141	2002		X	X						
3.0i	M54 B30	2979	170	2002		X	X						
BUICK													
Century 1994 1997													
3.1 V6	L82	3135	119	1994	1997			X					
Le Sabre 1992 1999													
3.8 V6	L36	3791	145	1992	1999			X					X
Park Avenue 1996 2005													
3.8 V6	L36	3791	150	1996	2005			X					X
3.8 V6 Supercharger	L67	3791	179	1996	2005			X					X
Regal 1996 2004													
3.8 V6	L36	3791	145	1996	2004			X					X
3.8 V6 Supercharger	L67	3791	179	1997	2004			X					X
Riviera 1995 1999													
3.8 V6 Supercharger	L67	3791	179	1996	1999			X					

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
BUICK																			
Skylark 1991 1999																			
2.4 16V	LD9	2392	112	1995	1999			X											
3.1 V6	L82	3135	117	1994	1999			X											
CADILLAC																			
Catera 1994 2001																			
3.0 V6	L81	2962	149	1994	2001			X											X
Eldorado 1992 2002																			
4.6	L37	4565	224	1995	2002			X											X
4.6	LD 8	4565	224	1992	2002			X											X
Seville 1992 2004																			
4.6	L37	4565	224	1995	2004			X											X
4.6	LD 8	4565	224	1992	2004			X											X
CHEVROLET (DAEWOO)																			
Espero 1995 2000																			
1.5 16V	A15MF	1498	66	1995	2000	X	X	X	X	X				X			X	X	
1.8	C18LE	1796	70	1995	2000	X	X	X	X	X				X			X	X	
2.0	C20LE	1998	77	1995	2000	X	X	X	X	X				X			X	X	
Evanda Magnus 2002 2006																			
2.0 16V	T20SED	1998	96	2002		X	X	X		X				X					X
Kalos Aveo 2002																			
1.2	B12S1	1150	53	2002		X	X	X		X	X			X					X
1.4	F14S3	1399	61	2002		X	X	X		X	X			X					X
1.4 16V	F14D3	1399	69	2002		X	X	X		X	X			X					X
Lacetti 2003																			
1.4 16V	F14D	1399	70	2003		X	X	X		X				X					X
1.6 16V	F16D	1598	80	2003		X	X	X		X				X					X
1.8 16V	T18SED	1799	90	2003		X	X	X		X				X					X
Lanos 1997 2003																			
1.3	A13SMS	1349	55	1997	2003	X	X	X	X	X	X			X			X	X	
1.5	A15SMS	1498	63	1997	2003	X	X	X	X	X	X			X			X	X	
1.6 16V	A16DMS	1598	78	1997	2003	X	X	X	X	X	X			X			X	X	
Leganza 1997 2002																			
2.0 16V	T20SED	1998	93	2001	2002	X			X										
2.0 16V	X20SED	1998	98	1997	2002	X	X	X	X	X	X			X			X	X	
2.2 16V	T22SED	2198	100	1999	2001	X			X										
Matiz 1998 2005																			
0.8	F8CV	796	38	1998	2005	X	X	X	X	X	X			X					X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
CHEVROLET (DAEWOO)													
Matiz 1998 2005													
1.0	B10S1	995	87	2002	2005	X	X	X	X	X	X		X
Matiz 2005													
0.8	F8CV	796	38	2005		X	X	X	X		X		
1.0	B10S1	995	49	2005		X	X	X	X		X		
Nexia Cielo 1995 2001													
1.5	G15MF	1498	55	1995	1998	X	X	X	X		X	X	X
1.5 16V	A15MF	1498	66	1995	1998	X	X	X	X		X	X	X
Nubira 1997 2003													
1.6 16V	A16DMS	1598	76	2001	2003	X	X	X	X		X		
1.6 16V	A16DMS	1598	78	1997	2001	X	X	X	X	X	X	X	X
1.8 16V	C18SED	1799	90	2001	2003	X	X	X	X		X		
2.0	X20NED	1998	82	2001	2003	X	X	X	X		X		
2.0 16V	T20SED	1998	93	2001	2003	X	X	X	X		X		
2.0 16V	X20SED	1998	98	1997	2001	X	X	X	X	X	X	X	X
Nubira 2003													
1.4 16V	F14D	1399	70	2003		X	X	X	X		X		
1.6 16V	F16D	1598	80	2003		X	X	X	X		X		
1.8 16V	T18SED	1799	90	2003		X	X	X	X		X		
Tacuma Rezzo 2000													
1.6 16V	A16DMS	1598	76	2001		X	X		X		X		
1.8	F18N	1761	72	2000	2002	X	X	X	X		X		X
2.0 16V	C20SED	1998	94	2000		X	X	X	X	X	X		X
2.0 16V	T20SED	1998	89	2002		X		X					
CHEVROLET (USA)													
Camaro 1995 2002													
3.8 V6	L36	3791	149	1995	2002			X					X
5.7 V8	LS1	5665	227	1998	2002			X					X
Caprice Impala 1990 1996													
V8 4.3	L 99	4321	149	1990	1996	X		X			X		X
V8 5.7	LT 1	5733	194	1990	1996	X		X			X		X
Cavalier 1994 2005													
2.2	LN2-4	2196	90	1994	2002			X					X
2.2 16V	L61	2189	104	2002	2005								
2.4 16V	LD9	2392	112	1996	2002			X					
Corvette 1997 2004													
5.7 V8	LS1	5665	254	1997	2004			X					

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
CHEVROLET (USA)																			
Lumina 1994 2001																			
3.8 V6	L36	3791	149	1994	2001			X											X
Malibu 1996 2003																			
2.4 16V	LD9	2392	112	1996	2003			X											X
3.1 V6	L82	3146	112	1996	2003			X											X
Venture Trans Sport 1996 2005																			
3.4 V6	LA1	3350	134	1996	2005			X											X
CHRYSLER																			
300M 1998 2004																			
2.7 V6 24V	EER	2736	150	1998		X	X	X		X				X					X
3.5 V6 24V	EGG (ECG)	3518	185	1998		X	X	X		X				X					X
Concorde 1993																			
3.3i V6	T/V6-201	3294	120	1993				X											
Crossfire 2004																			
3.2 V6 18V	EGX	3199	160	2004		X	X												
Neon 1993																			
2.0 16V	Inj. S4RE	1996	98	1994															
2.0i 16V DOHC		1995	108	1993				X											
2.0i 16V SOHC	420H	1995	98	1993				X											
Neon 2000 2003																			
1.6 16V	1.6L SOHC				2004	X													
2.0 16V		1996	112		2004	X													
2.0 16V	2.0L SOHC	1996	98	1999	2004	X	X	X		X				X					X
2.4 16V Turbo					2004	X													
PT Cruiser 2001																			
1.6 16V	EJD	1598	85	2001		X	X	X	X	X									
2.0 16V	ECC	1995	100	2001	2004	X	X	X	X	X				X					
2.2 16V CRD	EDJ	2148	89	2002		X	X	X	X	X									
2.4 16V	EDZ	2429	105	2001		X	X	X	X	X				X					
2.4 16V GT Turbo	EDV	2429	164	2003		X	X	X	X	X									
Stratus 1995 2001																			
2.0 16V	2.0 DOHC	1996	104	2000	2001	X	X	X		X				X					
2.0 16V	ECB	1996	96	1995	2001	X	X	X		X				X					
2.4 16V	EDZ	2425	112	1995	2001	X	X	X		X				X					
2.5 V6 24V	EEB	2495	118	1995	2001	X	X	X		X				X					
Vision 1993 1997																			
3.5 V6 24V	T/V6-215	3523	157	1993	1997	X	X	X											X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
CHRYSLER																			
Voyager 1989 1996																			
2.5 i	EDM	2501	71	1989	1995	X	X	X	X	X				X					X
2.5 TD	VM TI	2499	87	1991	1995	X	X		X										X
3.0 i	EFA	2972	103	1989	1995	X	X	X	X	X	X			X					X
3.3 i V6	EGA	3301	110	1990	1995	X	X	X	X	X				X					X
3.8 i V6	EGA	3778	121	1989	1995	X	X	X	X	X				X					X
Voyager 1995 2001																			
2.0	ECB	1996	98	1997	2001	X	X	X	X	X				X				X	X
2.4	EDZ	2429	111	1995	2001	X	X	X	X	X				X				X	X
2.5 TD	ECN	2500	85	1995	2001	X	X	X	X	X				X				X	X
3.0	EFA	2972	112	1995	2001	X	X	X	X	X				X				X	X
3.3	EGA	3301	116	1995	2001	X	X	X	X	X				X				X	X
3.8	EGH	3778	122	1995	2001	X	X	X	X	X				X				X	X
Voyager 2001																			
2.4	EDZ	2425	118	2001		X	X	X		X									
2.5 CRD	ENJ	2499	105	2001		X	X	X		X									
3.3	EGA	3294	134	2001		X	X	X		X									
3.8	EGH	3785	160	2001		X													
CITROEN																			
AX 1987 1996																			
1.0	TU9 (C1A/C3A)	954	30	1987	1989	X	X	X	X	X			X	X			X	X	
1.0i	TU9M (CDY)	954	33	1993	1996	X	X	X	X	X				X				X	X
1.0i	TU9M/Z (CDZ)	954	37	1991	1996	X	X	X	X	X	X		X	X			X	X	X
1.1	TU1 (H1A/H1B)	1124	40	1987	1989	X	X	X	X	X			X	X			X	X	
1.1i	TU1M (HDZ/HDY)	1124	44	1991	1991	X	X	X	X	X	X		X	X			X	X	X
1.1i	TU1M (HDZ/HDY)	1124	44	1991	1996	X	X	X	X	X	X		X	X			X	X	X
1.3 Sport	TU (M4A)	1294	69	1987	1991	X	X	X	X	X			X	X			X	X	X
1.4	TU3A/K (K1G)	1360	50	1988	1989	X	X	X	X	X			X	X			X	X	
1.4	TU3A/N (K1A/K1B)	1360	47	1987	1989	X	X	X	X	X			X	X			X	X	
1.4	TU3M (K2A)	1360	61	1988	1989	X	X	X	X	X				X				X	
1.4 4X4	TU3.2 (K2D)	1360	55	1991	1994	X	X		X										
1.4 D	TUD3 (K9A/K9Y)	1360	38	1991	1996	X	X	X	X	X			X	X			X	X	X
1.4 D	TUD3 (K9A)	1360	38	1988	1991	X	X	X	X	X			X	X			X	X	X
1.4 GTi	TU3J2 (KFZ)	1360	69	1991	1996	X	X	X	X	X	X		X	X			X	X	X
1.4 GTi	TU3J2/K (K6B)	1360	69	1990	1991	X	X	X	X	X	X		X	X			X	X	X
1.4i	TU3FM (KDY)	1360	55	1989	1991	X	X	X	X	X	X		X	X			X	X	X
1.4i	TU3FMC (KDX)	1360	55	1991	1996	X	X	X	X	X	X		X	X			X	X	X
1.4i 4x4	TU3FM (KDY)	1360	55	1991	1996	X	X	X	X	X	X			X				X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
CITROEN																			
AX 1987 1996																			
1.5 D	TUD5 (VJZ/VJY)	1527	42	1994	1996	X	X	X	X	X			X	X		X	X	X	
Berlingo 1996																			
1.1i	TU1JP/L4 (HFX)	1124	44	2001		X	X	X	X	X	X			X	X		X	X	
1.1i	TU1M+ (HDY)	1124	44	1996	2002	X	X	X	X	X			X	X	X		X	X	
1.1i	TU1M+ (HDZ)	1124	44	1996	2002	X	X	X	X	X	X	X	X	X	X		X	X	
1.4	TU3.2K (K2D)	1360	51	1997		X	X		X						X			X	
1.4	TU3.2K (K5A)	1360	51	1996	2002	X	X	X	X	X			X	X	X			X	
1.4i	TU3JP (KFX)	1360	55	1996	2000	X	X	X	X	X	X	X	X	X	X	X	X	X	
1.4i	TU3JP/L4 (KFW)	1360	55	2000		X	X	X	X	X	X			X	X		X	X	
1.6i 16V	TU5JP4 (NFU)	1587	80	2002		X	X	X	X	X	X			X	X		X	X	
1.6i 16V 4x4	TU5JP4 (NFU)	1587	80	2003		X	X		X						X			X	
1.8 D	XUD7 (A9A)	1769	43	1996	2000	X	X	X	X	X			X	X	X	X	X	X	
1.8i	XU7JB (LFX)	1761	66	1998	2002	X	X	X	X	X	X	X	X	X	X		X	X	
1.9 D	DW8 (WJZ)	1868	51	1999	2002	X	X	X	X	X				X	X		X	X	
1.9 D	DW8B (WJY)	1868	51	2000		X	X	X	X	X				X	X		X	X	
1.9 D	XUD9A (D9B)	1905	51	1996	2000	X	X	X	X	X			X	X	X	X	X	X	
1.9 D	XUD9Y (DJY)	1905	50	1996	2000	X	X	X	X	X			X	X	X	X	X	X	
1.9 D 4x4	DW8B (WJY)	1868	51	2003		X	X		X						X			X	
2.0 HDi	DW10TD (RHY)	1997	66	1999		X	X	X	X	X	X			X	X		X	X	
2.0 HDi 4x4	DW10TD (RHY)	1997	62	2003		X	X		X						X			X	
BX 1982 1994																			
11	TU1	1124	46	1988	1993	X	X		X	X									
11	XB	1124	45	1982	1988	X	X		X	X									
14	150A	1360	45	1982	1988	X	X	X	X	X				X			X		
14	150C/150F/150J	1360	52	1982	1988	X	X	X	X	X				X			X		
14	TU3A (K1G)	1360	47	1988	1990	X	X	X	X	X				X			X	X	
14i	TU3M (KDY)	1360	55	1992	1993	X	X	X	X	X	X			X			X	X	
14i	TU3M (KDZ)	1360	55	1988	1989	X	X	X	X	X	X	X		X			X	X	
15 / 16	B9A/B1A/A	1580	58	1988	1989	X	X	X	X	X				X			X	X	
16	171A/171B/C/Z	1580	66	1982	1988	X	X	X	X	X				X			X		
16	XU52C (B2C)	1580	69	1989	1994	X	X	X	X	X				X			X	X	
16i	180Z/XU5J	1580	76	1986	1989	X	X	X	X	X	X			X			X	X	
16i	XU5M (BDY)	1580	65	1989	1994	X	X	X	X	X	X	X		X			X	X	
16i	XU5M (BDY)	1580	65	1989	1994	X	X		X	X		X						X	
16i	XU5M (BDZ)	1580	65	1989	1994	X	X	X	X	X	X			X				X	
17 D	161A/ XU7D	1769	44	1985	1994	X	X	X	X	X				X			X		
17 Turbo D	XU7DTE (A8A)	1769	66	1988	1994	X	X	X	X	X				X			X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
CITROEN																			
BX 1982 1994																			
19	159A	1905	75	1984	1988	X	X	X	X	X				X					
19	XU92C (D2A)	1905	75	1986	1989	X	X	X	X	X				X				X	
19	XU92CW (D2C)	1905	0	1988	1989	X	X	X	X	X				X					
19 4x4	XU92C (D2E)	1905	78	1986	1994	X	X	X	X	X				X				X	
19 D	XU9DA (DJZ)	1905	47	1990	1994	X	X	X	X	X				X				X	
19 D	XUD9 (162)	1905	47	1983	1989	X	X	X	X	X				X				X	
19 D	XUD9A (D9B)	1905	51	1990	1994	X	X	X	X	X				X				X	
19 GTi	XU9J2 (D6A)	1905	90	1986	1989	X	X	X	X	X	X			X				X	
19 GTi	XU9JAZ (DKZ)	1905	88	1988	1994	X	X	X	X	X	X	X		X				X	
19 GTi 16V	XU9J4 (D6C)	1905	118	1990	1994	X	X	X	X	X	X	X		X				X	
19 GTi 16V	XU9J4 (D6C)	1905	118	1987	1989	X	X	X	X	X	X	X		X				X	
19 GTi 16V	XU9J4 (DFW)	1905	108	1986	1994	X	X	X	X	X	X	X		X				X	
19 Sport	159 B (D6A)	1905	90	1985	1986	X	X		X	X				X					
19i	XU9J1 (DFZ)	1905	76	1986	1989	X	X	X	X	X	X			X				X	
19i	XU9M (DDZ)	1905	80	1990	1991	X	X	X	X	X	X	X		X				X	
19i 4x4	XU9J1 (DFZ)	1905	75	1986	1989	X	X	X	X	X	X			X				X	
19i 4x4	XU9J2 (D6D)	1905	89	1990	1994	X	X	X	X	X	X	X		X				X	
19i 4x4	XU9M (DDZ)	1905	80	1990	1994	X	X	X	X	X	X	X		X				X	
C1 2005																			
1.0 12V	384F (CFA)	998	50	2005		X	X	X		X									X
1.4 HDi	DV4TD (8HT)	1398	40	2005		X	X	X		X				X					X
9						X		X											
C15																			
1.1	H1A TU1	1124	40	1988	1990	X		X											
C2 2003																			
1.1 8V	TU1JP (HFX)	1124	44	2003		X	X	X		X				X	X				X
1.4 8V	TU3JP (KfV)	1360	54	2003		X	X	X		X				X	X				X
1.4 HDi 8V	DV4TD (8HX)	1398	50	2003		X	X	X		X				X	X				X
1.6 16V	TU5JP4 (NFU)	1587	80	2003		X	X	X		X				X	X				X
99	99					X		X											
C25 1981 1994																			
1000 1.8	XM7T/169B	1796	50	1981	1994	X	X	X	X										
1000 1.9 D	XUD/D9B	1905	51	1990	1994	X	X	X	X										
1000 2.5 D	CRD93L/U25/661	2500	54	1981	1994	X	X	X	X										
1300 2.0	XN1T/170B	1971	56	1981	1994	X	X	X	X										
1300 2.5 D	CRD93L/U25/661	2500	54	1984	1994	X	X	X	X										
1400 2.0	XN1T/170B	1971	56	1981	1994	X	X	X	X										

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
CITROEN													
C25 1981 1994													
1400 1.9 D	XUD/D9B	1905	51	1990	1994	X	X	X	X				
1400 2.5 Turbo D	CRD93LS/U25/673	2500	70	1987	1994	X	X	X	X				
1400 4x4 2.5 D	CRD93/L/U25/661	2500	54	1989	1994	X	X	X	X				
1400 4x4 2.5 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X				
1500 2.0	XN1T/170B	1971	56	1981	1994	X	X	X	X				
1500 2.5 D	CRD93L/U25/661	2500	54	1981	1994	X	X	X	X				
1800 2.0	XN1TA/170C	1971	62	1989	1994	X	X	X	X				
1800 2.5 D	CRD93L/U25/661	2500	54	1989	1994	X	X	X	X				
1800 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X				
Combi 2.5 D	CRD93L/U25/661	2500	54	1982	1994	X	X	X	X				
Combi 1.8	XM7T/169B	1796	50	1982	1994	X	X	X	X				
Combi 1.9 D	XUD/D9B	1905	51	1990	1994	X	X	X	X				
Combi 2.0	XN1T/170B	1971	56	1982	1994	X	X	X	X				
Combi 2.5 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X				
Combi 4x4 2.5 D	CRD93L/U25/661	2500	54	1989	1994	X	X	X	X				
Combi 4x4 2.5 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X				
C3 2002													
1.1 8V	TU1JP (HFX)	1124	44	2002		X	X	X	X	X	X		X
1.4 16V	ET3J4 (KFU)	1361	65	2004		X	X				X		X
1.4 8V	TU3JP (KFV)	1360	54	2002		X	X	X	X	X	X		X
1.4 HDi	DV4TD (8HW)			2002		X	X				X		X
1.4 HDi 16V	DV4TED4 (8HV)			2002		X	X	X			X		X
1.4 HDi 16V	DV4TED4 (8HY)	1398	66	2002		X	X	X	X	X	X		X
1.4 HDi 8V	DV4TD (8HX)	1398	50	2002		X	X	X	X	X	X		X
1.6 16V	TU5JP4 (NFU)	1587	80	2002		X	X	X	X	X	X		X
C4 2005													
1.4 16V	ET3J4/E4 (KFU)	1360	65	2005		X	X	X	X		X		X
1.6 16V	TU5JP4/E4 (NFU)	1587	80	2005		X	X	X	X		X		X
1.6 HDi 16V 110	DV6TED4/E3 (9HY)	1560	80	2005		X	X	X	X		X		X
1.6 HDi 16V 110 FAP	DV6TED4/E4 (9HZ)	1560	80	2005		X	X	X	X		X		X
1.6 HDi 16V 90 FAP	DV6ATED4/E4 (9HX)	1560	66	2005		X	X	X	X		X		X
2.0 16V	EW10A/E4 (RFJ)	1997	103	2005		X	X	X	X		X		X
2.0 16V	EW10J4/E4 (RFN)	1997	99	2005		X	X	X	X		X		X
2.0 16V 180 VTS	EW10J4S/E4 (RFK)	1997	130	2005		X	X	X	X		X		X
2.0 HDi 16V 138 FAP	DW10BTED4/E4 (RHR)	1997	100	2005		X	X	X	X		X		X
wa						X		X	X				X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
CITROEN													
C5 2001													
1.6 HDi 16V FAP	DV6TED4 (9HZ)	1560	80	2005		X	X	X	X		X		X
1.8 16V	EW7J4 (6FZ)	1749	85	2001	2005	X	X	X	X	X	X		X
1.8 16V	EW7J4/E4 (6FZ)	1749	85	2005		X	X	X	X		X		X
2.0 16V	EW10A/E4 (RFJ)	1997	103	2005		X	X	X	X		X		X
2.0 16V	EW10J4 (RFN)	1997	99	2001	2005	X	X	X	X	X	X		X
2.0 16V HPI	EW10D (RLZ)	1998	103	2001	2005	X	X	X	X	X	X		X
2.0 HDi 16V FAP	DW10BTED4 (RHR)	1997	100	2005		X	X	X	X		X		X
2.0 HDi 8V	DW10ATED (RHZ)	1997	80	2001	2005	X	X	X	X	X	X		X
2.0 HDi 8V	DW10TD (RHY)	1997	66	2001	2005	X	X	X	X	X	X		X
2.0 HDi 8V 110 FAP	DW10ATED (RHS)	1997	79	2002	2005	X	X	X	X		X		X
2.2 HDi 16V (FAP)	DW12TED4 (4HX)	2179	100	2001	2005	X	X	X	X	X	X		X
2.2 HDi 16V FAP	DW12TED4 (4HX)	2179	98	2005		X	X	X	X		X		X
2.9 24V V6	ES9J4S (XFV)	2946	155	2005		X	X	X	X		X		X
2.9 24V V6	ES9J4S (XFX)	2946	152	2001	2005	X	X	X	X	X	X		X
C8 2002													
2.0 16V	EW10J4 (RFN)	1997	100	2002		X	X	X	X	X	X		X
2.0 HDi 16V	DW10ATED4 (RHT)	1997	79	2002		X	X	X	X	X	X		X
2.0 HDi 16V	DW10ATED4 (RHW)	1997	81	2003		X	X		X	X	X		X
2.2 16V	EW12J4 (3FZ)	2231	116	2002		X	X	X	X	X	X		X
2.2 HDi 16V	DW12ATED4 (4HW)	2179	94	2002		X	X	X	X	X	X		X
2.9 V6 24V	ES9J4S (XFW)	2946	150	2002		X	X	X	X	X	X		X
2.9 V6 24V	ES9JS (XFX)	2946	152			X	X		X	X	X		X
CX 1985 1992													
2.0	829 /J6R	1995	78	1979	1983	X			X				
2.0	829 /J6R	1995	78	1985	1989	X			X				
2.0	829A	1995	77	1989	1992	X	X	X	X			X	
2.2	J6T /A500	2165	85	1985	1990	X	X	X	X	X		X	
2.4 2400 GTi	M23 /622	2347	96	1977	1984	X			X				
2.4 2400 Super	M23 /623	2347	85	1976	1980	X			X				
2.5 GTi	M25	2500	89	1989	1992	X	X		X	X			
2.5 GTi Turbo	M25 /662/666	2500	122	1985	1992	X	X	X	X			X	
2.5 TGI	M25	2500	89	1989	1992	X	X	X	X	X		X	
2.5 TRD TURBO	M25/671	2500	83	1989	1992	X	X		X				
2.5 TRD TURBO 2	M25/669	2482	88	1987	1989	X	X	X	X			X	
2.5D	M25/629	2482	55	1978	1983	X		X	X				
2.5D	M25/629/660	2482	55	1984	1992	X	X	X	X				
2.5D	M25/648	2500	70	1983	1987	X	X	X	X				

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
CITROEN													
Evasion Synergie 1994 2002													
1.8 8V	XU7JP (LFW)	1761	72	1997	1999	X	X	X	X		X	X	X
1.8 8V	XU7JP/Z (LFZ)	1761	74	1998	2002	X	X	X	X		X	X	X
1.9 TD	XUD9TE (DHY)	1905		1998	1999	X	X					X	X
1.9 Turbo D	XUD9BTF (DHX)	1905	66	1999	2001	X	X	X	X		X	X	X
1.9 Turbo D	XUD9TF (D8B)	1905	67	1994	1998	X	X	X	X		X	X	X
2.0 16V	EW10J4 (RFN)	1998	100	2001	2002	X	X	X	X				X
2.0 16V	XU10J4R (RFV)	1998	97	1998	2002	X	X	X	X	X			X
2.0 8V	XU10J2C (RFU)	1998	89	1994	2002	X	X	X	X	X	X	X	X
2.0 8V Turbo CT	XU10J2TE (RGX)	1998	108	1994	2002	X	X	X	X	X	X	X	X
2.0 HDi 16V	DW10ATED4/L3 (RHW)	1997	81	2001	2002	X	X	X	X		X	X	X
2.0 HDi 8V	DW10ATED (RHZ)	1997	80	1999	2001	X	X	X	X		X	X	X
2.1 TD 12V	XUD11BTE (P8C)	2088	80	1996	1999	X	X	X	X		X	X	X
test	99					X		X					
Jumper Relay 1994 2002													
1000/10Q/27/270 1.9 D	XUD9AU (D9B)	1905	51	1994	2001	X	X	X	X		X	X	X
1000/10Q/27/270 1.9 Turbo D	XUD9UTF (D8C)	1905	67	1994	2001	X	X	X	X		X	X	X
1000/10Q/27/270 1.9 Turbo D	XUD9UTF (DHX)	1905	67	1994	2001	X	X	X	X		X	X	X
1000/10Q/27/270 2.0i	XU10J2U (RFW)	1998	80	1994	2001	X	X	X	X	X	X	X	X
1000/10Q/27/270 2.0i	XU10J2U (RFW) not used	1998	80	1995	1997	X	X	X	X	X	X	X	X
10Q/27/270 1.9 D	XUD9AU (DJY)	1905	50	1997	2002	X	X	X	X		X	X	X
10Q/27/270 2.0i 4x4	XU10J2U (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X	X
10Q/27/270 2.0i 4x4	XU10J2U/X3 (RFW) NOT	1998	80	1994	2001	X	X	X	X	X	X	X	X
10Q/27/270 2.5 Turbo D 4x4	DJ5T (T8A)	2445	76	1994	1998	X	X	X	X		X	X	X
10Q/27/270 2.8 D	8140.63 (SOFIM)	2798	64	2000	2002	X	X	X	X		X	X	X
10Q/27/270 2.8 HDi	8140.43S (SOFIM)	2798	94	2001	2002	X	X	X	X		X	X	X
10Q/27/270 2.8 TDi	8940.43 (SOFIM)	2798	90	2000	2001	X	X	X	X		X	X	X
1400/14Q/31/310 1.9 D	XUD9AU (D9B)	1905	51	1994	2001	X	X	X	X		X	X	X
1400/14Q/31/310 1.9 Turbo D	XUD9UTF (D8C)	1905	67	1994	2001	X	X	X	X		X	X	X
1400/14Q/31/310 1.9 Turbo D	XUD9UTF (DHX)	1905	67	1994	2001	X	X	X	X		X	X	X
1400/14Q/31/310 2.0i	XU10J2U (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X	X
1400/14Q/31/310 2.0i	XU10J2U/X3 (RFW) NOT US	1998	80	1994	2001	X	X	X	X	X	X	X	X
1400/14Q/31/310 2.5 D	DJ5 (T9A)	2445	63	1994	2001	X	X	X	X		X	X	X
1400/14Q/31/310 2.5 TDi	DJ5TED (THX)	2445	79	1997	2001	X	X	X	X		X	X	X
1400/14Q/31/310 2.5 Turbo D	DJ5T (T8A)	2445	76	1994	1998	X	X	X	X		X	X	X
1400/14Q/31/310 2.5 Turbo D	DJ5T (THZ)	2445	76	1994	1998	X	X	X	X		X	X	X
14Q/31/310 1.9 D	XUD9AU (DJY)	1905	50	1997	2002	X	X	X	X		X	X	X
14Q/31/310 2.0i 4x4	XU10J2U (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
						Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
CITROEN												
Jumper Relay 1994 2002												
14Q/31/310 2.0i 4x4	XU10J2U/X3 (RFW) NOT	1998	80	1994	2001	X	X	X	X			X
14Q/31/310 2.5 D 4x4	DJ5 (T9A)	2445	63	1994	2001	X	X	X	X		X	X
14Q/31/310 2.5 TDi 4x4	DJ5TED (THX) NOT	2445	79	1997	2001	X	X	X	X			X
14Q/31/310 2.5 Turbo D 4x4	DJ5T (T8A)	2445	76	1994	1998	X	X	X	X		X	X
14Q/31/310 2.8 D	8140.63 (SOFIM)	2798	64	2000	2002	X	X	X	X	X		X
14Q/31/310 2.8 HDi	8140.43S (SOFIM)	2798	94	2001	2002	X	X	X	X	X	X	X
14Q/31/310 2.8 TDi	8940.43 (SOFIM)	2798	90	2000	2001	X	X	X	X	X		X
1800/18Q/35/350 2.0i	XU10J2U (RFW)	1998	80	1995	1997	X	X	X	X	X		X
1800/18Q/35/350 2.0i	XU10J2U/X3 (RFW) NOT US	1998	80	1994	2001	X	X	X	X	X		X
1800/18Q/35/350 2.5 D	DJ5 (T9A)	2445	63	1994	2001	X	X	X	X	X	X	X
1800/18Q/35/350 2.5 TDi	DJ5TED (THX)	2445	79	1997	2001	X	X	X	X	X	X	X
1800/18Q/35/350 2.5 Turbo D	DJ5T (T8A)	2445	76	1994	1998	X	X	X	X	X	X	X
1800/18Q/35/350 2.5 Turbo D	DJ5T (THZ)	2445	76	1994	1998	X	X	X	X	X	X	X
18Q/35/350 2.0i 4x4	XU10J2U (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X
18Q/35/350 2.0i 4x4	XU10J2U/X3 (RFW) NOT	1998	80	1994	2001	X	X	X	X	X		X
18Q/35/350 2.5 D 4x4	DJ5 (T9A)	2445	63	1994	2001	X	X	X	X	X	X	X
18Q/35/350 2.5 TDi 4x4	DJ5TED (THX) NOT	2445	79	1997	2001	X	X	X	X	X		X
18Q/35/350 2.5 Turbo D 4x4	DJ5T (T8A)	2445	76	1994	2001	X	X	X	X	X	X	X
18Q/35/350 2.8 D	8140.63 (SOFIM)	2798	64	2000	2002	X	X	X	X	X		X
18Q/35/350 2.8 HDi	8140.43S (SOFIM)	2798	94	2001	2002	X	X	X	X	X	X	X
18Q/35/350 2.8 TDi	8940.43 (SOFIM)	2798	90	2000	2001	X	X	X	X	X		X
GB/BR/BELTS/HEAD						X		X				
Jumpy Dispatch 1995												
1.6	220A.2000	1581	58	1995	2001	X	X	X	X	X	X	X
1.9 D	DW8 (WJZ)	1868	51	1999		X	X	X	X	X		X
1.9 D	DW8B/D (WJY)	1868	51	2002		X	X	X	X	X		X
1.9 D	XUD9A (D9B)	1905	51	1995	2000	X	X	X	X	X	X	X
1.9 Turbo D	XUD9BTF (DHX)	1905	68	1997		X	X	X	X	X	X	X
1.9 Turbo D	XUD9TFL (D8B)	1905	68	1995	1999	X	X	X	X	X	X	X
2.0 16V	EW10J4 (RFN)	1997	100	2001		X	X	X	X	X		X
2.0 HDi	DW10ATED (RHZ)	1997	80	2001		X	X	X	X	X		X
2.0 HDi	DW10BTED (RHX)	1997	69	2001		X	X	X	X	X		X
2.0 HDi 16V	DW10ATED4 (RHW)	1997	80	2001		X	X	X	X	X		X
m						X		X				
Picasso 1999												
1.6	TU5JP/L4 (NFV)	1587	70	2001		X	X	X	X	X	X	X
1.6	TU5JP+/L3 (NFZ)	1587	66	1999	2001	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
CITROEN													
Picasso 1999													
1.6 HDi 16V	DV6TED4 (9HY)	1560	80	2004		X	X	X	X		X	X	X
1.6 HDi 16V	DV6TED4 (9HZ)	1560	80	2004		X	X		X		X	X	X
1.8 16V	EW7J4 (6FZ)	1749	85	1999		X	X	X	X	X	X	X	X
2.0 16V	EW10J4/L4 (RFN)	1997	100	2001		X	X	X	X	X	X		X
2.0 HDi	DW10TD (RHY)	1997	66	1999		X	X	X	X	X	X	X	X
Saxo 1996 2005													
1.0i	TU9M (CDY)	954	33	1996	2001	X	X	X	X	X	X	X	X
1.0i	TU9M (CDZ)	954	37	1996	2001	X	X	X	X	X	X	X	X
1.1i	TU1JP/L4 (HFX)	1124	44	2001	2005	X	X	X	X		X	X	X
1.1i	TU1M+ (HDY)	1124	40	1996	2001	X	X	X	X	X	X	X	X
1.1i	TU1M+ (HDZ)	1124	44	1996	2001	X	X	X	X	X	X	X	X
1.1i LPG	TU1M+ (HDZ)	1124	43	1999	2001	X	X	X	X		X		X
1.4i	TU3JP (KFX)	1360	55	1996	2002	X	X	X	X	X	X	X	X
1.4i	TU3JP/L4 (KFW)	1360	55	2001	2005	X	X	X	X		X		X
1.4i GNV	TU3JP (KFW)	1360	47	2002	2005	X		X	X		X		X
1.5 D	TUD5 (VJY)	1527	40	2001	2002	X	X	X	X	X	X	X	X
1.5 D	TUD5 (VJZ)	1527	42	1996	2002	X	X	X	X	X	X	X	X
1.5 D	TUD5B (VJX)	1527	42	2001	2005	X	X	X	X		X		X
1.6i	TU5JP (NFZ)	1587	65	1996	2001	X	X	X	X	X	X	X	X
1.6i 16V VTS	TU5J4 (NFX)	1587	87	1996	2005	X	X	X	X	X	X	X	X
1.6i VTR	TU5JP (NFZ)	1587	65	1996	2001	X	X	X	X	X	X		X
1.6i VTR	TU5JP+L4 (NFT)	1587	74	2002	2005	X	X	X	X		X		X
plugloc						X		X					X
Xantia 1993 2001													
1.6i	XU5JP (BFZ)	1580	65	1993	2001	X	X	X	X		X	X	X
1.8i	XU7JB (LFX)	1761	66	1998	2001	X	X	X	X	X	X		X
1.8i	XU7JP (L6A)	1761	74	1995	1998	X	X	X	X	X	X	X	X
1.8i	XU7JP (LFZ)	1761	74	1993	1998	X	X	X	X	X	X	X	X
1.8i 16V	XU7JP4 (LFY)	1761	81	1996	2001	X	X	X	X	X	X	X	X
1.9 D	XUD9A (D9B)	1905	51	1993	1997	X	X	X	X	X	X	X	X
1.9 D	XUD9Y (DJY) ?	1905	50	1995	1996	X	X	X	X		X		X
1.9 D	XUD9Y (DJZ)	1905	47	1994	1996	X	X	X	X	X	X	X	X
1.9 Turbo D	XUD9BTF (DHX)	1905	66	1997	2001	X	X	X	X	X	X	X	X
1.9 Turbo D	XUD9SD (DHW)	1905	55	1998	2000	X	X	X	X	X	X		X
1.9 Turbo D	XUD9TE (DHY)	1905	66	1993	1998	X	X	X	X		X		X
1.9 Turbo D	XUD9TF (D8B)	1905	68	1993	1997	X	X	X	X	X	X	X	X
2.0 HDi	DW10ATED (RHZ)	1997	80	1999	2001	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
CITROEN													
Xantia 1993 2001													
2.0 HDi	DW10TD (RHY)	1997	66	1999	2001	X	X	X	X	X	X	X	X
2.0i	XU10J2C (RFX)	1998	89	1993	1998	X	X	X	X	X	X	X	X
2.0i 16V	XU10J4 (RFT)	1998	110	1993	1997	X	X	X	X		X	X	X
2.0i 16V	XU10J4D (RFY)	1998	112	1993	1995	X	X	X	X	X	X	X	X
2.0i 16V	XU10J4R (RFV)	1998	97	1996	2001	X	X	X	X	X	X	X	X
2.0i Turbo CT	XU10J2TE (RGX)	1998	108	1995	1998	X	X	X	X	X	X	X	X
2.1 Turbo D	XUD11BTE (P8C)	2088	80	1995	1999	X	X	X	X	X	X	X	X
3.0i V6 24V	ES9J4 (XFZ)	2946	140	1998	2001	X	X	X	X	X	X	X	X
XM 1989 2001													
2.0	XU102C (R2A)	1998	84	1989	1994	X	X	X	X		X	X	X
2.0 HDi	DW10ATED (RHZ)	1997	80	2000	2001	X	X		X				
2.0 HDi 16V	DW10ATED4 (RHW)	1997	80	2000	2001	X	X		X				
2.0 Turbo CT	XU109J2TE (RGY)	1998	104	1992	1995	X	X	X	X				X
2.0 Turbo CT	XU10J2 (RGA)	1998	107	1993	1994	X	X	X	X		X	X	X
2.0 Turbo CT	XU10J2TE (RGX)	1998	108	1995	2001	X	X	X	X	X	X	X	X
2.0i	XU10J2 (R6A)	1998	94	1989	1994	X	X	X	X	X	X	X	X
2.0i	XU10J2 (RFZ)	1998	79	1992	1995	X	X	X	X	X	X	X	X
2.0i	XU10M (RDZ)	1998	81	1989	1994	X	X	X	X	X	X	X	X
2.0i ?	XU10M	1998	79	1989	1994	X	X		X				X
2.0i 16V	XU10J4R (RFV)	1998	97	1995	2001	X	X	X	X	X	X	X	X
2.1 D	XUD11 (PJZ)	2138	60	1993	1996	X	X	X	X		X		X
2.1 D	XUD11A (P9A)	2138	60	1989	1994	X	X	X	X	X	X	X	X
2.1 Turbo D	XUD11ATE (P8A)	2088	81	1989	1994	X	X	X	X	X	X	X	X
2.1 Turbo D	XUD11ATE (P8B)	2088	81	1995	1998	X	X	X	X	X	X		X
2.5 Turbo D	DK5 ATE (THY)	2446	95	1995	2000	X	X	X	X	X	X	X	X
3.0i 24V	ES9J4 (XFZ)	2946	140	1998	2001	X	X	X	X	X	X		X
3.0i V6	ZPJ (SFZ)	2975	123	1989	1994	X	X	X	X	X	X	X	X
3.0i V6	ZPJ (UFZ)	2963	123	1993	1998	X	X	X	X	X	X		X
3.0i V6 24V	ZPJ4 (SFZ)	2975	147	1989	1994	X	X	X	X	X	X	X	X
3.0i V6 24V	ZPJ4 (UKZ)	2963	147	1993	1998	X	X	X	X	X	X		X
Xsara 1997 2004													
1.4	TU3JP (KFW)	1360	55	2000	2004	X	X	X	X		X	X	X
1.4	TU3JP (KFX)	1360	55	1997	2000	X	X	X	X	X	X	X	X
1.4 HDi	DV4TD (8HZ)	1398	50	2003	2004	X	X	X	X		X		X
1.5 D	TUD5 (VJY)	1527	40	1999	2000	X	X	X	X		X	X	X
1.5 D	TUD5 (VJZ)	1527	42	1997	2000	X	X	X	X		X	X	X
1.6	TU5JP (NFZ)	1587	65	1997	2000	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
CITROEN													
Xsara 1997 2004													
1.6 16V	TU5JP4 (NFU)	1587	80	2000	2004	X	X	X	X	X	X	X	X
1.8	XU7JB (LFX)	1761	66	1997	2000	X	X	X	X	X	X	X	X
1.8	XU7JP (LFZ)	1761	74	1997	2000	X	X	X	X	X	X	X	X
1.8 16V	XU7JP4 (LFY)	1761	81	1997	2000	X	X	X	X	X	X	X	X
1.8 D	XUD7/L3 (A9A)	1769	43	1998	1999	X	X	X	X	X	X	X	X
1.9 D	DW8 (WJY)	1868	51	2000	2003	X	X	X	X	X	X	X	X
1.9 D	DW8 (WJZ)	1868	51	1999	2000	X	X	X	X	X	X	X	X
1.9 D	XUD9A (DJY)	1905	50	1997	2000	X	X	X	X	X	X	X	X
1.9 SD	XUD9BSD (DHV)	1905	55	1997	2000	X	X	X	X	X	X	X	X
1.9 TD	XUD9TE (DHY)	1905	66	1997	2000	X	X	X	X	X	X	X	X
2.0 16V	EW10J4 (RFN)	1998	100	2001	2004	X	X	X	X	X	X	X	X
2.0 16V	XU10J4R (RFV)	1998	97	1999	2000	X	X	X	X	X	X	X	X
2.0 16V	XU10J4RS (RFS)	1998	120	2000	2002	X	X	X	X	X	X	X	X
2.0 16V	XU10J4RS (RFS)	1998	120	1998	2000	X	X	X	X	X	X	X	X
2.0 HDi	DW10ATED (RHZ)	1997	80	2002	2004	X	X	X	X	X	X	X	X
2.0 HDi	DW10TD (RHY)	1997	66	1999	2000	X	X	X	X	X	X	X	X
wa brakes2	III					X	X	X	X	X	X	X	X
Xsara Coupe 1997 2004													
1.4	TU3JP (KFW)	1360	55	2000	2004	X	X	X	X	X	X	X	X
1.4	TU3JP (KFX)	1360	55	1997	2000	X	X	X	X	X	X	X	X
1.4 HDi	DV4TD (8HZ)	1398	50	2003	2004	X	X	X	X	X	X	X	X
1.6	TU5JP (NFZ)	1587	65	1997	2000	X	X	X	X	X	X	X	X
1.6 16V	TU5JP4 (NFU)	1587	80	2001	2004	X	X	X	X	X	X	X	X
1.8	XU7JB (LFX)	1761	66	1997	2000	X	X	X	X	X	X	X	X
1.8	XU7JP (LFZ)	1761	74	1997	2000	X	X	X	X	X	X	X	X
1.8 16V	XU7JP4 (LFY)	1761	81	1997	2000	X	X	X	X	X	X	X	X
1.8 D	XUD7/L3 (A9A)	1769	43	1997	1998	X	X	X	X	X	X	X	X
1.9 D	DW8 (WJZ)	1868	51	1999	2000	X	X	X	X	X	X	X	X
1.9 D	DW8B (WJY)	1868	51	2000	2003	X	X	X	X	X	X	X	X
1.9 D	XUD9A (DJY)	1905	50	1997	2000	X	X	X	X	X	X	X	X
1.9 SD	XUD9BSD (DHV)	1905	55	1997	2000	X	X	X	X	X	X	X	X
1.9 TD	XUD9TE (DHY)	1905	66	1997	2000	X	X	X	X	X	X	X	X
2.0 16V	EW10J4 (RFN)	1998	100	2001	2004	X	X	X	X	X	X	X	X
2.0 16V	XU10J4RS (RFS)	1998	120	1997	2000	X	X	X	X	X	X	X	X
2.0 16V	XU10J4RS (RFS)	1998	120	2000	2002	X	X	X	X	X	X	X	X
2.0 HDi	DW10TD (RHY)	1997	80	1999	2000	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	
						Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
CITROEN												
ZX 1991 1998												
1.1	TU1/K (H1A)	1124	44	1991	1995	X	X	X	X		X	X
1.1i	TU1M+ (HDZ)	1124	44	1992	1998	X	X		X	X		X
1.4	TU3-2K (K2D)	1360	55	1992	1995	X	X	X	X		X	X
1.4i	TU3JP (KFX)	1360	75	1997	1998	X	X	X	X			X
1.4i	TU3M (KDX)	1360	55	1992	1997	X	X	X	X	X	X	X
1.4i	TU3M/Z (KDY)	1360	55	1992	1995	X	X	X	X	X	X	X
1.6i	XU5JP (BFZ)	1580	65	1993	1998	X	X	X	X			X
1.6i	XU5M (B4A)	1580	65	1991	1995	X	X	X	X	X	X	X
1.6i	XU5M (BDY)	1580	65	1992	1995	X	X	X	X	X	X	X
1.8 D	XUD7 (A9A)	1769	44	1993	1998	X	X	X	X			X
1.8i	XU7JP (LFZ)	1761	74	1993	1998	X	X	X	X	X	X	X
1.8i 16V	XU7JP4 (LFY)	1761	81	1997	1998	X	X					X
1.9 D	XUD9 (D9B)	1905	51	1992	1996	X	X	X	X		X	X
1.9 D	XUD9/A/Y (D7B)	1905	47	1992	1994	X	X	X	X		X	X
1.9 D	XUD9A (DJY)	1905	50	1997	1998	X	X	X	X			X
1.9 TD	XUD9TE (D8A)	1905	67	1992	1997	X	X	X	X		X	X
1.9 TD	XUD9TE (DHY)	1905	67	1997	1998	X	X	X	X		X	X
1.9i	XU9/JAK (D6E)	1905	94	1991	1994	X	X	X	X	X	X	X
1.9i	XU9/JAZ (DKZ)	1905	88	1992	1994	X	X	X	X	X	X	X
2.0i	XU10J2C (RFX)	1998	89	1992	1997	X	X	X	X	X	X	X
2.0i 16V	XU10J4 (RFY)	1998	112	1992	1995	X	X	X	X	X	X	X
2.0i 16V	XU10J4D (RFT)	1998	110	1994	1996	X	X	X	X	X	X	X
2.0i 16V	XU10J4RS (RFS)	1998	120	1997	1998	X	X	X	X	X		
DACIA												
Logan 2005												
1.4 MPi	K7J-710	1390	55	2005		X	X	X		X		
1.5 dCi	K9K-790	1461	48	2006		X	X	X		X		
1.5 dCi	K9K-792	1461	50	2006		X	X	X		X		
1.6 MPi	K7M-710	1598	64	2005		X	X	X		X		
DAIHATSU												
Applause 1989 2001												
1.6	HD-C	1589	67	1989	1992	X	X	X	X	X		X
1.6i	HD-E	1589	77	1989	2001	X	X	X	X	X		X
1.6i	HD-E	1590	73	1998	2001	X			X			
1.6i 4X4	HD-E	1589	77	1989	2001	X	X	X	X	X		X
Charade 1983 1987												
1.0	CB 22	993	38	1983	1987	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagr.	Repair Times	Fuses & Relays
DAIHATSU																			
Charade 1983 1987																			
1.0 D	CL 10	993	27	1983	1987	X	X	X		X				X				X	
1.0 TD	CL 50/60	993	34	1985	1987	X	X	X		X				X				X	
1.0 TX Turbo	CB 50	993	50	1983	1987	X	X	X		X								X	
Charade 1987 1993																			
1.0	CB 20	993	37	1977	1983	X	X		X	X									
1.0	CB 23/36	993	38	1987	1993	X	X	X	X	X				X				X	X
1.0 D	CL 11	993	27	1987	1993	X	X	X	X	X				X				X	X
1.0 GTi	CB 80	993	74	1987	1993	X	X	X	X	X				X				X	X
1.0 TD	CL 50/61	993	35	1987	1993	X	X	X	X	X				X				X	X
1.0 Turbo	CB61	993	50	1987	1993	X	X	X	X	X				X				X	X
1.3 16V	HC-C	1295	56	1988	1993	X	X	X	X	X				X				X	X
1.3 4-WD 16V	HC	1295	66	1989	1993	X	X	X	X	X				X				X	X
1.3i 16V	HC-E	1295	66	1989	1993	X	X	X	X	X				X				X	X
1.3i Sedan	HC-E	1295	66	1992	1993	X	X		X	X									X
Charade 1993 2001																			
1.0	CB-C	993	38	1993	2001	X	X	X	X	X				X					X
1.3i 16V	HC-E	1296	62	1993	2001	X	X	X	X	X				X					X
1.5i 16V	HE-E	1499	66	1996	2001	X	X	X	X	X				X			X	X	
1.6i 16V	HD-E	1589	77	1993	2001	X	X	X	X	X				X			X	X	
Cuore Mira 1985 1990																			
550, Wide Domino	L-55	AB 30	547	20	1979	1985	X												
600, E,DL Domino	L-60	AD 10	617	22	1980	1985	X												
850, 44 Domino	ED 10	846	32	1985	1990	X	X	X		X				X			X		
Cuore Mira 1990 1995																			
850, Domino	ED 10	847	30	1990	1995	X	X	X	X	X				X			X		
Cuore Mira 1995 1998																			
850	ED 10	847	30	1995	1998	X	X	X	X	X				X			X	X	
850i	ED 20	847	32	1995	1998	X	X	X	X	X				X			X	X	
Cuore Max Charade 2005																			
1.0 DVVT	EJ-DE	959	41	2005		X		X	X	X									
1.0 DVVT	EJ-VE	989	43	2005		X		X	X	X									
Feroza Sportrak 1988 2000																			
1.6	HD-C	1589	63	1988	1991	X	X	X	X	X				X					X
1.6i	HD-E	1589	70	1988	1991	X	X	X	X	X				X					X
1.6i	HD-E	1589	70	1991	2000	X	X	X	X	X				X					X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagn.	Repair Times	Fuses & Relays
DAIHATSU																			
Gran Move 1997 2003																			
1.5	HE-EG	1499	66	1997	2003	X	X	X	X	X				X					X
HiJet 1998																			
1.3 16V	HC-ES	1296	48	1998		X	X	X	X	X				X					
Move 1997 2003																			
850	ED	847	37	1997	2003	X	X	X		X							X	X	
Rocky Fourtrak 1985 2001																			
2.0	3Y	1998	65	1985	1989	X	X	X	X	X				X			X		
2.0i	3 Y-E	1998	67	1988	1993	X	X		X	X									
2.2	4Y	2237	65	1992	1993	X	X	X	X	X				X			X		
2.2i		2237	67			X	X		X	X									
2.8 D	DL40	2765	54	1984	1988	X	X	X	X	X				X			X		
2.8 D	DL42	2765	54	1987	1993	X	X	X	X	X				X			X		
2.8 D	DL42	2765	54	1993	2003	X	X	X	X	X				X			X	X	
2.8 TD	DL42	2765	67	1987	1993	X	X	X	X	X				X			X		
2.8 TD	DL50	2765	65	1984	1987	X	X	X	X	X				X			X		
2.8 TD	DL52	2765	75	1987	1993	X	X	X	X	X				X			X		
2.8 TD	DL52	2765	75	1993	2001	X	X	X	X	X				X			X	X	
2.8 TDI		2765	75	1991	1993	X	X		X	X									
Sirion 1998 2005																			
1.0 12V	EJ-DE	989	41	1998	2005	X	X	X	X	X				X					X
1.0 12V	EJ-VE	989	43	2000	2005	X			X					X					
1.3 16V	K3	1298	75	2000	2005	X			X										
Sirion 2005																			
1.0	1KR-FE	998	51	2005		X	X	X	X	X									
1.3	K3-VE	1298	64	2005		X	X	X	X	X									
Terios 1997 2006																			
1.3 16V	HC-EJ	1296	61	1997	2000	X	X	X											X
1.3 16V	K3-VE	1298	63	2000	2006	X													
Valera 1995 2001																			
1.5i 16V	HE-E	1499	66	1996	2001	X	X	X	X	X				X					
YRV 2000																			
1.0	EJ-VE	989	43	2000		X	X	X		X									
1.3	K3-VE	1298	64	2000		X	X			X									
1.3 T	K3-VET	1298	95	2000		X	X			X									

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
DODGE																			
Intrepid 1992 1997																			
3.3i V6	T/V6-201	3294	120	1992	1997			X											
3.5i V6 24V	T/V6-215	3523	157	1992	1997			X											
Neon 1993																			
2.0i 16V DOHC		1995	108	1993				X											
2.0i 16V SOHC	420H	1995	98	1993				X											
Stealth 1990																			
3.0	S/V6-181	2966	121	1990				X											
3.0 24V	B/V6-181	2966	165	1990				X											
3.0 24V Turbo	C/V6-181	2966	238	1994				X											
Stratus 1995																			
2.0	sohc	1996	96	1995				X											
2.4 16V	dohc	2425	112	1995				X											
2.5 V6	H 00	2495	118	1995				X											
EAGLE																			
Talon 1994																			
2.0i 16V	E/4-122	1997	104	1994				X											
2.0i 16V Turbo	F/4-122	1997	157	1994				X											
Vision 1993																			
3.3i V6	T/V6-201	3294	120	1993				X											
3.5i V6 24V	T/V6-215	3523	157	1993				X											
FIAT																			
Barchetta 1995 2005																			
1.8 16V	183 A1.000	1747	96	1995	2000	X	X	X	X	X	X		X	X				X	
1.8 16V	188 A6.000	1747	96	2000	2005	X	X	X	X	X				X					
Brava 1995 2001																			
1.2 16V	182 B2.000	1242	60	1998	2000	X	X	X	X	X	X	X		X			X	X	
1.2 16V	188 A5.000	1242	59	2000	2001	X	X	X	X	X				X					
1.4 12V	182 A3.000	1370	59	1995	1998	X	X	X	X	X	X	X	X	X			X	X	
1.4 12V	182 A5.000	1370	55	1995	1998	X	X	X	X	X			X	X				X	
1.6 16V	182 A4.000	1581	74	1995	2000	X	X	X	X	X	X	X	X	X			X	X	
1.6 16V	182 A6.000	1581	66	1995	1998	X	X	X	X	X			X	X				X	
1.6 16V	182 B6.000	1596	74	2000	2001	X	X	X	X	X				X					
1.8 16V	182 A2.000	1747	83	1995	2000	X	X	X	X	X	X	X	X	X			X	X	
1.9 D	160 A7.000	1929	48	1995	1998	X	X	X	X	X				X				X	
1.9 JTD 100	182 B9.000	1910	74	2000	2001	X	X	X	X	X				X				X	
1.9 JTD 105	182 B4.000	1910	77	1998	2000	X	X	X	X	X	X			X			X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
FIAT													
Brava 1995 2001													
1.9 TD 100	182 A7.000	1910	74	1996	1999	X	X	X	X	X	X	X	X
1.9 TD 75	182 A8.000	1910	55	1995	2000	X	X	X	X	X	X	X	X
Bravo 1995 2001													
1.2 16V	182 B2.000	1242	60	1998	2000	X	X	X	X	X	X	X	X
1.2 16V	188 A5.000	1242	59	2000	2001	X	X	X	X	X	X	X	X
1.4 12V	182 A3.000	1370	59	1995	1998	X	X	X	X	X	X	X	X
1.4 12V	182 A5.000	1370	55	1995	1998	X	X	X	X	X	X	X	X
1.6 16V	178 A8.011	1581	74	1998	1998	X	X	X	X	X	X	X	X
1.6 16V	182 A4.000	1581	76	1995	2000	X	X	X	X	X	X	X	X
1.6 16V	182 A6.000	1581	66	1995	1998	X	X	X	X	X	X	X	X
1.6 16V	182 B6.000	1596	76	2000	2001	X	X	X	X	X	X	X	X
1.8 16V	182 A2.000	1747	83	1995	2000	X	X	X	X	X	X	X	X
1.9 D	160 A7.000	1929	48	1995	1998	X	X	X	X	X	X	X	X
1.9 JTD 100	182 B9.000	1910	74	2000	2001	X	X	X	X	X	X	X	X
1.9 JTD 105	182 B4.000	1910	77	1998	2000	X	X	X	X	X	X	X	X
1.9 TD 100	182 A7.000	1910	74	1996	1999	X	X	X	X	X	X	X	X
1.9 TD 75	182 A8.000	1910	55	1995	2000	X	X	X	X	X	X	X	X
2.0 20V HGT	182 A1.000	1998	108	1995	1998	X	X	X	X	X	X	X	X
2.0 20V HGT	182 B7.000	1998	113	1998	2000	X	X	X	X	X	X	X	X
Cinquecento 1992 1998													
1100 ie	176 B2.000	1108	40	1994	1998	X	X	X	X	X	X	X	X
700	170 A.046	704	22	1992	1998	X	X	X	X	X	X	X	X
900	170 A1.000	903	30	1992	1995	X	X	X	X	X	X	X	X
900 ie	1170 A1.046	899	29	1995	1998	X	X	X	X	X	X	X	X
900 ie	170 A1.046	903	29	1992	1995	X	X	X	X	X	X	X	X
Coupe 1994 2002													
1.8 16V	183 A1.000	1747	96	1996	2002	X	X	X	X	X	X	X	X
2.0 16V	836 A3.000	1995	102	1993	1996	X	X	X	X	X	X	X	X
2.0 16V (Obsolete)	160 A8.046	1995	104	1993	1996	X	X	X	X	X	X	X	X
2.0 16V Turbo	175 A1.000	1995	140	1993	1996	X	X	X	X	X	X	X	X
2.0 20V	182 A1.000	1998	108	1996	1998	X	X	X	X	X	X	X	X
2.0 20V	182 B3.000	1998	113	1998	2002	X	X	X	X	X	X	X	X
2.0 20V Turbo	175 A3.000	1998	162	1996	2002	X	X	X	X	X	X	X	X
Croma 1985 1995													
1.6	154 A.048	1585	61	1985	1991	X	X	X	X	X	X	X	X
2.0 CHT	154 A.1000	1995	66	1986	1990	X	X	X	X	X	X	X	X
2.0 CHT	154 C5.000	1995	72	1991	1993	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
FIAT													
Croma 1985 1995													
2.0 ie	154 C3.000	1995	86	1991	1995	X	X	X	X	X	X	X	X
2.0 ie	834 B.000	1995	88	1985	1991	X	X	X	X	X	X	X	X
2.0 ie	834 B.146	1995	88	1991	1995	X	X	X	X	X			X
2.0 ie 16V	154 E1.000	1995	101	1993	1995	X	X	X	X	X	X	X	
2.0 ie kat	154 C3.046	1995	85	1991	1995	X	X	X	X	X	X	X	X
2.0 TD id	154 C6.000	1929	68	1989	1992	X	X	X	X	X			X
2.0 TD id	154 D1.000	1929	68	1992	1995	X	X	X	X	X			X
2.0 Turbo ie	154 A2.000	1995	114	1985	1991	X	X	X	X	X	X	X	X
2.0 Turbo ie	154 C4.000	1995	114	1991	1995	X	X	X	X	X	X	X	X
2.0 Turbo ie	834 C.146	1995	110	1986	1991	X	X	X	X	X	X	X	X
2.0 Turbo ie kat.	154 C4.046	1995	110	1991	1995	X	X	X	X	X	X	X	
2.4 TD	8144.91	2445	74	1985	1989	X	X	X	X	X	X	X	
2.5 D	8144.67	2499	55	1985	1990	X	X	X	X	X	X	X	X
2.5 TD	8144.97	2499	85	1991	1995	X	X	X	X				X
2.5 V6	834 G.000	2492	117	1993	1995	X	X	X	X	X	X	X	
Croma 2005													
1.8 16V						X							
1.9 JTD 16V	939 A2.000	1910	110	2005		X	X	X	X		X		
1.9 JTD 8V	939 A1.000	1910	88	2005		X	X	X	X		X		
2.2 16V	194 A1.000	2198	108	2005		X	X	X	X		X		
2.4 JTD 20V	939 A3.000	2387	147	2005		X	X	X	X		X		
Doblo 2001													
1.2 8V	223 A5.000	1242	48	2001	2005	X	X	X	X	X	X		X
1.3 JTD	188 A9.000	1248	51	2001	2005	X	X	X	X	X	X		X
1.3 Multijet 75	199 A2.000	1248	55	2005		X		X					
1.3 Multijet 85	223 A9.000	1248	62	2005		X		X					
1.4 8V	350 A1.000	1368	57	2005		X		X			X		
1.6 16V	182 B6.000	1596	76	2002		X	X	X	X	X	X		X
1.6 16V Bipower	182 B6.000	1596	68	2002		X	X	X	X	X	X		
1.9 D	223 A6.000	1910	46	2001	2003	X	X	X	X	X	X		X
1.9 JTD	182 B9.000	1910	74	2001	2003	X	X	X	X	X	X		X
1.9 JTD	223 A7.000	1910	77	2003	2005	X	X	X	X	X	X		X
1.9 Multijet 100	223 B2.000	1910	74	2005		X		X					
1.9 Multijet 8V 105	223 B1.000	1910	77	2005		X		X					
1.9 Multijet 8V 120	186 A9.000	1910	88	2005		X		X					
Doblo Cargo 2001													
1.2 8V	223 A5.000	1242	48	2001	2005	X	X	X	X	X	X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir.	Diagr.	Repair Times	Fuses & Relays
FIAT																			
Doblo Cargo 2001																			
1.3 JTD	188 A9.000	1248	51	2001	2005	X	X	X	X	X	X	X		X					X
1.3 Multijet 75	199 A2.000	1248	55	2005		X			X										
1.4 8V	350 A1.000	1368	57	2005		X			X										
1.6 16V	182 B6.000	1596	76	2002		X	X	X	X	X	X	X		X					X
1.6 16V Bipower	182 B6.000	1596	68	2002		X	X	X	X	X				X					
1.9 D	223 A6.000	1910	46	2001	2003	X	X	X	X	X	X	X		X					X
1.9 JTD	182 B9.000	1910	74	2001	2003	X	X	X	X	X	X	X		X					X
1.9 JTD	223 A7.000	1910	77	2003	2005	X	X	X	X	X	X	X		X					X
1.9 Multijet 100	223 B2.000	1910	74	2005		X			X										
1.9 Multijet 8V 105	223 B1.000	1910	77	2005		X			X										
Ducato 1989 1994																			
10 1.9 D	149 A1.000	1929	51	1989	1994	X	X	X	X	X								X	X
10 1.9 Turbo D	280 A1.000	1929	60	1989	1994	X	X	X	X	X								X	X
10 2.0 (XN1T)	170 B	2000	55	1989	1994	X	X	X	X	X				X				X	X
10 2.0 (XN1TACP)	170 D	2000	62	1989	1994	X	X	X	X	X				X				X	X
10 2.5 D	8144.67	2500	55	1989	1994	X	X	X	X	X								X	X
10 2.5 Turbo D	8140.27	2500	70	1989	1994	X	X	X	X	X								X	X
14 1.9 Turbo D	280 A1.000	1929	60	1989	1994	X	X	X	X	X								X	X
14 2.0 (XN1T)	170 B	2000	55	1989	1994	X	X	X	X	X				X				X	X
14 2.0 (XN1TACP)	170 D	2000	62	1989	1994	X	X	X	X	X				X				X	X
14 2.5 D	8144.67	2500	55	1989	1994	X	X	X	X	X								X	X
14 2.5 Turbo D	8140.27	2500	70	1989	1994	X	X	X	X	X								X	X
4x4 2.5 D	8144.67	2500	55	1989	1994	X	X	X	X	X								X	X
4x4 2.5 Turbo D	8140.27	2500	70	1989	1994	X	X	X	X	X								X	X
Maxi 2.0 (XN1TA)	170 C	2000	63	1989	1994	X	X	X	X	X				X				X	X
Maxi 2.0 (XN1TACP)	170 D	2000	62	1989	1994	X	X	X	X	X				X				X	X
Maxi 2.5 D	8144.67	2500	55	1989	1994	X	X	X	X	X								X	X
Maxi 2.5 Turbo D	8140.27	2500	70	1989	1994	X	X	X	X	X								X	X
Ducato 2002																			
2.0 16V	XU10J2U (RFL)	1998	81	2002		X	X	X	X	X	X	X		X	X				X
2.0 16V Bipower	XU10J2U (RFL)	1998	71	2003		X	X	X	X	X				X	X				
2.0 16V G-power	XU10J2U (RFL)	1998	81	2003		X	X	X	X	X				X	X				
2.0 JTD	DW10UTED (RHV)	1997	62	2002		X	X	X	X	X	X	X		X	X				X
2.3 JTD	FIAEO481C	2286	81	2002		X	X	X	X	X	X	X		X	X				X
2.8 JTD	8140.43S	2800	94	2002		X	X	X	X	X	X	X		X	X				X
2.8 JTD Power	8140.43N	2800	107	2004		X	X	X	X	X				X	X				

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
FIAT																			
Ducato 1994 2002																			
10 1.9 D	DJY	1905	50	1998	2002	X	X		X				X			X	X	X	
10 1.9 TD	DHX	1905	66	1998	2002	X	X		X				X			X	X	X	
10 2.0 DS	230 A2.000	1929	51	1994	1998	X	X	X	X	X			X			X	X	X	
10 2.0 ie	RFW	1998	80	1994	2002	X	X	X	X	X			X			X	X	X	
10 2.0 TDS	230 A3.000	1929	60	1994	1998	X	X	X	X	X			X			X	X	X	
10 2.0 TDS E	230 A4.000	1929	59	1994	1998	X	X	X	X	X			X			X	X	X	
10 2.5 TDS	8140.47	2500	85	1994	1998	X	X	X	X	X			X			X	X	X	
10 2.5 TDS E	8140.47R	2500	80	1994	1998	X	X	X	X	X			X			X	X	X	
10 2.8 D	8140.63	2800	64	1998	2002	X	X	X	X	X							X	X	
10 2.8 JTD	8140.43S	2800	94	2000	2002	X	X	X	X	X								X	
10 2.8 TD id	8140.43	2800	90	1998	2000	X	X	X	X	X							X	X	
14 1.9 D	DJY	1905	50	1998	2002	X	X		X								X	X	
14 1.9 TD	DHX	1905	66	1998	2002	X	X		X				X			X	X	X	
14 2.0 ie	RFW	1998	80	1994	2002	X	X	X	X	X			X			X	X	X	
14 2.0 TDS	230 A3.000	1929	60	1994	1998	X	X	X	X	X			X			X	X	X	
14 2.0 TDS E	230 A4.000	1929	59	1994	1998	X	X	X	X	X			X			X	X	X	
14 2.5 DS	8140.67	2500	62	1994	1998	X	X	X	X	X			X			X	X	X	
14 2.5 TDS	8140.47	2500	85	1994	1998	X	X	X	X	X			X			X	X	X	
14 2.5 TDS E	8140.47R	2500	80	1994	1998	X	X	X	X	X			X			X	X	X	
14 2.8 D	8140.63	2800	64	1998	2002	X	X	X	X	X							X	X	
14 2.8 JTD	8140.43S	2800	94	2000	2002	X	X	X	X	X								X	
14 2.8 TD id	8140.43	2800	90	1998	2000	X	X	X	X	X							X	X	
Maxi 2.0 ie	RFW	1998	80	1994	2002	X	X	X	X	X			X			X	X	X	
Maxi 2.0 TDS E	230 A4.000	1929	59	1994	1998	X	X	X	X	X							X	X	
Maxi 2.5 DS	8140.67	2500	62	1994	1998	X	X	X	X	X			X			X	X	X	
Maxi 2.5 TDS	8140.47	2500	85	1994	1998	X	X	X	X	X			X			X	X	X	
Maxi 2.5 TDS E	8140.47R	2500	80	1994	1998	X	X	X	X	X			X			X	X	X	
Maxi 2.8 D	8140.63	2800	64	1998	2002	X	X	X	X	X							X	X	
Maxi 2.8 JTD	8140.43S	2800	94	2000	2002	X	X	X	X	X								X	
Maxi 2.8 TD id	8140.43	2800	90	1998	2000	X	X	X	X	X							X	X	
Grande Punto 2006																			
1.2	199 A4.000	1242	48	2006		X	X	X	X	X				X					
1.3 Multijet 75	199 A2.000	1248	55	2006		X	X	X	X	X				X					
1.3 Multijet 90	199 A3.000	1248	66	2006		X	X	X	X	X				X					
1.4	350 A1.000	1368	57	2006		X	X	X	X	X				X					
1.4 16V	199 A6.000	1368	70	2006		X	X	X	X	X				X					
1.9 Multijet	939 A1.000	1910	88	2006		X	X	X	X	X				X					

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
FIAT													
Grande Punto 2006													
1.9 Multijet Sport	199 A5.000	1910	96	2006		X	X	X	X	X	X		
Idea 2004													
1.2 16V	188 A5.000	1242	59	2004		X	X	X	X	X	X		
1.3 Multijet 70	188 A9.000	1248	51	2004		X	X	X	X	X	X		
1.3 Multijet 90	199 A3.000	1248	66	2005		X	X	X	X		X		
1.4 16V	843 A1.000	1368	70	2004		X	X	X	X	X	X		
1.4 8V	350 A1.000	1368	57	2005		X	X	X	X		X		
1.9 Multijet	188 B2.000	1910	74	2004		X	X	X	X	X	X		
Marea Weekend / Marengo 1996 2002													
1.2 16V	182 B2.000	1242	60	1999	2000	X	X	X	X	X	X		X
1.4 12V	182 A3.000	1370	59	1996	1999	X	X	X	X	X	X	X	X
1.6 16V	182 A4.000	1581	76	1996	2000	X	X	X	X	X	X	X	X
1.6 16V	182 B6.000	1596	76	2000	2002	X	X	X	X	X	X		
1.8 16V	182 A2.000	1747	83	1996	2000	X	X	X	X	X	X	X	X
1.9 JTD 100	182 B9.000	1910	74	2001	2002	X	X	X	X		X		
1.9 JTD 105	182 B4.000	1910	77	1999	2000	X	X	X	X	X	X		X
1.9 JTD 110	186 A6.000	1910	81	2000	2002	X	X	X	X	X	X		
1.9 TD 100	182 A7.000	1910	74	1996	1999	X	X	X	X	X	X	X	X
1.9 TD 75	182 A8.000	1910	55	1996	2000	X	X	X	X	X	X	X	X
2.0 20V	182 A1.000	1998	108	1996	1999	X	X	X	X	X	X	X	X
2.0 20V	182 B7.000	1998	113	1999	2000	X	X	X	X	X	X		X
2.0 20V	185 A8.000	1998	110	2000	2002	X	X	X	X	X	X	X	
2.4 JTD 130	185 A6.000	2387	96	1999	2000	X	X	X	X	X	X		X
2.4 TD 125	185 A2.000	2387	91	1996	1999	X	X	X	X	X	X	X	X
Multipia 1998 2004													
1.6 16V	182 A4.000	1581	76	1998	2001	X	X	X	X	X	X	X	X
1.6 16V	182 B6.000	1596	76	2001	2004	X	X	X	X	X	X		X
1.6 16V Bipower	182 B6.000	1596	68	2001	2004	X	X	X	X	X	X		X
1.6 16V Bipower	186 A4.000	1581	68	1999	2001	X	X	X			X		X
1.6 16V Blupower	186 A3.000	1581	70	1999	2004	X	X	X	X	X	X	X	X
1.6 16V G-power	182 B6.000	1596	76	2002	2004	X	X	X	X	X	X		X
1.9 JTD 105	182 B4.000	1910	77	1998	2001	X	X	X	X	X	X	X	X
1.9 JTD 110	182 A6.000	1910	81	2001	2004	X	X	X	X	X	X		X
1.9 JTD 115	186 A8.000	1910	85	2003	2004	X	X	X	X	X	X		X
Multipia 2004													
1.6 16V	182 B6.000	1596	76	2004		X	X	X	X		X		X
1.6 16V Natural Power	186 B6.000	1596	68	2004		X	X				X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
FIAT																			
Multipla 2004																			
1.9 JTD 115	186 A8.000	1910	85	2004		X	X	X		X				X					X
Palio Weekend / Strada / Siena 1997 2003																			
1.2 8V	188 A4.000	1242	44	2001	2003	X	X	X	X	X				X					
1.2 8V (65)	178 E2.000	1242	50	2000	2003	X	X	X	X	X				X					
1.2 8V (75)	178 B5.000	1242	54	1997	2001	X	X	X	X	X	X		X	X		X			X
1.4 8V	178 B2.000	1372	51	1997	2001	X	X	X	X	X			X	X					X
1.6 16V	182 B6.000	1596	76	2001	2003	X	X	X	X	X				X					
1.6 16V (100)	178 B3.000	1581	74	1997	2001	X	X	X	X	X	X		X	X		X			X
1.7 TD (70)	176 A3.000	1698	51	1997	2001	X	X	X	X	X			X	X		X			X
1.9 D	223 A6.000	1910	46	2001	2003	X	X	X	X	X				X					
Panda 1985 2003																			
1.1	187 A1.000	1108	40	2001	2003	X	X	X	X	X									X
1000	156 A2.000	999	33	1985	1990	X	X	X	X	X			X	X				X	X
1000 4x4	156 A2.100	999	32	1986	1995	X	X	X	X	X				X				X	X
1000 4x4	156 A3.000	999	37	1986	1995	X	X	X	X	X				X				X	X
1000 ie	141 C2.000	999	33	1995	1997	X	X	X	X	X			X	X				X	X
1000 ie	156 A2.246	999	33	1986	1990	X	X	X	X	X	X			X				X	X
1000 ie 4x4	156 A2.246	999	33	1986	1995	X	X	X	X	X	X			X				X	X
1100 ie	156 C.046	1108	37	1991	1995	X	X	X	X	X	X			X				X	X
1100 ie	176 B2.000	1108	40	1995	2001	X	X	X	X	X	X		X	X				X	X
1100 ie 4x4	176 B2.000	1108	40	1995	2001	X	X	X	X	X	X		X	X				X	X
1100 ie Selecta	156 C.046	1108	37	1991	1995	X	X	X	X	X				X				X	X
1100 ie Selecta	176 B2.000	1108	40	1995	2001	X	X	X	X	X	X		X	X				X	X
1300 D	156 A5.000	1302	27	1986	1995	X	X	X	X	X				X				X	X
750	156 A4.000	769	25	1985	1990	X	X	X	X	X			X	X				X	X
750 Ecobox	156 A4.048	769	25	1987	1990	X	X	X	X	X				X				X	X
900 ie	1170 A1.046	899	29	1994	2001	X	X	X	X	X			X	X				X	X
MAG WEG	0	0	0			X			X		X								
Panda 2003																			
1.1	187 A1.000	1108	40	2003		X	X	X	X	X	X	X		X					X
1.2 8V	188 A4.000	1242	44	2003		X	X	X	X	X	X	X		X					X
1.2 8V 4x4	188 A4.000	1242	44	2003		X	X	X	X	X				X					X
1.3 JTD	188 A8.000	1248	51	2004		X	X	X	X	X	X	X		X					
Punto 1993 2000																			
1.1 55	176 A6.000	1108	40	1993	1995	X	X	X	X	X	X	X	X	X				X	X
1.1 55	176 B2.000	1108	40	1995	2000	X	X	X	X	X	X	X	X	X				X	X
1.2 60	176 A7.000	1242	43	1993	1995	X	X	X	X	X	X	X	X	X		X	X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times				
						Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays			
FIAT															
Punto	1993	2000													
1.2 60	176 B1.000	1242	44	1994	1995	X	X	X	X	X	X	X	X	X	
1.2 60	176 B4.000	1242	44	1995	2000	X	X	X	X	X	X		X	X	
1.2 75	176 A8.000	1242	54	1993	2000	X	X	X	X	X	X	X	X	X	
1.2 85 16V	176 B9.000	1242	63	1997	2000	X	X	X	X	X	X		X	X	
1.2 85 16V Cabrio	176 B9.000	1242	63	1997	2000	X	X	X	X	X	X		X	X	
1.4 GT	176 A4.000	1372	98	1993	1997	X	X	X	X	X	X	X	X	X	
1.4 GT	176 B6.000	1372	96	1997	2000	X	X	X	X	X	X		X	X	
1.6 90	176 A9.000	1581	65	1993	1997	X	X	X	X	X	X		X	X	
1.6 90 Cabrio	176 A9.000	1581	65	1993	1997	X	X	X	X	X	X		X	X	
1.7 D 60	176 B3.000	1698	42	1995	1997	X	X	X	X	X	X		X	X	
1.7 TD 60	176 B7.000	1698	46	1997	2000	X	X	X	X	X	X		X	X	
1.7 TD 70	176 A3.000	1697	51	1993	2000	X	X	X	X	X	X		X	X	
1.7 TD 70	176 A5.000	1697	52	1993	1997	X	X	X	X	X	X	X	X	X	
Punto						1999									
1.2	188 A4.000	1242	44	1999		X	X	X	X	X	X	X	X	X	
1.2 16V	188 A5.000	1242	59	1999		X	X	X	X	X	X	X		X	
1.2 Bipower	188 A4.000	1242	38	2002		X	X	X	X			X			
1.3 JTD	188 A9.000	1248	51	2003		X	X	X	X	X		X		X	
1.4 16V	843 A1.000	1368	70	2003		X	X	X	X	X	X	X			
1.8 16V	183 A1.000	1747	96	1999	2001	X	X	X	X	X	X	X		X	
1.8 16V	183 A6.000	1747	96	2001	2003	X	X	X	X			X		X	
1.8 16V	188 A6.000	1747	96	2003		X	X	X	X			X			
1.9 D	188 A3.000	1910	44	1999	2003	X	X	X	X		X	X		X	
1.9 JTD	188 A2.000	1910	59	1999	2003	X	X	X	X	X	X	X		X	
1.9 JTD 100	188 B2.000	1910	74	2003		X	X	X	X			X			
1.9 JTD 85	188 A7.000	1910	63	2001		X	X	X	X	X	X	X		X	
Scudo						1995									
1.6	220 A2.000	1581	58	1995	2000	X	X	X	X			X	X	X	
1.9 D	DW8 (WJY)	1868	51	2001		X	X	X	X			X		X	
1.9 D	DW8 (WJZ)	1868	51	1998	2001	X	X	X	X			X	X	X	
1.9 D	XUD9A (D9B)	1905	51	1995	2000	X	X	X	X			X	X	X	
1.9 TD	XUD9TF (DHX)	1905	66	1997	2000	X	X	X	X			X	X	X	
1.9 TD	XUD9TF/L (D8B)	1905	68	1995	2000	X	X	X	X			X	X	X	
2.0 16V CF3	EW10J4 (RFN)	1997	100	2000		X	X	X	X			X	X	X	
2.0 JTD	DW10ATED (RHZ)	1997	80	1999		X	X	X	X			X		X	
2.0 JTD	DW10BTED (RHX)	1997	69	1999		X	X	X	X			X		X	
2.0 JTD 16V	DW10ATED4 (RHW)	1997	80	2001		X	X	X	X			X		X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
FIAT													
Seicento 1998													
1.1	187 A1.000	1108	40	2000		X	X	X	X	X		X	
1100 ie	176 B2.000	1108	40	1998	2000	X	X	X	X	X	X	X	X
1100 ie Sporting	176 B2.000	1108	40	1998	2000	X	X	X	X	X	X	X	X
900 ie	1170 A1.046	899	29	1998	2000	X	X	X	X	X	X	X	X
Stilo 2001													
1.2 16V	188 A5.000	1242	59	2001	2004	X	X	X	X	X	X		X
1.4 16V	192 B2.000	1368	66	2005		X	X	X	X		X		X
1.4 16V	843 A1.000	1368	70	2004		X	X	X	X	X	X		X
1.6 16V	182 B6.000	1596	76	2001	2005	X	X	X	X	X	X		X
1.6 16V	192 B3.000 (Z16XEP)	1598	77	2005		X	X	X	X		X		X
1.8 16V	192 A4.000	1747	98	2001		X	X	X	X	X	X		X
1.9 16V Multijet 140	192 A5.000	1910	103	2004	2005	X	X	X	X	X	X		X
1.9 16V Multijet 150	937 A5.000	1910	110	2005		X	X	X	X		X		X
1.9 JTD 100	192 A9.000	1910	74	2004	2005	X	X	X	X		X		X
1.9 JTD 115	192 A1.000	1910	85	2001	2005	X	X	X	X	X	X		X
1.9 JTD 80	192 A3.000	1910	59	2001	2005	X	X	X	X	X	X		X
1.9 Multijet 115	192 B4.000	1910	85	2005		X	X	X	X		X		
1.9 Multijet 120	192 A8.000	1910	88	2005		X	X	X	X		X		
2.4 20V	192 A2.000	2445	125	2001		X	X	X	X	X	X		X
Tempra Marengo 1990 1995													
1.4	159.A.2000	1372	55	1990	1996	X	X	X	X		X	X	X
1.4 IE	160.A.1046	1372	51	1992	1994	X	X	X	X	X	X	X	X
1.4 IE	836.A.4000	1372	51	1992	1996	X	X	X	X	X	X	X	X
1.6	159.A.3000	1580	62	1990	1996	X	X	X	X	X	X	X	X
1.6 IE	159.A.3048	1581	55	1992	1996	X	X	X	X	X	X	X	X
1.6 IE	159.A3.046	1580	59	1990	1996	X	X	X	X	X	X	X	X
1.6 IE	835.C.1000	1581	55	1993	1996	X	X	X	X	X	X	X	X
1.7 D	149.B4.000	1697	43	1990	1996	X	X	X	X		X		X
1.8 IE	159.A.4000	1756	79	1990	1993	X	X	X	X	X	X	X	X
1.8 IE	159.A.4046	1756	79	1990	1996	X	X	X	X	X	X	X	X
1.8 IE	835.C2.000	1756	79	1990	1996	X	X	X	X	X	X	X	X
1.8 IE	836.A.5000	1756	74	1990	1996	X	X	X	X	X	X	X	X
1.8 IE	836.A.6000	1756	66	1990	1996	X	X	X	X	X	X	X	X
1.9 D	160.A.7000	1929	48	1990	1996	X	X	X	X	X	X	X	X
1.9 TD	160.A.6000	1929	68	1990	1996	X	X	X	X	X	X	X	X
1.9 TD cat	160.B.6046	1929	59	1990	1996	X	X	X	X	X	X	X	X
1.9 TD cat	160.D.1000	1929	66	1990	1996	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance		Techn. Drawings	Motor Manag.	Wiring Diagram.	Service Reset	Repair Times			
						Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	Fuses & Relays		
FIAT															
Tempra Marengo 1990 1995															
2.0 IE	159 A6.046	1995	83	1990	1996	X	X	X	X	X		X	X	X	X
2.0 Stationwagon 4x4	159.A.6046	1995	83	1991	1996	X	X	X	X	X		X	X	X	X
Tipo 1988 1995															
1.1	160 A3.000	1108	39	1988	1995	X	X	X	X	X			X	X	
1.4	160 A1.000	1372	52	1988	1990	X	X	X	X	X		X	X	X	
1.4 IE	160 A1.046	1372	52	1989	1995	X	X	X	X	X			X	X	
1.4 Selecta	160 A1.046	1372	52	1991	1995	X	X	X	X	X			X	X	
1.6	160 A2.000	1580	60	1988	1995	X	X	X	X	X		X	X	X	
1.6 DGT IE	149 C2.046	1585	66	1988	1990	X	X	X	X	X			X	X	
1.6 IE	159 A3.046	1585	56	1990	1995	X	X	X	X	X		X	X	X	
1.6 IE	835 C1.000	1585	56	1990	1995	X	X	X	X	X		X	X	X	
1.7 D	149 B4.000	1697	42	1988	1995	X	X	X	X	X		X	X	X	
1.8 IE	159 A4.000	1756	77	1990	1995	X	X	X	X	X		X	X	X	
1.8 IE	835 C2.000	1756	77	1990	1995	X	X	X	X	X		X	X	X	
1.8 IE 16V	160 A5.000	1756	100	1988	1995	X	X	X	X	X			X	X	
1.9 D	149 A1.000	1929	48	1991	1995	X	X	X	X	X				X	
1.9 TD	160 A6.000	1929	68	1988	1995	X	X	X	X	X		X	X	X	
2.0 IE	159 A6.046	1995	107	1990	1995	X	X	X	X	X			X	X	
2.0 IE	834 B.146	1995	85	1989	1995	X	X	X	X	X				X	
2.0 IE 16V	160 A8.046	1995	109	1990	1995	X	X	X	X	X			X	X	
2.0 IE 16V	836 A3.000	1995	109	1990	1995	X	X	X	X	X			X	X	
Ulysse 1994 2002															
1.8	XU7JP (LFW)	1761	70	1996	1999	X	X	X	X	X				X	
1.9 TD	XUD9BTF (DHX)	1905	66	1994	2000	X	X	X	X	X		X	X	X	
1.9 TD	XUD9TF (D8B)	1905	68	1994	2000	X	X	X	X	X				X	
2.0	XU10J2 (RFU)	1998	89	1994	2002	X	X	X	X	X		X	X	X	
2.0 16V	XU10J4R (RFV)	1998	98	1999	2000	X	X	X	X	X		X		X	
2.0 16V CF3	EW10J4 (RFN)	1998	100	2000	2002	X	X	X	X	X				X	
2.0 JTD	DW10ATED (RHZ)	1997	80	1999	2000	X	X	X	X	X		X		X	
2.0 JTD 16V	DW10ATED4 (RHW)	1997	80	2000	2002	X	X	X	X	X				X	
2.0 Turbo	XU10J2CTE (RGX)	1998	108	1994	2002	X	X	X	X	X		X	X	X	
2.1 TD	XUD11BTE (P8C)	2088	80	1996	2000	X	X	X	X	X		X	X	X	
Ulysse 2002															
2.0 16V	EW10J4 (RFN)	1997	100	2002		X	X	X	X	X				X	
2.0 JTD 16V	DW10ATED4 (RHW)	1997	80	2002		X	X	X	X	X				X	
2.2 JTD 16V	DW12ATED4 (4HW)	2179	94	2002		X	X	X	X	X				X	
3.0 V6 24V	ES9J4S (XFW)	2946	150	2002		X	X	X	X	X				X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir. Diagram	Repair Times	Fuses & Relays
FIAT																		
Uno 1983 1994																		
1.3 D	127.A.5000	1301	33	1983	1988	X		X	X	X								X
1.3 D	146.B.1000	1301	33	1988	1994	X	X	X	X	X			X	X			X	X
1.4 IE / SELECTA	160.A1.046	1372	51	1989	1994	X	X	X	X	X	X		X	X		X	X	X
1.4 TD	146.B.3000	1367	51	1988	1994	X	X		X	X								X
1.7 D	146.B.2000	1697	43	1989	1994	X	X	X	X	X			X	X			X	X
45	146.A.000/010	903	33	1983	1988	X	X	X	X	X				X			X	X
45	156.A.2000	999	32	1985	1988	X	X	X	X	X			X	X			X	X
45 IE	156.A.2246	999	33	1989	1992	X	X	X	X	X	X		X	X		X	X	X
55	138.B.000/048	1116	41	1983	1986	X			X	X								X
60	146.A.4048	1116	43	1985	1988	X	X	X	X	X			X	X			X	X
60 / 1.1 IE	156.C.046	1108	38	1992	1994	X	X	X	X	X	X		X	X		X	X	X
70	138.B.2000	1301	52	1983	1985	X			X	X								X
70	149.A.7000	1301	48	1985	1988	X	X	X	X	X				X			X	X
70 IE	146.C.1000	1372	51	1990	1994	X	X	X	X	X	X		X	X			X	X
75 IE (MPI)	138.C.2048	1498	55	1988	1989	X	X	X	X	X	X			X			X	X
75 IE / SELECTA	149.C.1000	1498	55	1990	1994	X	X	X	X	X	X		X	X		X	X	X
Turbo IE	146.A.2000	1301	77	1984	1989	X	X	X	X	X	X			X			X	X
Turbo IE	146.A.2046	1301	74	1989	1992	X	X	X	X	X	X		X	X			X	X
Turbo IE	146.A.2246	1372	77	1989	1994	X	X	X	X	X	X			X				X
Turbo IE	146.A.8000	1372	82	1989	1994	X	X	X	X	X	X		X	X			X	X
FORD																		
Cougar 1998 2001																		
2.0 16V	Zetec-E EBBC	1988	96	1999	1999	X	X	X	X	X	X	X		X	X			X
2.0 16V	Zetec-E EBBB	1988	96	1999	2000	X	X	X	X	X	X	X		X	X			X
2.0 16V	Zetec-E EDBA	1989	96	1998	1999	X	X	X	X	X	X	X		X	X			X
2.0 16V	Zetec-E EDBB	1988	96	1999	2001	X	X	X	X	X	X	X		X	X			X
2.5 24V V6	Duratec LCBA	2544	125	1998	1999	X	X	X	X	X	X	X		X	X			X
2.5 24V V6	Duratec LCBB	2499	125	1999	1999	X	X	X	X	X	X	X		X	X			X
2.5 24V V6	Duratec LCBC	2499	125	1999	2000	X	X	X	X	X	X	X		X	X			X
2.5 24V V6	Duratec LCBE	2499	125	2000	2001	X	X	X	X	X	X	X		X	X			X
2.5 24V V6 (ST200)	Duratec MABA	2499	151	2000	2001	X	X	X	X	X	X	X		X	X			X
2.5 24V V6 (ST200)	Duratec MABB	2499	147	2000	2001	X	X		X	X	X	X			X			X
Courier 1996 2002																		
1.2 16V	Zetec-SE DHA/B/C/D	1242	55	1996	2002	X	X	X			X	X		X			X	X
1.3 8V	Endura-E J4C/J/L	1299	44	1996	2002	X	X	X			X	X	X	X		X	X	X
1.3 8V	Endura-E JJA/C/E	1299	37	1996	2002	X	X	X			X	X		X			X	X
1.4 16V	Zetec-SE FHA/E	1388	66	1996	2002	X	X	X			X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
FORD																			
Courier 1996 2002																			
1.6 16V	Zetec-SE L1T/V	1597	76	1996	2002	X	X	X			X	X		X					X
1.8 D	Endura-DE RTJ/K	1753	44	1996	2002	X	X	X			X	X	X	X		X	X		X
1.8 TD	Endura-DI RTN/P/Q	1753	55	1996	2002	X	X				X	X		X					X
Escort 1980 1992																			
1.1	GSF/GSG	1117	37	1986	1987	X	X	X	X	X			X	X				X	
1.3	JLA	1297	44	1986	1990	X	X	X	X	X			X	X				X	
1.4	FUA	1392	55	1986	1990	X	X	X	X	X			X	X				X	
1.4i	F6F	1392	52	1987	1990	X	X	X	X	X	X		X	X				X	
1.6	LUC	1598	66	1986	1990	X	X	X	X	X			X	X				X	
1.6	LUJ	1596	65	1990	1990	X			X	X									
1.6	LP2	1597	58	1986	1990	X	X	X	X	X			X	X				X	
1.6 RS Turbo	LNB	1597	97	1986	1990	X	X	X	X	X	X		X	X				X	
1.6 XR3i	LUC	1597	77	1986	1990	X	X	X	X	X			X	X				X	
1.6D	LTA/LTC	1608	40	1986	1990	X	X	X	X	X			X	X				X	
1.6i	LJF	1596	77	1990	1990	X	X	X	X	X	X		X	X				X	
1.8D	RTD/RTE	1753	44	1988	1990	X	X	X	X	X			X	X				X	
Escort 1991 2001																			
1.3i	Endura-E J4B	1298	44	1992	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.3i	HCS J6A	1297	44	1992	1997	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.4i	CVH F6F/F6G	1392	52	1990	1992	X	X	X	X	X	X		X	X	X	X	X	X	X
1.4i	PTE F4B	1392	55	1992	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.4i	CVH F6F/F6G	1392	52	1990	1992	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6	CVH LUK/LUJ	1596	66	1990	1992	X	X	X	X	X			X	X	X	X	X	X	X
1.6i	CVH LJF/LJE	1596	77	1990	1992	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6i	CVH LUK/LUJ	1596	66	1990	1992	X	X	X	X	X			X	X	X	X	X	X	X
1.6i	CVH LJF/LJE	1596	77	1990	1992	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6i 16V	ZETEC-E L1H	1596	66	1996	1997	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6i 16V	ZETEC-E L1H	1596	66	1998	1999	X	X		X	X	X	X			X				X
1.6i 16V	ZETEC-E L1K	1597	66	1992	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6i 16V	ZETEC-E L1E	1597	66	1992	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6i 16V Clipper	ZETEC-E L1E	1597	66	1992	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6i Cabriolet	CVH LJF/LJE	1596	77	1990	1992	X	X	X	X	X	X		X	X	X	X	X	X	X
1.8 D	RTD/RTE/F/G/H	1753	44	1990	1999	X	X	X	X	X		X	X	X	X	X	X	X	X
1.8 D Clipper	RTH	1796	44	1992	1999	X	X	X	X	X		X	X	X	X	X	X	X	X
1.8 D Stationwagon	RTD/RTE/F/G/H	1753	44	1990	1999	X	X	X	X	X		X	X	X	X	X	X	X	X
1.8 TD	ENDURA-DE RFD	1753	66	1994	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.8 TD	ENDURA-DE RFK	1753	66	1994	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
FORD													
Escort 1991 2001													
1.8 TD	ENDURA-DE RVA	1753	51	1994	1999	X	X	X	X	X	X	X	X
1.8i 16V	ZETEC-E RKC	1796	85	1998	1999	X	X	X	X	X	X	X	X
1.8i 16V	ZETEC-E RQB	1796	96	1992	1999	X	X	X	X	X	X	X	X
1.8i 16V	ZETEC-E RQB	1796	96	1992	1999	X	X	X	X	X	X	X	X
1.8i 16V	ZETEC-E RDA	1796	77	1992	1999	X	X	X	X	X	X	X	X
2.0i 16V	DOHC N7A	1998	110	1992	1999	X	X	X	X	X	X	X	X
RS 2000	DOHC N7A	1998	110	1992	1999	X	X	X	X	X	X	X	X
RS Cosworth	DOHC N5F	1993	162	1990	1994	X	X	X	X	X	X	X	X
Fiesta 1995 2002													
1.2i 16V	Zetec-SE DHA	1254	55	1995	2002	X	X	X	X	X	X	X	X
1.2i 16V	Zetec-SE DHB	1254	55	1999	2002	X	X	X	X	X	X	X	X
1.2i 16V	Zetec-SE DHC	1254	55	1999	2002	X	X	X	X	X	X	X	X
1.2i 16V	Zetec-SE DHD	1254	55	1999	2002	X	X	X	X	X	X	X	X
1.2i 16V	Zetec-SE DHE	1254	55	2001	2002	X	X	X	X	X	X	X	X
1.2i 16V	Zetec-SE DHF	1254	55	2001	2002	X	X	X	X	X	X	X	X
1.2i 16V	Zetec-SE DHG	1254	55	2001	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E IS	1298	37	1995	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E J4C	1298	44	1995	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E J4J	1298	44	1998	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E J4L	1298	44	1999	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E J4Q	1289	44	1999	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E J4R	1298	44	1999	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E J4T	1298	44	1999	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E JJA	1298	37	1995	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E JJC	1298	37	1998	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E JJE	1298	37	1999	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E JJJ	1298	37	1999	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E JJK	1298	37	1999	2002	X	X	X	X	X	X	X	X
1.3i	Endura-E JJM	1298	37	1999	2002	X	X	X	X	X	X	X	X
1.4i 16V	Zetec-SE FHA	1388	66	1995	1999	X	X	X	X	X	X	X	X
1.4i 16V	Zetec-SE FHC	1388	66	1999	2002	X	X	X	X	X	X	X	X
1.4i 16V	Zetec-SE FHE	1388	66	1999	2002	X	X	X	X	X	X	X	X
1.6i 16V	Zetec-SE L1T	1595	74	2000	2002	X	X	X	X	X	X	X	X
1.6i 16V	Zetec-SE L1V	1595	74	2001	2002	X	X	X	X	X	X	X	X
1.8 D	Endura-DE RTJ	1753	44	1995	2002	X	X	X	X	X	X	X	X
1.8 D	Endura-DE RTK	1753	44	1995	2002	X	X	X	X	X	X	X	X
1.8 D	Endura-DI RTN	1753	55	2000	2002	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir.	Diagr.	Repair Times	Fuses & Relays
FORD																			
Fiesta 1995 2002																			
1.8 D	Endura-DI RTP	1753	55	2000	2002	X	X	X	X	X	X	X			X				X
1.8 D	Endura-DI RTQ	1753	55	2000	2002	X	X		X	X	X	X			X				X
Fiesta 2002																			
1.2 16V	Duratec F8JA	1242	51	2002		X	X	X	X	X	X	X		X					X
1.2 16V	Duratec F8JB	1242	51	2002		X	X	X	X	X	X	X		X					X
1.2 16V	Duratec FUJA	1242	55	2002		X	X	X	X	X	X	X		X			X		X
1.2 16V	Duratec FUJB	1242	51	2002		X	X	X	X	X	X	X		X			X		X
1.3 8V	Duratec A9JA	1297	50	2003		X	X	X	X	X	X	X		X			X		X
1.3 8V	Duratec A9JB	1297	50	2003		X	X	X	X	X	X	X		X			X		X
1.3 8V	Duratec BAJA	1297	43	2003		X	X	X	X	X	X	X		X			X		X
1.4 16V	Duratec FXJA	1388	59	2002		X	X	X	X	X	X	X		X			X		X
1.4 16V	Duratec FXJB	1388	59	2002		X	X	X	X	X	X	X		X			X		X
1.4 TDCi	Duratorq F6JA	1399	50	2002		X	X	X	X	X	X	X		X			X		X
1.6 16V	Duratec FYJA	1595	74	2002		X	X	X	X	X	X	X		X			X		X
1.6 TDCi	Duratorq HHJA	1560	66	2005		X	X	X	X	X									
1.6 TDCi	Duratorq HHJB	1560	66	2005		X	X	X	X	X									
2.0 16V	Duratec N4JA	1998	110	2005		X	X	X	X	X									
2.0 16V	Duratec N4JB	1998	110	2005		X	X		X	X									
Fiesta 1989 1996																			
1.0	HCS TLB	999	33	1989	1995	X	X	X	X	X			X	X	X	X	X	X	X
1.1	HCS GUD/GUE	1118	40	1989	1995	X	X	X	X	X			X	X	X	X	X	X	X
1.1i	HCS G6A	1118	37	1989	1995	X	X	X	X	X	X		X	X	X	X	X	X	X
1.3i	HCS J6B	1297	44	1989	1995	X	X	X	X	X	X		X	X	X	X	X	X	X
1.4i	F4A	1392	54	1989	1995	X	X	X	X	X	X		X	X	X	X	X	X	X
1.6 16V Si	Zetec-E L1E	1597	66	1992	1995	X	X	X	X	X				X	X			X	X
1.6 8V XR2i	CVH LJC/LJD	1597	76	1989	1992	X	X	X	X	X	X		X	X	X	X	X	X	X
1.6 RS Turbo	CVH LHA	1597	96	1989	1992	X	X	X	X	X	X		X	X	X	X	X	X	X
1.8 16V XR2i	Zetec-E RQC	1796	96	1992	1995	X	X	X	X	X	X		X	X	X	X	X	X	X
1.8 D	RTC/RTD/RTG	1753	44	1989	1995	X	X	X	X	X			X	X	X	X	X	X	X
1.8i 16V	Zetec-E RDB	1796	76	1992	1995	X	X	X	X	X	X		X	X	X	X	X	X	X
Focus 1998 2005																			
1.4 16V	Zetec-SE FXDA	1388	55	1998	2001	X	X	X	X	X	X	X		X				X	X
1.4 16V	Zetec-SE FXDB	1388	55	1998	2001	X	X	X	X	X	X	X		X				X	X
1.4 16V	Zetec-SE FXDC	1388	55	1998	2001	X	X	X	X	X	X	X		X				X	X
1.4 16V	Zetec-SE FXDD	1388	55	1998	2001	X	X	X	X	X	X	X		X				X	X
1.6 16V	Zetec-SE FYDA	1595	74	1998	2000	X	X	X	X	X	X	X		X				X	X
1.6 16V	Zetec-SE FYDB	1595	74	1998	2001	X	X	X	X	X	X	X		X				X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
FORD													
Focus 1998 2005													
1.6 16V	Zetec-SE FYDC	1595	74	1998	2000	X	X	X	X	X	X	X	X
1.6 16V	Zetec-SE FYDD	1595	74	2001	2005	X	X	X	X	X	X	X	X
1.6 16V	Zetec-SE FYDG	1595	74	2000	2005	X	X	X	X	X	X	X	X
1.8 16V	Zetec-E EYDA	1796	85	1998	2005	X	X	X	X		X		X
1.8 16V	Zetec-E EYDB	1796	85	2000	2005	X	X	X	X	X	X	X	X
1.8 16V	Zetec-E EYDC	1796	85	1998	2005	X	X	X	X	X	X	X	X
1.8 16V	Zetec-E EYDE	1796	85	2000	2005	X	X	X	X	X	X	X	X
1.8 16V	Zetec-E EYDF	1796	85	2000	2005	X	X	X	X	X	X	X	X
1.8 16V	Zetec-E EYDH	1796	85	2000	2005	X	X	X	X		X		X
1.8 16V (LPG)	Zetec-E EYDG	1796	85	2000	2005	X	X	X	X		X		X
1.8 16V (LPG/CNG)	Zetec-E EYDD	1796	85	2000	2005	X	X	X	X	X	X	X	X
1.8 TDCi	Duratorq F9DA	1753	85	2000	2005	X	X	X	X	X	X	X	X
1.8 TDCi	Duratorq F9DB	1753	85	2000	2005	X	X	X	X	X	X	X	X
1.8 TDCi	Duratorq FFDA	1753	74	2002	2005	X	X	X	X		X	X	X
1.8 TDdi	Endura-DI BHDA	1753	55	1998	2005	X	X	X	X	X	X	X	X
1.8 TDdi	Endura-DI BHDB	1753	55	1998	2005	X	X	X	X	X	X	X	X
1.8 TDdi	Endura-DI C9DA	1753	66	1998	2005	X	X	X	X	X	X	X	X
1.8 TDdi	Endura-DI C9DB	1753	66	1998	2005	X	X	X	X	X	X	X	X
1.8 TDdi	Endura-DI C9DC	1753	66	1998	2005	X	X	X	X	X	X	X	X
1.8 TDdi	Endura-DI C9DE	1753	66	1998	2005	X	X	X	X		X		X
2.0 16V	Zetec-E EDDA	1988	96	1998	2005	X	X	X	X		X		X
2.0 16V	Zetec-E EDDB	1988	96	2000	2005	X	X	X	X	X	X	X	X
2.0 16V	Zetec-E EDDC	1988	96	1998	2005	X	X	X	X	X	X	X	X
2.0 16V	Zetec-E EDDD	1988	96	2000	2005	X	X	X	X	X	X	X	X
2.0 16V	Zetec-E EDDF	1988	96	1998	2005	X	X	X	X	X	X	X	X
2.0 16V	Zetec-E EDDG	1988	96	2000	2005	X	X	X	X		X		X
RS 2.0 16V Turbo	Duratec-RS	1988	158	2002	2003	X	X		X	X	X		X
ST170 2.0 16V	Duratec-ST	1988	127	2002	2005	X	X	X	X	X	X		X
Focus 2004													
1.4 16V	Duratec ASDA	1388	59	2004		X	X	X	X		X		
1.4 16V	Duratec ASDB	1388	59	2004		X	X	X	X		X		
1.6 16V	Duratec HWDA	1596	74	2004		X	X	X	X		X		
1.6 16V	Duratec HWDB	1596	74	2004		X	X	X	X		X		
1.6 16V TDCi	Duratorq G8DA	1560	80	2004		X	X	X	X		X		
1.6 16V TDCi	Duratorq G8DB	1560	80	2004		X	X	X	X		X	X	
1.6 16V Ti-VCT	Duratec HXDA	1596	85	2004		X	X	X	X		X		
1.8 16V	Duratec-HE QQDB	1798	92	2004		X	X	X	X		X		

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagn.	Fuses & Relays
FORD													
Focus 2004													
1.8 16V TDCi	Duratorq KKDA	1753	85	2004		X	X	X	X	X			
2.0 16V	Duratec-HE AODA	1998	107	2004		X	X	X	X	X			
2.0 16V	Duratec-HE AODB	1998	107	2004		X	X	X	X	X			
2.0 16V TDCi	Duratorq G6DA	1998	100	2004		X	X	X	X	X	X		
2.0 16V TDCi	Duratorq G6DB	1998	100	2004		X	X	X	X	X	X		
2.0 16V TDCi	Duratorq G6DC	1998	98	2004		X	X	X	X	X	X		
2.5 20V ST	Duratec HYDA	2522	166	2005		X	X	X	X	X	X		
Focus C-Max 2003													
1.6 16V	Duratec HWDA	1596	74	2003		X	X	X	X		X		X
1.6 16V Ti-VCT	Duratec HXDA	1596	85	2004		X	X	X	X		X		X
1.6 TDCi	Duratorq G8DA	1560	80	2003		X	X	X	X	X	X		X
1.6 TDCi	Duratorq G8DB	1560	80	2003		X	X	X	X	X	X		X
1.6 TDCi	Duratorq HHDA	1560	66	2003		X	X	X	X	X	X		X
1.8 16V	Duratec-HE CSDA	1798	88	2003		X	X	X	X	X	X		X
1.8 16V	Duratec-HE CSDB	1798	88	2003		X	X	X	X	X	X		X
1.8 16V	Duratec-HE QQDA	1798	92	2004		X	X	X	X	X	X		X
1.8 16V	Duratec-HE QQDB	1798	92	2004		X	X	X	X	X	X		X
1.8 16V	Duratec-HE QQDC	1798	90	2004		X	X	X	X	X	X		X
1.8 TDCi	Duratorq KKDA	1753	85	2003		X	X	X	X	X	X		X
2.0 16V	Duratec-HE AODA	1998	107	2003		X	X	X	X	X	X		X
2.0 16V	Duratec-HE AODB	1998	107	2004		X	X	X	X	X	X		X
2.0 TDCi	Duratorq G6DA	1998	100	2003		X	X	X	X	X	X		X
2.0 TDCi	Duratorq G6DB	1998	100	2004		X	X	X	X	X	X		X
2.0 TDCi	Duratorq G6DC	1998	98	2004		X	X	X	X	X	X		X
Fusion 2002													
1.2 16V	Duratec F8JA	1242	51	2002		X	X		X	X	X		X
1.2 16V	Duratec F8JB	1242	51	2002		X	X		X	X	X		X
1.2 16V	Duratec FUJA	1242	51	2002		X	X		X	X	X		X
1.2 16V	Duratec FUJB	1242	51	2002		X	X		X	X	X		X
1.4 16V	Duratec FXJA	1388	59	2002		X	X	X	X	X	X		X
1.4 16V	Duratec FXJB	1388	59	2002		X	X	X	X	X	X		X
1.4 TDCi	Duratorq F6JA	1399	50	2002		X	X		X	X	X		X
1.4 TDCi	Duratorq F6JB	1399	50	2002		X	X		X	X	X		X
1.4 TDCi	Duratorq F6JC	1399	50	2002		X	X		X	X	X		X
1.6 16V	Duratec FYJA	1595	74	2002		X	X	X	X	X	X		X
1.6 16V	Duratec FYJB	1595	74	2002		X	X	X	X	X	X		X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
FORD													
Galaxy 1995 2000													
1.9 TDi	1Z	1896	66	1996	1996	X	X	X	X	X	X	X	X
1.9 TDi	AFN	1896	81	1997	2000	X	X	X	X		X	X	X
1.9 TDi	AHU	1896	66	1996	1997	X	X	X	X		X	X	X
1.9 TDi / PDE	ANU	1896	66	1999	2000	X	X	X	X		X	X	X
2.0 8V	NSE	1998	85	1995	2000	X	X	X	X	X		X	X
2.3 16V	Y5B	2295	107	1996	2000	X	X	X	X	X		X	X
2.8 VR6	AAA	2792	128	1995	1998	X	X	X	X	X	X	X	X
Galaxy 2000													
1.9 TDi	ANU	1896	66	2000		X	X	X	X	X	X	X	X
1.9 TDi	ASZ	1896	96	2003		X	X	X	X		X	X	X
1.9 TDi	ASZ1	1896	110	2005		X	X	X	X		X	X	
1.9 TDi	AUY	1896	85	2000		X	X	X	X	X	X	X	X
2.0 8V	ZVSA	1998	85	2000		X	X	X	X	X		X	X
2.3 16V	E5SA	2295	107	2000	2003	X	X	X	X	X		X	X
2.3 16V	E5SB	2295	103	2003		X	X	X	X			X	X
2.8 VR6	AYL	2792	150	2000		X	X	X	X	X	X	X	X
Ka 1997													
1.3 8V	Duratec A9A	1297	51	2002		X	X	X	X	X	X		X
1.3 8V	Duratec A9B	1297	51	2002		X	X	X	X	X	X		X
1.3 8V	Duratec BAA	1297	44	2002		X	X	X	X	X	X		X
1.3 8V	Endura-E J4D	1299	44	1997		X	X	X	X	X	X		X
1.3 8V	Endura-E J4M	1299	44	1999		X	X	X	X		X		X
1.3 8V	Endura-E JJB	1299	37	1997		X	X	X	X	X	X		X
1.3 8V	Endura-E JJF	1299	37	1999		X	X	X	X		X		X
SportKa 1.6 8V	Duratec CDC	1597	70	2002		X	X	X	X	X	X		X
SportKa 1.6 8V	Duratec CDB	1597	70	2002		X	X	X	X	X	X		X
Maverick 1993 2001													
2.4i	K24	2389	85	1996	2001	X		X		X			
2.4i	K24E	2389	91	1993	1996	X		X		X	X	X	X
2.7 TD	TD27	2663	74	1993	1996	X		X		X	X	X	X
2.7 TD	TD27E	2663	92	1996	2001	X		X		X			
Mondeo 1993 1997													
1.6 16V	L1	1597	66	1993	1997	X	X	X	X	X	X	X	X
1.8 16V	RK	1796	84	1993	1997	X	X	X	X	X	X	X	X
1.8 TD	RF	1753	65	1993	1997	X	X	X	X		X	X	X
2.0 16V	NG	1988	102	1993	1997	X	X	X	X	X	X	X	X
2.0 16V 4x4	NG	1988	102	1994	1997	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
FORD													
Mondeo 1993 1997													
2.5 24V V6	SEA	2544	160	1994	1997		X	X	X	X	X	X	X
Mondeo 1997 2000													
1.6 16V	L1J	1597	66	1997	1998		X	X	X	X	X	X	X
1.6 16V	L1L	1597	70	1998	2001		X	X	X	X	X	X	X
1.6 16V	L1N	1597	70	1998	2001		X	X	X	X	X	X	X
1.6 16V	L1Q	1597	70	1998	2001		X	X	X	X	X	X	X
1.8 16V	RKF	1796	85	1998	2001		X	X	X	X	X	X	X
1.8 16V	RKH	1796	85	1998	2001		X	X	X	X	X	X	X
1.8 16V	RKJ	1796	85	1998	2001		X	X	X	X	X	X	X
1.8 16V	RKK	1796	85	1998	2001		X	X	X	X	X	X	X
1.8 16V	RKB	1796	85	1997	1998		X	X	X	X	X	X	X
1.8 TD TCI	RFN	1753	66	1997	2001		X	X	X	X	X	X	X
2.0 16V	NGA	1988	96	1997	1998		X	X	X	X	X	X	X
2.0 16V	NGB	1988	96	1998	2001		X	X	X	X	X	X	X
2.0 16V	NGC	1988	96	1998	2001		X	X	X	X	X	X	X
2.0 16V	NGD	1988	96	1998	2001		X	X	X	X	X	X	X
2.0 16V 4x4	NGA	1988	100	1997	1998		X	X	X	X	X	X	X
2.5 24V V6	SEA	2544	125	1997	2000		X	X	X	X	X	X	X
2.5 24V V6	SEB	2499	125	2000	2000		X	X	X	X	X	X	X
2.5 24V V6	SEC	2499	125	2000	2001		X	X	X	X	X	X	X
2.5 24V V6 (ST200)	SGA	2499	151	1999	2001		X	X	X	X	X	X	X
Mondeo 2000													
1.8 16V	Duratec-HE CGBA	1796	81	2000			X	X	X	X	X	X	X
1.8 16V	Duratec-HE CGBB	1796	81	2000			X	X	X	X	X	X	X
1.8 16V	Duratec-HE CHBA	1796	92	2000			X	X	X	X	X	X	X
1.8 16V	Duratec-HE CHBB	1796	92	2000			X	X	X	X	X	X	X
1.8 SCi 16V	Duratec-SCi CFBA	1798	96	2003	2005		X	X	X	X	X	X	X
2.0 16V	Duratec-HE CJBA	1999	107	2000			X	X	X	X	X	X	X
2.0 16V	Duratec-HE CJBB	1999	107	2000			X	X	X	X	X	X	X
2.0 16V TDCi	Duratorq FMBA	1998	96	2001			X	X	X	X	X	X	X
2.0 16V TDCi	Duratorq FMBB	1998	96	2001			X	X	X	X	X	X	X
2.0 16V TDCi	Duratorq HJBA	1998	85	2002			X	X	X	X	X	X	X
2.0 16V TDCi	Duratorq HJBC	1998	85	2002			X	X	X	X	X	X	X
2.0 16V TDCi	Duratorq N7BA	1998	96	2001			X	X	X	X	X	X	X
2.0 16V TDdi	Duratorq-Di D5BA	1998	66	2000			X	X	X	X	X	X	X
2.0 16V TDdi	Duratorq-Di D6BA	1998	85	2000	2003		X	X	X	X	X	X	X
2.2 16V TDCi	Duratorq QJBA	2198	114	2004			X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
FORD																			
Mondeo 2000																			
2.2 16V TDCi	Duratorq QJBB	2198	114	2004		X	X	X	X	X				X				X	
2.5 V6 24V	Duratec-VE LCBD	2499	125	2000		X	X	X	X	X	X	X		X				X	X
3.0 V6 24V	Duratec-SE REBA	2967	150	2003		X	X	X	X	X								X	X
ST220 (3.0 V6 24V)	Duratec-ST MEBA	2967	166	2003		X	X	X	X	X								X	X
Orion 1983 1990																			
1.3	JPA	1296	51	1983	1986	X	X	X	X	X				X				X	
1.4	FUA	1392	55	1986	1990	X	X	X	X	X			X	X				X	
1.6	LP2	1597	58	1986	1990	X	X	X	X	X				X				X	
1.6	LPA	1597	58	1983	1986	X	X	X	X	X				X				X	
1.6	LRA/LRB	1598	77	1983	1986	X	X	X	X	X	X			X				X	
1.6	LUJ	1596	65	1990	1990	X	X		X	X									
1.6D	LTC	1605	40	1983	1986	X	X	X	X	X			X	X				X	
1.6i	LJF	1596	75	1990	1990	X	X		X	X	X								
1.6i	LR2/LRB	1598	77	1986	1990	X	X	X	X	X	X		X	X				X	
1.6i	L4B	1597	66	1986	1990	X	X	X	X	X	X		X	X				X	
1.8D	RTE/RTF/RTH	1753	44	1988	1990	X	X	X	X	X			X	X				X	
Orion 1990 1993																			
1.3i	J6A	1264	44	1990	1993	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.4	FUH	1392	54	1990	1992	X	X	X	X	X			X	X	X	X	X	X	X
1.4i	F6F/F6G	1392	52	1990	1993	X	X	X	X	X	X	X	X	X	X	X	X	X	X
1.6i 16V	L1E	1597	66	1992	1993	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Probe 1992																			
24V	V6-24V KL	2495	120	1992				X											
Puma 1997 2002																			
1.4 16V	Zetec-SE FHD	1388	66	1998	2002	X	X	X	X	X	X	X	X	X	X			X	X
1.4 16V	Zetec-SE FHF	1388	66	1999	2002	X	X	X	X	X	X	X	X	X	X			X	X
1.6 16V	Zetec-SE L1W	1595	76	2001	2002	X	X	X	X	X	X	X	X	X	X			X	X
1.7 16V	Zetec-S VCT MHA	1679	92	1997	2002	X	X	X	X	X	X	X	X	X	X			X	X
1.7 16V	Zetec-S VCT MHB	1679	92	1999	2002	X	X	X	X	X	X	X	X	X	X			X	X
Ranger 2001																			
2.2	F2	2184		2001		X		X		X									
2.5	WL	2499		2001		X		X		X									
2.5	WL-3	2499		2001		X		X		X									
2.5	WLT-3	2499		2001		X		X		X									
2.5 Turbo	WL Turbo	2499		2001		X		X		X									
2.6	G6	2606		2001		X		X		X									

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
FORD																			
Scorpio 1994 2000																			
2.0i	NSD	1998	85	1994	2000	X	X	X	X	X	X	X	X	X		X	X	X	
2.0i 16V	N3A	1988	100	1994	2000	X	X	X	X	X	X	X	X	X		X	X	X	
2.3i 16V	Y5A	2295	108	1996	2000	X	X	X	X	X	X	X	X	X			X	X	
2.5TD	SCB	2500	85	1994	2000	X	X	X	X	X	X	X	X	X			X	X	
2.9i V6	BRG	2935	110	1994	2000	X	X	X	X	X		X	X	X		X	X	X	
2.9i V6 24V	BOB	2935	152	1994	2000	X	X	X	X	X	X	X	X	X			X	X	
Scorpio Granada 1985 1994																			
1.8	REC	1796	66	1985	1988	X	X	X	X	X		X	X	X			X	X	
1.8	REC	1796	66	1988	1992	X	X	X	X	X		X						X	
2.0	N8B/N8D	1998	77	1989	1994	X	X	X	X	X		X	X	X		X	X	X	
2.0	N9D/N9B	1998	88	1989	1994	X	X	X	X	X	X	X	X	X		X	X	X	
2.0	NRA/NRC	1993	74	1985	1989	X	X	X	X	X	X	X	X	X		X	X	X	
2.0	NEL/NER	1993	77	1985	1989	X	X	X	X	X		X		X			X	X	
2.0i	EFI	1998	88	1992	1994	X	X	X	X	X	X							X	
2.4i	ARC	2394	96	1986	1989	X	X	X	X	X	X	X		X			X	X	
2.4i	PRC/ARD	2394	92	1990	1994	X	X	X	X	X	X	X	X	X		X	X	X	
2.4i kat	ARV/ARD	2394	92	1990	1994	X	X	X	X	X	X		X	X		X	X	X	
2.5D	XD3P/STR	2498	51	1985	1994	X	X	X	X	X								X	
2.5TD	SFA	2499	68	1989	1994	X	X	X	X	X			X	X		X	X	X	
2.5TD	STR SCB	2500	85	1992	1994	X	X	X	X	X		X	X	X		X	X	X	
2.8i 4x4	PRE	2792	110	1985	1987	X	X	X	X	X	X			X			X	X	
2.9i	BRF/BRE	2935	107	1992	1994	X	X	X	X	X	X	X	X	X		X	X	X	
2.9i 24V Cosworth	BOA	2935	143	1993	1994	X	X	X	X	X	X	X	X	X			X	X	
2.9i 24V Cosworth	BOA	2936	143	1991	1994	X	X	X	X	X	X	X	X	X			X	X	
2.9i 4x4	BRC/BRD	2933	110	1986	1994	X	X	X	X	X	X	X	X	X		X	X	X	
Sierra 1982 1989																			
1.3	JCT	1294	44	1982	1986	X	X	X	X	X				X			X		
1.6	LSA/LSE/LSF	1597	55	1987	1989	X	X	X	X	X			X	X		X	X		
1.6	LCS/LSD	1593	55	1982	1987	X	X	X	X	X				X			X		
1.8	REB/REC/RED	1796	66	1984	1989	X	X	X	X	X			X	X		X	X		
1.8i	R2A/R2C	1796	66	1988	1989	X	X	X	X	X			X	X		X	X		
2.0	NET/NES	1993	77	1982	1989	X	X	X	X	X			X	X		X	X		
2.0 V6	NYT	1999	66	1982	1984	X			X	X									
2.0i	N4A/NRA	1993	85	1985	1989	X	X	X	X	X	X		X	X		X	X		
2.3 V6	YYT	2294	84	1982	1986	X	X	X	X	X				X			X		
2.3D	XD2P/YTT	2304	49	1982	1989	X	X	X	X	X			X	X		X	X		
2.8 XR4i	PRT	2792	110	1982	1985	X	X	X	X	X	X			X			X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
FORD													
Sierra 1989 1993													
1.6	LSE	1597	52	1989	1993	X	X	X	X		X	X	
1.6i	L6B	1597	59	1989	1993	X	X	X	X	X	X	X	X
1.8TD	RFA	1753	55	1989	1993	X	X	X	X		X	X	
2.0	N8C	1998	77	1989	1993	X	X	X	X		X	X	
2.0i	N9C	1998	88	1989	1993	X	X	X	X		X	X	
2.0i 4x4	N9A	1998	92	1989	1993	X	X	X	X		X	X	
2.0i 4x4	N9C	1998	88	1989	1993	X	X	X	X		X	X	
2.9 XR4x4	B4A	2933	110	1989	1993	X	X	X	X		X	X	
2.9 XR4x4	BRD/B4B	2933	107	1989	1993	X	X	X	X		X	X	
RS Cosworth 4x4	N5A	1993	162	1989	1993	X	X	X	X		X	X	
Transit 1986 1992													
1.6	LAC	1593	46	1986	1992	X		X	X		X	X	
1.6	LAT	1593	46	1986	1992	X		X	X		X	X	
2.0	N6T	1994	57	1986	1992	X		X	X		X	X	
2.0	N6TS	1994	60	1986	1992	X		X	X			X	
2.0	NAT	1994	57	1986	1992	X		X	X		X	X	
2.0	NAV	1994	55	1986	1992	X		X	X		X	X	
2.0	NAW	1994	56	1986	1992	X		X	X			X	
2.0	NAX	1994	56	1986	1992	X		X	X			X	
2.5 D	4AB	2496	50	1986	1992	X	X	X	X		X	X	
2.5 TD	4AE	2496	60	1986	1992	X	X	X	X			X	
2.9	B4T	2936	110	1986	1992	X		X	X				
3.0	HXC	0	78	1986	1992	X		X	X				
Transit 1992 1995													
2.0	NBA	1994	66	1992	1995	X	X	X	X			X	X
2.0	NCA	1994	72	1992	1995	X	X	X	X	X		X	X
2.5 D	4BC	2496	52	1992	1995	X	X	X	X			X	X
2.5 D	4DA	2496	59	1992	1995	X	X	X	X			X	X
2.5 D	4EA	2496	74	1992	1995	X	X	X	X			X	X
2.5 D	4FA	2496	52	1992	1995	X	X	X	X			X	X
2.5 D	4GA	2496	63	1992	1995	X	X	X	X			X	X
2.9	BRT	2936	107	1992	1995	X	X	X	X	X		X	X
Transit 1995 2001													
2.0	DOHC NSF	1998	84	1995	2001	X	X	X	X	X	X	X	X
2.0	DOHC NSG	1998	84	1995	2001	X	X	X	X	X	X	X	X
2.0	NBA	1994	66	1992	2001	X	X	X	X			X	X
2.0	NCA	1994	74	1992	2001	X	X	X	X			X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
FORD																			
Transit 1995 2001																			
2.5 D	4FA	2496	51	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
2.5 D	4FB	2496	51	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
2.5 D	4FC	2496	51	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
2.5 D	4FD	2496	51	1997	2001	X	X	X	X	X				X	X		X	X	X
2.5 D	4HB	2496	56	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
2.5 TCI	4GD	2496	63	1995	2001	X	X	X	X	X				X	X		X	X	X
2.5 TD	4EB	2496	74	1995	1997	X	X	X	X	X			X	X	X	X	X	X	X
2.5 TD	4EC	2496	74	1997	2001	X	X	X	X	X				X	X		X	X	X
2.5 TD	4ED	2496	85	1995	2001	X	X	X	X	X				X	X		X	X	X
2.5 TD	4GA	2496	63	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
2.5 TD	4GB	2496	63	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
2.5 TD	4GC	2496	63	1995	2001	X	X	X	X	X			X	X	X	X	X	X	X
Transit 2001																			
2.0 TDi	Duratorq-DI ABFA	1998	74	2001		X	X	X	X	X	X	X		X	X		X	X	
2.0 TDi	Duratorq-DI D3FA	1998	55	2001		X	X	X	X	X	X	X		X	X		X	X	
2.0 TDi	Duratorq-DI F3FA	1998	63	2001		X	X	X	X	X	X	X		X	X		X	X	
2.3 16V	E5FA	2295	107	2001		X	X	X	X	X	X	X			X		X	X	
2.4 TDi	Duratorq-DI D2FA	2402	66	2001		X	X	X	X	X	X	X		X	X		X	X	
2.4 TDi	Duratorq-DI D4FA	2402	88	2001		X	X	X	X	X	X	X		X	X		X	X	
2.4 TDi	Duratorq-DI F4FA	2402	55	2001		X	X	X	X	X	X	X		X	X		X	X	
2.4 TDi	Duratorq-DI HEFA	2402	66	2001		X	X	X	X	X	X	X		X	X		X	X	
2.4 TDi	Duratorq-DI HFFA	2402	88	2001		X	X	X	X	X	X	X		X	X		X	X	
Transit Connect Tourneo 2003																			
1.8 16V	Duratec EYPA	1796	85	2003		X	X	X	X	X				X					
1.8 TDCi	Duratorq HCPA	1753	66	2003		X	X	X	X	X	X	X		X					
1.8 TDDi	Duratorq BHPA	1753	55	2003		X	X	X	X	X				X					
FORD (USA)																			
Aspire 1993																			
1.3	99H/4-80.8	1323	47	1993				X											
Contour 1994																			
2.0 16V	993/4-121 NGA	1988	93	1994				X											
2.5 V6 24V	DURATEC-VE.SEA	2544	127	1994				X											
Crown Victoria 1990																			
4.6 V8	99W/V8-281	4601	149	1990				X											
Escort 1990																			
1.9	99J/4-114	1859	65	1990				X											

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagr.	Engine	Service Reset	Air Cond.	Wir. Diagr.	Repair Times	Fuses & Relays
FORD (USA)																			
Expedition 1996																			
4.6 V8 4X2	4.6-V8-SEFI	4601	160	1996				X											
4.6 V8 4X4	4.6-V8-SEFI	4601	160	1996				X											
5.4 V8 4X2	5.4-V8-SEFI	5407	172	1996				X											
5.4 V8 4X4	5.4-V8-SEFI	5407	172	1996				X											
Explorer 1990																			
4.0 V6	4.0-V6-OHV-SEFI	4015	115	1990				X											
5.0 V8	5.0-V8-SEFI	4942	157	1996				X											
Mustang 1993																			
3.8 V6	994/V6-232	3797	112	1993				X											
4.6 V8	99W/V8-281	4601	168	1993				X											
Probe 1992																			
2.0 16V	99A/4-122	1983	88	1992				X											
2.5 V6 24V	99B/V6-153	2497	120	1992				X											
Taurus 1996																			
3.0 V6	99U/V6-182	2986	108	1996				X											
3.0 V6 24V	99Y/V6-182	2986	149	1996				X											
3.2 V6 24V	99P/V6-195	3196	164	1996				X											
Windstar 1994																			
3.0 V6	3.0-V6-SEFI	2984	112	1995									X			X			
3.8 V6	3.8-V6-SEFI	3797	149	1994									X			X			
HONDA																			
Accord 1999 2002																			
1.6	D16B6	1590	65	1999	2002	X	X	X	X	X				X			X	X	
1.8	F18B2	1850	65	1999	2002	X	X	X	X	X				X			X	X	
2.0	F20B6	1997	109	1999	2002	X	X	X	X	X				X			X	X	
2.0 D	20T2N	1994	77	1999	2002	X	X	X	X	X				X			X	X	
2.2 Type R	H22A7	2157	157	1999	2002	X	X	X	X	X				X			X	X	
Accord 2003																			
2.0 i-VTEC	K20A6	1998	114	2003		X	X	X	X	X				X				X	
2.2 i-CTDi	N22A1	2204	103	2004		X	X	X	X	X				X					
2.4 i-VTEC	K24A3	2354	140	2003		X	X	X	X	X				X				X	
Accord 1985 1989																			
1.6	A16A1	1598	65	1985	1989	X	X	X	X	X				X			X		
1.8		1834	81	1985	1989	X	X		X	X									
1.8 16V		1834	96	1985	1989	X	X		X	X									
2.0	A20A1	1955	78	1985	1989	X	X	X	X	X				X			X		

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
HONDA													
Accord 1985 1989													
2.0 16V	B20A8	1958	101	1985	1989	X	X	X	X		X		X
2.0i	F20A4	1955	100	1985	1989	X	X	X	X	X		X	
2.0i	A20A4	1955	89	1985	1989	X	X	X	X		X		X
Accord 1993 1999													
1.8i	F18A3	1850	85	1995	1999	X	X	X		X	X	X	X
2.0i 16V	F20B3	1997	100	1994	1999	X	X	X					X
2.0i 16V	F20Z1	1996	96	1993	1999	X	X	X	X	X		X	X
2.0i 16V	F20Z2	1996	85	1993	1999	X	X	X	X	X		X	X
2.2i 16V	F22B5	2156	110	1993	1999	X	X	X	X	X		X	X
2.3i 16V	H23A3	2259	116	1993	1999	X	X	X	X	X		X	X
Accord Tourer 2003													
2.0 i-VTEC	K20A6	1998	114	2003		X	X	X	X		X		
2.2 i-CTDi	N22A1	2204	103	2004		X	X	X	X		X		
2.4 i-VTEC	K24A3	2354	140	2003		X	X	X	X		X		
Accord, -Wagon Aerodeck 1989 1993													
1.8	F18A	1849	73	1989	1993	X	X		X				
2.0	F20A	1996	66	1989	1993	X	X		X				
2.0	F20A	1996	81	1989	1993	X	X	X	X		X		
2.0i	F20A	1996	98	1989	1993	X	X	X	X		X		
2.0i	F20A	1996	110	1989	1993	X	X	X	X		X		
2.2i	F22A3	2155	110	1989	1993	X	X	X	X		X		
Civic 1995 2001													
1.4i	D14A5	1395	55	1995	2001	X	X	X	X		X		X
1.4i	D14A3	1396	55	1996	2001	X	X	X	X		X	X	X
1.4i S	D14A4	1396	66	1996	2001	X	X	X	X		X	X	X
1.4i S	D14A2	1396	66	1995	2001	X	X	X	X	X		X	X
1.5i LS	D15Z6	1493	85	1996	2001	X	X	X	X	X		X	X
1.5i VE	D15Z3	1493	66	1995	2001	X	X	X	X	X			X
1.6	D16Y8	1590	0	1996	2001	X	X	X	X		X		X
1.6 VTi	B16A2	1595	118	1996	2001	X	X	X	X		X	X	X
1.6i	D16Y7	1590	77	1996	2001	X	X	X	X		X		X
1.6i ES	D16Y5	1590	84	1995	2001	X	X	X	X		X	X	X
1.6i LS	D16Y3	1590	83	1995	2001	X	X	X	X		X		X
1.6i SR	D16Y2	1590	93	1995	2001	X	X	X	X		X		X
1.6i SR	D16Z9	1590	92	1996	2001	X	X	X	X		X	X	X
Civic 1987 1991													
1.3	D13B1	1343	55	1987	1991	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
HONDA																			
Civic 1987 1991																			
1.5	D15B1	1493	69	1987	1991	X	X	X	X	X	X			X				X	X
1.6i	D16A6	1590	80	1987	1991	X	X	X	X	X				X				X	X
1.6i	D16A9	1590	95	1987	1991	X	X	X	X	X				X				X	X
1.6i 16V	D16Z5	1590	91	1987	1991	X	X	X	X	X	X			X				X	X
1.6i 4x4	D16A6	1590	79	1987	1991	X	X	X	X	X				X				X	X
1.6i VTEC	B16A	1590	118	1989	1991	X	X	X	X	X				X				X	X
Civic 1991 1995																			
1.3 16V	D13B	1343	55	1991	1995	X	X	X	X	X	X			X				X	X
1.5i 16V	D15B	1493	66	1991	1995	X	X	X	X	X	X			X				X	X
1.5i 16V	D15B7	1493	75	1994	1995	X	X	X	X	X	X			X				X	X
1.6i 16V	D16Z6	1590	92	1991	1995	X	X	X	X	X				X				X	X
1.6i 16V	B16A2	1590	118	1991	1995	X	X	X	X	X				X				X	X
1.6i 16V 4x4	B16A	1590	118	1991	1995	X	X		X	X				X					X
1.6i 16V 4x4	D16Z	1590	92	1991	1995	X	X		X	X				X					X
Civic 2001 2006																			
1.4	D14Z5	1396	67	2001		X	X	X	X	X				X					X
1.5	D15Y2	1493	68	2001		X	X	X	X	X				X					X
1.5	D15Y3	1493	68	2001		X	X	X	X	X				X					X
1.5	D15Y5	1493	68	2001		X	X	X	X	X				X					X
1.5	D15Y6	1493	68	2001		X	X	X	X	X				X					X
1.5 VTEC	D15Y4	1493	68	2001		X	X	X	X	X				X					X
1.6 VTEC	D16V2	1590	81	2001		X	X	X	X	X				X					X
1.6 VTEC	D16W7	1590	81	2001		X	X	X	X	X				X					X
1.6 VTEC	D16W8	1590	81	2001		X	X	X	X	X				X					X
1.7	D17A1	1668	67	2001		X	X	X	X	X				X					X
1.7	D17A3	1668	67	2001		X	X	X	X	X				X					X
1.7	D17Z1	1668	67	2001		X	X	X	X	X				X					X
1.7 CTDi	4EE2	1686	74	2002		X	X	X	X	X				X		X			X
1.7 VTEC	D17A2	1668	67	2001		X	X	X	X	X				X					X
1.7 VTEC	D17A4	1668	67	2001		X	X	X	X	X				X					X
1.7 VTEC	D17A5	1668	67	2001		X	X	X	X	X				X					X
2.0 Type R	K20A2	1998	148	2001		X	X	X	X	X				X					X
Civic Shuttle 1988 1991																			
1.4	D14A1	1396	66	1988	1991	X	X	X	X	X				X				X	
1.5 4WD	D15A7	1488	66	1988	1991	X	X	X	X	X				X					
1.6i 4WD	D16A7	1590	80	1988	1991	X	X	X	X	X				X					

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
HONDA																			
Concerto 1989 1994																			
1.4	D14A1	1396	65	1989	1994	X	X	X	X	X				X				X	
1.5	D15B2	1493	67	1989	1994	X	X	X	X	X	X			X				X	
1.6	D16Z1	1590	77	1989	1994	X	X	X	X	X				X				X	
1.6 4x4	D16Z1	1590	77	1989	1994	X	X	X	X	X				X				X	
1.6i	D16A8	1590	88	1989	1994	X	X	X	X	X				X				X	
1.6i 4x4	D16A8	1590	88	1989	1994	X	X	X	X	X				X					
CR-V 1997 2002																			
2.0i 16V	B20B1	1972	94	1997	2002	X	X	X		X				X					X
2.0i 16V	B20B3	1972	92	1997	2002	X	X	X		X				X					X
2.0i 16V	B20B9	1972	92	1997	2002	X	X	X		X				X					X
2.0i 16V	B20Z1	1972	92	1997	2002	X	X	X		X				X					X
CR-V 2002																			
2.0 16v DOHC i-VTEC	K20A4	1998	110	2002		X	X	X	X	X				X					
2.0 16v DOHC i-VTEC	K20A5	1998	110	2002		X	X	X	X	X				X					
2.2 16v DOHC i-CTDi	N22A2	2204	103	2005		X	X	X	X	X				X					
2.4 16v DOHC i-VTEC	K24A1	2354	116	2002		X	X	X	X	X				X					
CRX 1992 1999																			
1.5i 16V	D15B7	1493	76	1992	1999	X	X	X	X	X				X					X
1.6i 16V	B16A2	1590	118	1992	1999	X	X	X	X	X				X			X		X
1.6i 16V	D16Z6	1590	92	1992	1999	X	X	X	X	X				X			X		X
FR-V 2005																			
1.7 16v SOHC VTEC	D17A2	1668	92	2005		X	X	X	X	X				X					
2.0 16v DOHC i-VTEC	K20A9	1998	110	2005		X	X	X	X	X				X					
2.2 16v DOHC i-CTDi	N22A1	2204	103	2005		X	X	X	X	X				X					
HR-V 1999																			
1.6i SOHC	D16W1	1590	77	1999		X	X	X	X	X				X					X
1.6i SOHC VTEC	D16W5	1590	91	2000		X	X	X	X	X				X					X
Insight 2000																			
1.0i VTec 12V	ECA1 + MF2	995	57	2000		X	X	X		X				X					
Integra 1997																			
Type R 1.8i	B18CS	1797	140	1997				X											
Integra 1985 1989																			
1.5	D15A1	1488	56	1985	1989	X	X	X	X	X				X					
1.6		1590	73	1985	1989	X	X		X	X									
1.6	D16A2	1590	88	1985	1989	X	X	X	X	X				X					

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
HONDA													
Jazz 2001													
1.2	L12A1	1246	62	2001		X	X	X	X		X		X
1.3	L13A1 / L13A2	1339	62	2001		X	X	X	X		X		X
Legend 1987 1990													
2.5 V6	C25A2	2494	127	1987	1990	X	X	X	X		X	X	X
2.7 V6	C27A1	2675	132	1987	1990	X	X	X	X		X	X	X
Legend 1990 1996													
3.2i V6	C32A	3206	173	1990	1996	X	X		X		X		X
3.2i V6	C32A	3206	151	1990	1996	X	X	X	X		X	X	X
3.5 V6	C35A2	3474	151	1996	1996	X	X	X					X
Logo 2000 2001													
1.3	D13B7	1343	49	2000	2001	X	X	X	X		X		X
NS-X 1990 - 1990 2005													
3.0 V6 (201 kW)	C30A3/A4	2977	201	1990				X				X	X
3.2 V6 (216 kW)	C32A	3179	216	1997				X				X	
Prelude 1987 1991													
2.0	B20A4	1958	81	1987	1991	X	X	X	X		X	X	X
2.0i 16V	B20A1	1958	101	1987	1991	X	X	X	X		X	X	X
Prelude 1991 1997													
2.0i 16V	F20A4	1996	98	1991	1997	X	X	X	X	X	X	X	X
2.2i 16V VTEC	H22A	2156	136	1991	1997	X	X	X	X		X	X	X
2.3i 16V	H23A2	2259	118	1991	1997	X	X	X	X		X	X	X
Shuttle 1994 - 1994													
2.2i 16V (107 kW)	F22B	2156	107	1994					X				
2.3i 16V	F22B8	2254	110	1995				X					
Stream 2001 2006													
1.7 iVTEC	D17A2	1668	93	2001		X	X	X	X		X		
2.0 iVTEC	K20A2	1998	116	2001		X	X	X	X		X		
HYUNDAI													
Accent 1998 2003													
1.3	G4EF	1341	63	1998	2003	X	X	X	X		X	X	X
1.5 CRDi	D3EA	1493	60	2002	2003	X	X	X	X		X		
1.5 DOHC	G4EB	1495	75	1998	2003	X	X	X	X	X	X	X	X
1.5 SOHC	G4EG	1495	66	1998	2003	X	X	X	X		X	X	X
Accent Pony, Excel 1994 1998													
1.3i	G4EH	1341	62	1994	1998	X	X	X	X		X	X	X
1.5i	G4EK	1495	65	1994	1998	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diagram	
HYUNDAI													
Accent Pony, Excel	1994	1998											
1.5i 16V	G4FK	1495	73	1995	1998	X	X	X	X	X		X	X
Atos	2004												
1.1 12V	G4HD	1085	43	2004									
Atos Atoz	1998	2004											
1.0 12V	G4HC	999	41	1998	2004	X	X	X		X		X	X
1.1 12V (NEW MODEL)	G4HD	1085	43	2004		X		X	X				X
Coupe	1996	2001											
1.6	G4GR	1599	84	1996	2001	X	X	X		X		X	X
2.0	G4GF	1975	102	1996	2001	X	X	X		X		X	X
Coupe	2002												
1.6	G4GC	1599	77	2002		X	X	X		X			
2.0	G4AC	1975	102	2002		X	X	X		X			
2.7 V6	G6BA	2656	123	2002		X	X	X		X			
Elantra	1999												
1.6 16V	G4ED	1599	79	1999		X	X	X		X			X
1.8 16V	G4GB	1796	90	1999		X	X	X		X			X
2.0 16V	G4GC	1975	104	1999		X	X	X		X			X
2.0 CRDi		1991	83	2003		X							
Excel	1989	1994											
1.5	G4D	1468	53	1989	1992	X	X	X		X			
1.5i	G4D	1468	62	1989	1994	X	X	X	X	X			
Getz	2002												
1.1 SOHC	G4HD	1085	46	2002		X	X	X		X			X
1.3 SOHC	G4EA	1341	63	2002		X	X	X		X			X
1.5 DOHC	G4EK	1495	77	2002		X	X	X		X			X
1.6 DOHC	G4EB	1599	77	2002		X	X	X		X			X
H-1 H-200, Starex, Satellite	1998												
2.4	G4BS	2351	82	1998		X	X	X		X			X
2.4 4x4	G4BS	2351	82	1998		X	X	X		X			X
2.5 TD	D4BF	2476	59	1998		X	X	X		X			X
2.5 TD 4x4	D4BF	2476	59	1998		X	X	X		X			X
2.6 D	D4BB	2607	59	1998		X	X	X		X			X
2.6 D 4x4	D4BB	2607	59	1998		X	X	X		X			X
H-100	1994	2001											
2.4	G4CS	2351	90	1993	2001	X	X	X		X			X
2.5 D	D4BA	2477	57	1993	2001	X	X	X		X			X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagn.	Fuses & Relays
HYUNDAI													
H-100 1994 2001													
2.5 D	D4BX	2477	55	1993	2001	X	X	X	X		X		X
2.5 TD	D4BF	2477	59	1997	2001	X	X	X			X		X
Lantra 1991 1996													
1.5	G4DJ	1468	55	1991	1993	X	X	X	X		X		
1.5i	G4DJ	1468	63	1991	1996	X	X	X	X		X		X
1.6i 16V	4G61	1596	84	1991	1996	X	X	X	X		X		X
1.6i 16V Aut.	4G61	1596	84	1991	1996	X	X	X	X		X		X
1.8i 16V GT	G4CN	1836	93	1992	1996	X	X	X	X		X		X
Lantra 1996 2001													
1.5 12V	G4GK	1495	65	1996	2001	X	X	X	X		X		X
1.6 16V	G4GR	1599	84	1996	2001	X	X	X	X		X		X
1.8 16V	G4GM	1795	94	1996	2001	X	X	X	X		X		X
2.0 16V	G4GF	1975	102	1996	2001	X	X	X	X		X		X
Matrix 2002													
1.5 CRDi	D4FA	1493	75	2005		X			X				
1.6	G4GD	1599	77	2002		X	X	X	X		X		X
1.8	G4GB	1796	90	2002		X	X	X	X		X		X
Pony 1985 1994													
1.2	4G36	1238	41	1978	1982	X	X	X	X		X		
1.3	G4AG	1298	49	1986	1986	X	X	X	X		X		
1.4	4G33	1439	50	1978	1982	X	X	X	X		X		
1.5	G4AJ	1468	64	1986	1986	X	X	X	X		X		
1.5	G4DJ	1468	53	1990	1994	X	X	X	X		X		
1.5i	G4DJ	1468	62	1989	1994	X	X	X	X		X	X	
X2 1.3	4G13	1298	48	1990	1994	X	X	X	X		X	X	
X2 1.5i	4G15	1468	62	1990	1994	X	X	X	X		X	X	
Santa Fe 2000													
2.0 16V	G4JP	1997	100	2000		X	X	X	X		X		X
2.4 16V 4x4	G4JS	2351	110	2000		X	X	X	X		X		X
2.7 24V V6 4x4	G6BA	2656	125	2000		X	X	X	X		X		X
Scoupe 1990 1996													
1.5	4G15	1468	57	1990	1992	X	X	X	X		X	X	X
1.5i	G4D	1468	62	1990	1992	X	X	X	X		X	X	X
1.5i 12V	G4EK	1495	65	1992	1996	X	X	X	X		X	X	X
1.5i GT Turbo 12V	G4EK-TC	1495	85	1993	1995	X	X	X	X		X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagn.	Engine	Service Reset	Air Cond.	Wir. Diagn.	Repair Times	Fuses & Relays
HYUNDAI																			
Sonata I 1988 1993																			
1.8i	G4CM	1795	70	1988	1993	X	X	X	X	X	X			X				X	
1.8i DOHC (COPIED)	4G62	1836	93	1993	1999	X	X	X	X	X	X							X	X
1.8i SOHC (COPIED)	4G62	1795	93	1993	1999	X	X	X	X	X	X							X	X
2.0 DOHC 16V (COPIED)	G4JP	1997	100	1999	2001	X	X	X	X	X	X							X	X
2.0i	G4CP	1997	75	1988	1993	X	X	X	X	X	X			X				X	
2.0i 16V	G4CP	1997	96	1991	1993	X	X	X	X	X	X			X				X	
2.0i DOHC (COPIED)	4G63	1997	92	1993	1997	X	X	X	X	X	X							X	X
2.0i SOHC (COPIED)	4G63	1997	77	1993	1999	X	X	X	X	X	X							X	X
2.4i	G4CS	2351	84	1988	1991	X	X	X	X	X				X				X	
2.5 V6 (COPIED)	G6BV	2493	118	1999	2001	X	X	X	X	X	X							X	X
3.0i V6	G6AT	2972	107	1990	1993	X	X	X	X	X	X			X				X	
3.0i V6 (COPIED)	6G72	2972	107	1993	1999	X	X	X	X	X	X							X	X
Sonata II 1993 1998																			
1.8i	G4CM	1795	72	1993	1998	X	X	X						X					X
1.8i 16V	G4CM	1795	93	1993	1998	X	X	X						X					X
2.0i	G4CP	1997	77	1993	1996	X	X	X						X			X	X	
2.0i	G4CP-M	1997	70	1996	1998	X	X											X	
2.0i 16V	G4CP-D	1997	102	1993	1996	X	X	X						X			X	X	
2.0i 16V	G4CP-DM	1997	92	1996	1998	X	X	X						X			X	X	
3.0i V6	G6AT	2972	107	1993	1998	X	X	X						X			X	X	
Sonata III 1998 2001																			
2.0 16V	G4JP	1997	100	1998	2001	X	X	X		X				X					X
2.4 16V	G4JS	2351	105	1998	2001	X	X							X					X
2.5 V6	G6BV	2493	118	1998	2001	X	X	X		X				X					X
Sonata IV 2001 2005																			
2.0	G4JP	1977	96	2001	2005	X	X	X	X	X				X					
2.4	G4JS	2351	86	2001	2005	X	X	X	X	X				X					
2.7 V6	G6BA	2656	126	2001	2005	X	X	X	X	X				X					
Sonata V 2005																			
2.4 16V		2351	118	2005															
3.3 V6 24V		3342	171	2005															
Stellar 1986 1991																			
1.4	4 G	1439	50	1986	1991			X	X	X				X					
1.4 L	4 G 33	1439	50	1983	1986			X	X	X				X					
1600	4 G 32	1597	55	1984	1986			X	X	X				X					
1600	4 G 32	1597	55	1986	1991			X	X	X				X					
2.0	4 G 63	1997	61	1983	1986			X	X	X				X					

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diagram	
HYUNDAI													
Stellar 1986 1991													
2.0	G 63 B	1997	61	1986	1990		X	X	X		X		
Trajet 1999													
2.0 16V	G4JP	1997	100	1999		X	X	X	X		X		X
2.7 24V V6	G6BA	2656	127	1999		X	X	X	X		X		X
XG 1997													
25	G6BV	2493	120	1997	2003	X	X	X		X			
30	G6AT	2972	137	1997	2003	X	X	X		X			
ISUZU													
Amigo 1988													
2.6	4ZEI	2559	84	1988	1991		X						
Campo 1981													
2.3	4 ZD1	2254	69	1988		X							
2.3 4X4	4 ZD1	2254	69	1988		X							
2.5 D TFR54/TF54	D. 4 JA1	2499	56	1989		X							
Trooper 1983													
2.6i +VAN	UBS17	2559	84	1988									
2.8 TD +VAN	UBS55	2771	74	1987			X						
3.1 TD	4JG 2T	3059	84	1992			X						
3.2 V6 24V	6VD1	3165	130	1992			X						
IVECO													
Daily 1989 1996													
30.8	8140.07	2499	55	1989	1996	X	X	X		X			X
35.10	8140.27	2499	76	1989	1996	X	X	X		X			X
35.10W / 40.10W (4x4)	8140.27S	2499	76	1989	1996	X	X	X		X			X
35.12	8140.47	2499	85	1991	1996	X	X	X		X			X
35.8	8140.07	2499	55	1989	1996	X	X	X		X			X
40.8	8140.07	2499	55	1989	1991	X	X	X		X			X
45.10	8140.27	2499	76	1989	1996	X	X	X		X			X
49.10	8140.27	2499	76	1989	1996	X	X	X		X			X
49.12	8140.47	2499	85	1991	1996	X	X	X		X			X
59.12	8140.47	2499	85	1991	1996	X	X	X		X			X
A45.12	8140.47	2499	85	1991	1996	X	X	X		X			X
Daily 1996 1999													
30.10	8140.23.37	2800	76	1996	1999	X	X	X	X	X			X
30.8	8140.67F	2499	60	1996	1998	X	X	X	X	X			X
35.10	8140.23.37	2800	76	1996	1999	X	X	X	X	X			X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
IVECO													
Daily 1996 1999													
35.10	8140.47R	2499	80	1992	1997	X	X	X	X	X	X		X
35.10W / 40.10W (4x4)	8140.23.38	2499	76	1996	1999	X	X	X	X	X	X		X
35.12	8140.43	2800	90	1996	1999	X	X	X	X	X	X		X
35.8	8140.67F	2499	60	1996	1998	X	X	X	X	X	X		X
40.10 / A40.10 / A40.10P	8140.23.37	2800	76	1996	1999	X	X	X	X	X	X		X
40.12 / A40.12 / A40.12P	8140.43	2800	90	1996	1999	X	X	X	X	X	X		X
40.8	8140.67F	2499	60	1996	1999	X	X	X	X	X	X		X
45.10 / A45.10 / A45.10P	8140.23.37	2800	76	1996	1999	X	X	X	X	X	X		X
45.12 / A45.12 / A45.12P	8140.43	2800	90	1996	1999	X	X	X	X	X	X		X
49.10	8140.47R	2499	80	1992	1997	X	X	X	X	X	X		X
49.10 / A49.10 / A49.10P	8140.23.37	2800	76	1996	1999	X	X	X	X	X	X		X
49.12	8140.43	2800	90	1996	1999	X	X	X	X	X	X		X
59.12	8140.43	2800	90	1996	1999	X	X	X	X	X	X		X
Daily 1999													
29 L11	8140.43C	2800	81	1999	2002	X	X	X	X	X	X		X
29 L9	8140.63	2800	65	1999	2002	X	X	X	X	X	X		X
35 C11	8140.43C	2800	81	1999	2002	X	X	X	X	X	X		X
35 C13	8140.43S	2800	92	1999		X	X	X	X	X	X		X
35 C9	8140.63	2800	65	2001		X	X	X	X	X	X		X
35 S11	8140.43C	2800	81	1999		X	X	X	X	X	X		X
35 S13	8140.43S	2800	92	1999		X	X	X	X	X	X		X
35 S9	8140.63	2800	65	2001		X	X	X	X	X	X		X
40 C11	8140.43C	2800	81	1999		X	X	X	X	X	X		X
40 C13	8140.43S	2800	92	2001		X	X	X	X	X	X		X
40 L9	8140.63	2800	65	1999		X	X	X	X	X	X		X
45 C11	8140.43C	2800	81	1999		X	X	X	X	X	X		X
45 C13	8140.43S	2800	92	2001		X	X	X	X	X	X		X
50 C11	8140.43C	2800	81	1999	2002	X	X	X	X	X	X		X
50 C13	8140.43S	2800	92	1999		X	X	X	X	X	X		X
JAGUAR													
S-Type 1999													
test jag	huge	8888	33	1999		X		X	X				
V6 2.5L	AJ-V6	2497	150	2002		X	X	X	X		X		X
V6 2.7L D	D-V6	2720	153	2004		X	X	X	X				
V6 3.0L	AJ-V6	2967	179	1999	2002	X	X	X	X		X		X
V6 3.0L	AJ-V6	2967	179	2002		X	X	X	X		X		X
V8 4.0L	AJ-V8	3996	210	1999	2002	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
JAGUAR													
S-Type 1999													
V8 4.2L	AJ-V8	4196	224	2002		X	X	X	X	X			X
V8 4.2L Type R	AJ-V8	4196	298	2002		X	X	X	X	X			X
XJ 2003													
V6 3.0L	AJ-V6	2967	179	2003		X	X						
V8 3.5L	AJ-V8	3555	196	2003		X	X						
V8 4.2L	AJ-V8	4196	224	2003		X	X						
V8 4.2L Type R	AJ-V8	4196	298	2003		X	X						
XJ 12 1993 1994													
XJ-12	V12-HE	5343	217	1984	1994	X	X	X		X			
XJ 12 X300 1994 1997													
XJ-12	V12	5993	229	1994	1997	X	X	X		X			
XJ 6 1986 1994													
XJ-6 2.9	AJ-6	2919	123	1986	1990	X	X	X		X			
XJ-6 3.2	AJ-6	3239	149	1990	1994	X	X	X		X			
XJ-6 3.6	AJ-6	3590	165	1986	1994	X	X	X		X			
XJ-6 4.0	AJ-6	3890	175	1989	1994	X	X	X		X			
XJ 6 X300 1994 1997													
XJ-6 3.2	AJ16	3239	155	1994	1997	X	X	X		X			
XJ-6 4.0	AJ16	3980	177	1994	1997	X	X	X		X			
XJ-6 4.0 Super Charged	AJ16	3980	235	1994	1997	X	X	X		X			
XJ V8 X308 1998 2002													
XJ R	AJ26	3996	276	1998		X	X	X		X			
XJ8 3.2	AJ26	3248	180	1998		X	X	X		X			
XJ8 4.0	AJ26	3996	216	1998		X	X	X		X			
X-Type X400 2001													
V6 2.0L	V6 2.0	2099	115	2002		X	X	X		X			
V6 2.5L	V6 2.5	2495	144	2001		X	X	X		X			
V6 3.0L	V6 3.0	2967	169	2001		X	X	X		X			
JEEP													
Cherokee 1991 2001													
2.5	HX	2464	89	1991	2001	X	X	X	X	X		X	X
2.5 TD	425CLIRX (23B)	2499	85	1995	2001	X	X	X	X	X		X	
4.0	MX	3966	135	1991	2001	X	X	X	X	X		X	X
Cherokee 2001													
2.4	ED1	2429	108	2001		X	X	X		X			
2.5 CRD	ENJ	2499	105	2001		X	X	X		X			

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diag.	
JEEP													
Cherokee 2001													
2.8 CRD	ENR	2776	110	2002		X	X	X		X			
3.7 V6	EKG	3700	150	2001		X	X	X		X			
Grand Cherokee 1992 1999													
2.5 TD	425CLIRX (23B)	2499	85	1992	1999	X	X	X	X	X		X	X
4.0	MX	3966	135	1992	1999	X	X	X	X	X		X	X
5.2 V8	M5.2LT	5211	158	1992	1999	X	X	X	X	X		X	X
5.9 V8	M5.9LT	5899	169	1998	1999	X	X	X	X	X		X	
Wrangler 1996													
2.5	HX	2464	90	1996			X					X	
4.0	MX	3966	135	1996			X					X	
KIA													
Besta 1994 2003													
2.2 D	HW	2184	48	1994	2003	X	X	X	X	X			X
Carens 1999 2002													
1.8 DOHC	TBD	1794	93	1999	2002	X	X	X	X	X			
Carnival Sedona 1999													
2.5 V6	GV6	2497	110	2001		X	X	X	X	X			
2.5 V6	KV6	2497	121	1999	2001	X	X	X	X	X			
2.9 CRDi	KJ TCi	2902	106	2001		X	X	X	X	X			
2.9 TDi	J3 TCi	2902	93	1999	2001	X	X	X	X	X			
Cerato 2004													
1.6	G4GD	1599	77	2004		X	X	X	X	X			
2.0	G4GC	1975	105	2004		X	X	X	X	X			
2.0D	D4DA	1991	82	2004		X	X	X	X	X			
Clarus Credos 1996 2000													
1.8i 16V	T8 DOHC	1793	85	1996	2000	X	X	X	X	X		X	X
2.0i 16V	FE DOHC	1998	98	1996	2000	X	X	X	X	X		X	X
Magentis Optima 2001													
2.0 DOHC	G4JP	1997	100	2001		X	X	X	X	X			X
2.4 DOHC	G4JS	2351				X		X					X
2.5 V6	G6BV	2493	124	2001		X	X	X	X	X			X
Opirus 2003													
3.5 V6	G6CU	3497	149	2003		X	X	X		X			
Picanto 2004													
1.0	G4HE	999	45	2004		X				X			
1.1	G4HG	1086	48	2004		X	X	X		X			

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagn.	Repair Times	Fuses & Relays
KIA																			
Picanto 2004																			
1.1 CRDi VGT	D3FA	1120	55	2005		X		X											
Pregio 2001																			
2.5 TCi	D4BH	2476	69	2001		X		X		X				X					
2.7 D	J2	2665	67	2001		X		X		X				X					
3.0 D	JTA	2957		2001		X		X		X				X					
Pride 1991 2000																			
1.1	B1	1139	41	1993	2000	X	X	X	X	X				X			X	X	
1.3	B3	1324	47	1993	2000	X	X	X	X	X				X			X	X	
1.3i 16V	B3	1324	47	1993	2000	X	X	X	X	X				X			X	X	
Rio 2000 2005																			
1.3	A3E	1343	55	2000	2005	X	X	X	X	X	X			X					
1.5	A5D	1493	72	2000	2005	X	X	X	X	X	X			X					
Sephia 1993 1997																			
1.5	B5	1498	74	1993	1997	X	X	X	X	X	X			X			X	X	
1.5 DOHC	B5	1498	74	1993	1997	X	X	X	X	X	X			X			X	X	
1.6 16V	B6	1597	78	1993	1997	X	X	X	X	X				X			X	X	
1.6 8V	B6	1597	60	1993	1997	X	X	X	X	X				X			X	X	
Sephia II Shuma 1997 2004																			
1.5 16V	BFD	1498	59	1998	2003	X	X	X	X	X									
1.6 16V	A6 DOHC	1594	79	2000	2004	X	X	X	X	X	X			X					
1.8 16V	TED	1793	84	1998	2003	X	X	X	X	X				X					
Sorento 2002																			
2.4 16V	G4JSG	2351	102	2002		X	X	X		X				X				X	
2.5 CRDi	D4CB	2497	103	2002		X	X	X		X								X	
3.5 V6 24V	6G74	3497	143	2002		X	X	X		X				X				X	
Sportage 1994 2003																			
2.0	FE SOHC	1998	70	1994	1999	X	X	X	X	X	X		X	X		X	X	X	
2.0 16V	FE DOHC	1998	94	1994	2003	X	X	X	X	X	X		X	X		X	X	X	
2.0 TD	RF-TCi	1998	61	1997	2003	X	X	X	X	X			X			X	X	X	
LADA																			
Niva 1978																			
1.6 2121	2121	1568	57	1978	1994														
1.7i	21214 OHC	1689	59	1993				X											
1.9D	XUD9A	1905	47	1993				X											
Samara & Diva Riva 1986																			
1.1	2108.1	1099	41	1988	2002	X	X	X	X	X				X					

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
LADA													
Samara & Diva Riva 1986													
1.3	2108.	1288	48	1986	1996	X	X	X	X	X	X		
1.3	2109	1288	48	1987	2002	X	X	X	X	X	X		
1.5	2108.3	1499	54	1988		X	X	X	X	X	X		
1.5	2108.3	1499	55	1988		X		X	X				
1.5	2109.3	1499	54	1990	2002	X	X	X	X	X	X		
LANCIA													
Dedra 1989 1999													
1.6 16V	182 A4.000	1581	76	1998	1999	X	X	X	X				
1.6 IE	159 B9.000	1581	66	1994	1998	X	X	X	X		X		
1.6 IE	835 A1.000	1581	65	1989	1994	X	X	X	X	X	X		X
1.6 IE kat.	835 A1.046	1581	65	1989	1994	X	X	X	X	X	X	X	X
1.6 IE kat.	835 C1.000	1581	55	1991	1994	X	X	X	X	X	X	X	X
1.8 16V	182 A2.000	1747	83	1996	1998	X	X	X	X				
1.8 16V VVT	183 A1.000	1747	96	1996	1999	X	X	X	X				X
1.8 IE	835 A2.000	1756	80	1989	1994	X	X	X	X	X	X	X	X
1.8 IE	836 A5.000	1756	74	1994	1996	X	X	X	X		X	X	X
1.8 IE kat.	835 A2.046	1756	77	1989	1994	X	X	X	X	X	X	X	X
1.9 Tds	160 D1.000	1929	66	1996	1999	X	X	X	X				
1.9 Tds	835 A4.000	1929	66	1989	1998	X	X	X	X		X	X	X
2.0 16V	836 A3.000	1995	102	1994	1998	X	X	X	X		X	X	X
2.0 IE	835 A5.000	1995	86	1989	1994	X	X	X	X	X	X	X	X
2.0 IE kat.	835 A5.045/6	1995	83	1989	1994	X	X	X	X	X	X	X	X
2.0 IE Turbo	835 A8.000	1995	132	1991	1994	X	X	X	X		X		X
2.0 IE Turbo Integrale	835 A7.000	1995	124	1991	1994	X	X	X	X		X		X
2.0 IE Turbo Integrale (NOT USED)	835 A5.700	1995	130	1991	1994	X	X	X	X		X		
2.0 IE Turbo Integrale kat. (NOT USED)	835 A7.046	1995	121	1991	1994	X	X	X	X		X		
2.0 IE Turbo kat.	835 A8.046	1995	119	1991	1994	X	X	X	X		X		
Delta 1982 1993													
1.3	831 A2.000	1301	55	1982	1993	X	X	X	X		X	X	
1.5	831 B1.000	1498	63	1982	1993	X	X	X	X		X	X	
1.6 GT	831 B7.000	1585	80	1986	1993	X	X	X	X		X	X	
1.6 GT IE	149 C2.000	1585	66	1986	1993	X	X	X	X		X	X	
1.6 HF Turbo IE	831 B3.000	1585	96	1986	1993	X	X	X	X		X	X	
1.6 HF Turbo IE	831 B7.046	1585	97	1991	1993	X	X	X	X		X	X	
2.0 HF 4x4	831 B5.000	1995	122	1986	1987	X		X	X				
2.0 HF Integrale 16V	831 C5.000/046	1995	137	1987	1992	X	X	X	X			X	
HF Integrale	831 E5.000	1995	154	1991	1992	X	X	X	X	X		X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
LANCIA													
Delta 1982 1993													
HF Integrale 16V	831 D5.000	1995	144	1989	1992	X	X	X	X	X			X
Delta 1993 1999													
1.4	160 A1.046	1372	51	1993	1994	X	X	X	X		X	X	X
1.4	836 A4.000	1372	51	1994	1999	X	X	X	X			X	X
1.6	835 C1.000	1581	55	1993	1999	X	X	X	X	X	X	X	X
1.6 16V	182 A4.000	1581	76	1996	1999	X	X	X	X	X	X	X	X
1.6 16V (NOT USED)	182 A6.000	1581	66	1996	1999	X	X	X	X				X
1.8	835 C2.000	1756	76	1993	1996	X	X	X	X	X	X	X	X
1.8	835 C4.000	1756	66	1993	1999	X	X	X	X	X	X	X	X
1.8	836 A5.000	1756	74	1993	1999	X	X	X	X	X	X		X
1.8	836 A6.000	1756	66	1993	1999	X	X	X	X		X	X	X
1.8 (NOT USED)	836 C4.000	1756	66	1993	1999	X	X	X	X		X		X
1.8 16V	182 A2.000	1747	83	1996	1999	X	X	X	X	X		X	X
1.8 16V	183 A1.000	1747	96	1996	1999	X	X	X	X	X	X	X	X
1.9 TD	835 A4.000	1929	66	1994	1996	X	X	X	X	X	X	X	X
1.9 TD kat.	160 D1.000	1929	66	1994	1999	X	X	X	X		X	X	X
2.0 16V CF2	836 A3.000	1995	102	1993	1996	X	X	X	X	X	X	X	X
2.0 HF 16V Turbo	836 A2.000	1995	137	1993	1999	X	X	X	X	X	X	X	X
Kappa 1995 2000													
2.0 20V	838 A1.000	1998	107	1994	1998	X	X	X	X	X	X	X	X
2.0 20V	838 A6.000	1998	114	1996	2000	X	X	X	X		X	X	X
2.0 Turbo 16V	838 A4.000	1995	151	1994	1998	X	X	X	X	X	X	X	X
2.0 Turbo 20V	175 A3.000	1998	162	1998	2000	X	X	X	X		X	X	X
2.4 20V	838 A2.000	2446	129	1994	2000	X	X	X	X		X	X	X
2.4 JTD	838 A8.000	2387	100	1998	2000	X	X	X	X		X	X	X
2.4 TD	838 A3.000	2387	91	1994	1998	X	X	X	X	X	X	X	X
2.4 TD	838 A7.000	2387	91	1996	1998	X	X	X	X		X	X	X
3.0 V6 24V	838 B.000	2959	150	1994	2000	X	X	X	X	X	X	X	X
Lybra 1999													
1.6 16V	182 A4.000	1581	76	1999	2001	X	X	X	X	X			X
1.6 16V	182 B6.000	1596	76	2001		X	X	X	X	X			X
1.8 16V	839 A4.000	1747	96	1999	2001	X	X	X	X	X			X
1.8 16V	839 A7.000	1747	96	2001		X	X	X	X	X			X
1.9 JTD	937 A2.000	1910	85	2001		X	X	X	X	X			X
1.9 JTD	AR 32302	1910	77	1999	2001	X	X	X	X	X			X
1.9 JTD	AR 37101	1910	81	2001	2003	X	X	X	X	X			X
2.0 20V	182 B7.000	1998	113	1999	2001	X	X	X	X	X			X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
LANCIA																			
Lybra 1999																			
2.0 20V	185 A8.000	1998	110	2001		X	X	X	X	X	X	X		X					X
2.4 JTD	839 A5.000	2387	99	1999	2001	X	X	X	X	X	X	X		X					X
2.4 JTD	839 A6.000	2387	103	2001	2002	X	X	X	X	X	X	X		X					X
2.4 JTD	841 C.000	2387	110	2002		X	X	X	X	X	X	X		X					X
Musa 2004																			
1.3 JTD 16V	188 A9.000	1248	51	2004		X	X	X	X	X				X					
1.4 16V	843 A1.000	1368	70	2004		X	X	X	X	X				X					
1.9 JTD	188 B2.000	1910	74	2004		X	X	X	X	X				X					
Phedra 2002																			
2.0 16V	EW10J4 (RFN)	1997	100	2002		X	X	X	X	X	X	X		X					
2.0 JTD 16V	DW10ATED4 (RHW)	1997	80	2002		X	X	X	X	X	X	X		X					
2.2 JTD 16V	DW12ATED4 (4HW)	2179	95	2002		X	X	X	X	X	X	X		X					
3.0 V6 24V	ES9J4S (XFW)	2946	150	2002		X	X	X	X	X	X	X		X					
Prisma 1982 1991																			
1300	831 A2.000	1301	58	1982	1986	X	X	X	X	X				X			X		
1500	831 A1.000	1498	63	1982	1988	X	X	X	X	X				X			X		
1600	831 A4.000	1585	77	1982	1988	X	X	X	X	X				X			X		
1600 IE	831 B7.000	1585	66	1987	1991	X	X	X	X	X				X			X		
1900 D	831 D.000	1929	48	1986	1988	X	X	X	X	X				X			X		
1900 TD	831 D1.000	1929	59	1986	1991	X	X	X	X	X				X			X		
2000 4X4	831 B4.000	1995	85	1986	1988	X			X	X									
2000 Integrale	831 C5.000	1995	137	1987	1991	X			X	X									
Thema 1984 1995																			
2000 16V	834 F1.000	1995	112	1992	1994	X	X	X	X	X	X	X		X			X	X	
2000 IE	154 C.000	1995	88	1989	1989	X	X	X	X	X				X			X		
2000 IE	834 B.000	1995	88	1984	1992	X	X	X	X	X	X	X		X			X	X	
2000 IE	834 B.146	1995	85	1992	1995	X	X	X	X	X	X	X		X			X	X	
2000 IE	834 B1.000	1995	86	1988	1992	X	X	X	X	X			X	X		X	X		
2000 IE 16V	834 B2.000	1995	108	1988	1992	X	X	X	X	X	X	X	X	X		X	X	X	
2000 IE 16V	834 B2.246	1995	104	1992	1993	X	X	X	X	X	X			X			X	X	
2000 IE Turbo	834 C.000	1995	122	1984	1988	X	X	X	X	X	X	X		X			X		
2000 IE Turbo 16V	834 C1.000	1995	133	1988	1992	X	X	X	X	X	X	X	X	X		X	X	X	
2000 IE Turbo 16V	834 C1.246	1995	130	1989	1994	X	X	X	X	X			X	X		X	X	X	
2000 Turbo 16V	834 F2.000	1995	148	1992	1994	X	X	X	X	X	X	X		X			X		
2500 TD	8144.91	2445	74	1985	1988	X	X	X	X	X			X	X		X	X		
2500 tds	8144.97	2499	85	1988	1995	X	X	X	X	X			X	X		X	X	X	
2800 V6	834 E.000	2849	110	1984	1992	X	X	X	X	X		X	X	X		X	X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
LANCIA													
Thema 1984 1995													
2800 V6	834 E.146	2849	108	1991	1992	X	X	X	X	X	X	X	X
3000 IE V6	834 F.000	2959	126	1992	1995	X	X	X	X	X	X	X	X
8.32 Ferrari	F105	2927	158	1987	1991	X		X	X		X	X	X
Thesis 2002													
2.0 20V Turbo	841 E.000	1998	136	2002		X	X	X	X	X	X		
2.4 20V	841 D.000	2446	125	2002		X	X	X	X	X	X		
2.4 JTD 10V	841 C.000	2387	110	2002		X	X	X	X	X	X		
2.4 JTD 20V	841 G.000	2387	129	2003		X	X	X	X	X	X		
2.4 JTD 20V Aut.	841 H.000	2387	129	2003		X	X	X	X	X	X		
3.0 V6 24V	841 A.000	2959	158	2002		X	X	X	X	X	X		
3.2 V6 24V	841 L.000	3179	169	2003		X	X	X	X	X	X		
Ypsilon 2003													
1.2 16V	188 A5.000	1242	59	2003		X	X	X	X	X	X		
1.2 8V	188 A4.000	1242	44	2003		X	X	X	X	X	X		
1.3 JTD 16V	188 A9.000	1248	51	2003		X	X	X	X	X	X		
1.4 16V	843 A1.000	1368	70	2003		X	X	X	X	X	X		
1.4 8V	843 N2.000	1368	55	2003		X	X	X	X		X		
Ypsilon Y 1995 2003													
1.1 8V	176 B2.000	1108	40	1997	2000	X	X	X		X	X	X	X
1.2 16V	176 B9.000	1242	63	1997	2000	X	X	X		X	X	X	X
1.2 16V	188 A5.000	1242	59	2000	2003	X	X	X	X		X	X	X
1.2 8V	188 A4.000	1242	44	2000	2003	X	X	X	X		X	X	X
1.2 8V	840 A3.000	1242	44	1995	2000	X	X	X	X	X	X	X	X
1.4 12V	840 A2.000	1370	59	1995	2000	X	X	X	X	X	X	X	X
1.4 12V	840 A4.000	1370	55	1995	2000	X	X	X	X		X	X	X
Ypsilon Y10 1985 1995													
1.0	156 A2.000	999	33	1985	1989	X	X	X	X		X		X
1.1	156 A.000	1049	41	1985	1989	X	X	X	X		X		X
1.1 Turbo	156 A1.000	1049	63	1985	1989	X	X	X	X		X		X
1.1i / Selectronic	156 C.046	1108	37	1989	1995	X	X	X	X	X	X	X	X
1.1i LX	156 C.000	1108	41	1989	1992	X	X	X	X	X	X		X
1.1i LX 4x4	156 C.000	1108	41	1989	1992	X	X	X	X	X	X		X
1.3i	146 A5.046	1297	53	1992	1995	X	X	X	X	X	X	X	X
1.3i GT	156 B.000	1301	56	1989	1992	X	X	X	X		X		X
Zeta 1994 2001													
2.0 16V	EW10J4 (RFN)	1998	100	2000	2001	X	X	X	X		X	X	X
2.0 JTD	DW10ATED (RHZ)	1997	80	1999	2001	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
LANCIA													
Zeta 1994 2001													
2.0 JTD 16V	DW10ATED4 (RHW)	1997	80	2001	2001	X	X	X	X	X	X	X	X
2.0 Turbo	XU10J2CTE (RGX)	1998	108	1994	2001	X	X	X	X	X	X	X	X
2.1 TD	XUD11BTE (P8C)	2088	80	1994	1999	X	X	X	X	X	X	X	X
LAND & RANGE ROVER													
Defender 1985													
2.25	2.25	2286	55	1985	1990	X	X	X	X	X	X	X	X
2.25 D	10J	2286	44	1985	1990	X	X	X	X	X	X	X	X
2.5	2.5	2495	59	1985	1990	X	X	X	X	X	X	X	X
2.5	2.5	2495	62	1990	1994	X	X	X	X	X	X	X	X
2.5 D	12J	2495	49	1985	1990	X	X	X	X	X	X	X	X
2.5 TD	2.5	2495	63	1987	1992	X	X	X	X	X	X	X	X
2.5 TD5	10P/15P	2498	90	1999		X	X	X	X	X	X	X	X
2.5 TDi 200	200 TDi	2494	80	1992	1994	X	X	X	X	X	X	X	X
2.5 TDi 300	23L	2495	83	1994	1999	X	X	X	X	X	X	X	X
3.5 V8	15G	3528	85	1985	1990	X	X	X	X	X	X	X	X
3.5 V8	15G	3528	114	1992	1996	X	X	X	X	X	X	X	X
4.0 V8i	30G	3946	134	1995	2001	X	X	X	X	X	X	X	X
Discovery I 1989 1999													
2.0 Mpi	20T4	1994	100	1996	1999	X	X	X	X	X	X	X	X
2.0 Mpi	M16i 20HD	1994	100	1993	1995	X	X	X	X	X	X	X	X
2.5 TDi	19L	2495	90	1995	1999	X	X	X	X	X	X	X	X
2.5 TDi 200	12L/21L	2495	83	1989	1994	X	X	X	X	X	X	X	X
2.5 TDi 300	23L	2495	83	1996	1999	X	X	X	X	X	X	X	X
3.5 V8	V8	3528	108	1989	1992	X	X	X	X	X	X	X	X
3.5 V8i	24D	3528	119	1991	1993	X	X	X	X	X	X	X	X
3.5 V8i Kat.	22D	3528	113	1991	1993	X	X	X	X	X	X	X	X
3.9 V8i	35D/36D	3948	134	1994	1999	X	X	X	X	X	X	X	X
4.0 V8i	V8	3948	140	1996	1999	X	X	X	X	X	X	X	X
Discovery II 1999 2004													
2.5 TD5	10P	2498	102	1999	2002	X	X	X	X	X	X	X	X
2.5 TD5	15P/16P	2498	102	2002	2004	X	X	X	X	X	X	X	X
4.0 V8	56D	3947	136	1999	2002	X	X	X	X	X	X	X	X
4.0 V8	94D	3947	136	2002	2004	X	X	X	X	X	X	X	X
4.6 V8	V8	4554		1999	2004	X	X	X	X	X	X	X	X
Freelander 1997 2000													
1.8 16V	18K4F	1796	88	1997	2000	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
LAND & RANGE ROVER													
Freelander 1997 2000													
2.0 TDi	20T2N	1994	72	1997	2000	X	X	X	X	X	X	X	X
Freelander 2000													
1.8	K18	1796	86	2000		X	X	X			X		X
2.0 TD4	TD4	1951	82	2000		X	X	X			X		X
2.5 V6	KV6	2497	130	2000		X	X	X			X		X
Range Rover I 1973 1996													
2.4 Turbo D	11A VM Hr 492 HI	2393	82	1986	1992	X	X	X	X		X		
2.5 Tdi 300	300 Tdi	2495	83	1994	1996	X	X	X	X		X		
2.5 Turbo D	95 A VM Hr 4924 HI	2500	89	1992	1994	X	X	X	X		X		
3.5 V8	V8	3528	115	1973	1989	X	X	X	X		X		
3.5 V8i	31D	3528	124	1987	1991	X	X	X	X		X		
3.9 V8i	35D / 36D	3950	134	1989	1996	X	X	X	X		X		
3.9 V8i	37D / 38D	3950	127	1989	1996	X	X	X	X		X		
4.2 V8i Vogue LSE	40D	4275	149	1992	1996	X	X	X	X		X		
Range Rover II 1994 2002													
2.5 TD	256T (M51)	2497	100	1994	2002	X	X	X	X		X		X
4.0 V8	42D	3950	140	1994	2002	X	X	X	X		X		X
4.6 V8	46D	4555	166	1994	2002	X	X	X	X	X	X		X
Range Rover III 2002													
3.0 TD6	TD6	2924	135	2002		X	X	X			X		
4.4 V8	V8	4398	210	2002		X	X	X			X		
LEXUS													
GS JZS147 1993 1997													
GS 300 V6 24V	2JZ-GE	2997	156	1993	1997	X	X	X	X		X		
GS JZS160 1997 2005													
GS 300 V6 24V	2JZ-GE	2997	161	1997	2005	X	X	X	X		X		X
GS 430 V8	3UZ-FE	4293	208	2000	2005	X		X					
IS GXE10 1999 2005													
IS 200 24V	1G-FE	1988	114	1999	2005	X	X	X	X		X		X
IS 300 24V	2JZ-GE	2997	156	2000	2005	X	X	X	X		X		X
LS UCF10 1988 1993													
LS 400 V8 32V	1UZ-FE	3969	180	1988	1993	X	X	X	X		X		X
new type (OBSOLETE)	1UZ-FE	3969	194	1994	2001	X		X	X				
LS UCF20 1994 2001													
LS 400 V8	1UZ-FE	3969	209	1997		X		X					
LS 400 V8 24V	1UZ-FE	3969	194	1994	1997	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
LEXUS													
LS UCF30 2000													
LS 430 V8 32V	3UZ-FE	4293	207	2000		X	X	X	X	X		X	
RX MCU15 2000													
RX 300	1MZ-FE	2995	148	2000		X	X	X	X		X		X
SC UZZ40 2001													
SC 430	3UZ-FE	4293	210	2001		X	X	X	X		X		X
LINCOLN													
Continental 1995 1998													
4.6 V8	V8-281	4601	194	1995	1998		X						
Mk VIII 1992 1999													
4.6 V8	99V/V8-281	4601	209	1992	1999		X						
Town Car 1991 1998													
4.6 V8	99W/V8-281	4601	153	1991	1998		X						
MASERATI													
Shamal 1990 1996													
3.2 V8	AM 479	3215	240	1990	1996		X						
MAZDA													
121 1987 1991													
1.1	B1	1138	41	1987	1991	X	X	X	X		X		X
1.3	B3	1323	44	1987	1990	X	X	X	X		X		X
121 1991 1996													
1.1	B1	1138	40	1990	1996	X	X	X	X		X		X
1.3i	B3	1324	40	1991	1996	X	X	X	X		X		X
1.3i 16 V	B3	1324	54	1990	1996	X	X	X	X		X		X
121 1996 2002													
1.2 16V	Zetec-SE DHA	1254	55	1996	2002	X	X	X	X	X	X		X
1.3	Endura-E J4C	1298	44	1996	2002	X	X	X	X	X	X		X
1.3	Endura-E JJA	1298	37	1996	2002	X	X	X	X	X	X		X
1.8 D	Endura-DE RTJ	1753	44	1996	2002	X	X	X	X	X	X		X
2 2002													
1.2 16V	F8JA	1242	51	2002		X	X	X	X		X		
1.2 16V	F8JB	1242	51	2002		X	X	X	X		X		
1.2 16V	FUJA	1242	55	2002		X	X	X	X		X		
1.2 16V	FUJB	1242	51	2002		X	X	X	X		X		
1.4 16V	FXJA	1388	59	2002		X	X	X	X		X		
1.4 16V	FXJB	1388	59	2002		X	X	X	X		X		
1.4 CiTD	F6JA	1399	50	2002		X	X	X	X				

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
MAZDA																			
2 2002																			
1.6 16V	FYJA	1595	74	2002		X	X	X	X	X	X			X					
3 2003																			
1.4 MZR	ZJ	1349	62	2003		X	X	X	X	X	X	X		X					
1.6 MZR	Z6	1598	77	2003		X	X	X	X	X	X	X		X					
1.6 MZR auto (OBSOLETE)	Z6	1598	77	2003		X		X	X	X		X		X					
2.0 MZR	LF	1999	110	2003		X	X	X	X	X	X	X		X					
323 1998 2003																			
1.3 16V	B3	1323	53	2000	2003	X	X	X		X				X			X	X	
1.3 16V	B3	1323	54	1998	2000	X	X	X		X	X	X		X			X	X	
1.5 16V	ZL	1498	65	1998	2000	X	X	X		X	X	X		X			X	X	
1.6 16V	ZM	1597	72	2000	2003	X	X	X		X	X	X		X			X	X	
1.8 16V	FP	1840	84	1998	2000	X	X	X		X	X	X		X			X	X	
2.0 16V	FS	1991	66	2000	2003	X	X	X		X	X	X		X			X	X	
2.0 D	RF	1998	52	1998	2000	X	X	X		X				X				X	
2.0 DiTD	RF-T	1998	74	2000	2003	X	X	X		X				X				X	
2.0 TD	RF-T	1998	66	1998	2000	X	X	X		X	X	X		X			X	X	
323 1989 1994																			
1.3	B3E	1324	50	1989	1992	X	X	X	X	X	X			X					X
1.3 16V	B3	1324	50	1989	1994	X	X	X	X	X	X			X					X
1.3i 16V	B3	1324	55	1989	1994	X	X	X	X	X	X			X					X
1.6	B6E	1586	62	1989	1992	X	X	X	X	X	X			X			X	X	
1.6 16V	B6	1598	64	1989	1994	X	X	X	X	X	X			X			X	X	
1.6i	B6	1598	65	1989	1994	X	X	X	X	X	X			X			X	X	
1.6i 16V	B6	1598	65	1990	1994	X	X	X	X	X	X			X			X	X	
1.7 D	PN	1720	40	1989	1994	X	X	X	X	X							X	X	
1.8 16V 4x4	BP SOHC	1840	78	1989	1994	X	X		X	X	X								X
1.8i 16V	BP DOHC	1840	103	1989	1994	X	X	X	X	X	X			X			X	X	
1.8i 16V	BP SOHC	1840	78	1991	1994	X	X	X	X	X	X			X			X	X	
1.8i 16V kat.	BP DOHC	1840	96	1989	1994	X	X	X	X	X	X			X			X	X	
1.8i 16V kat.	BP DOHC	1840	96	1989	1994	X	X	X	X	X	X			X			X	X	
1.8i 16V Turbo 4x4	BP DOHC	1840	122	1991	1994	X	X	X	X	X				X				X	
mag weg	BP	1840	78	1989	1994	X			X	X	X								X
323 1994 1999																			
1.3 16V	B3	1324	54	1994	1999	X	X	X	X	X	X			X					X
1.5 16V	Z5	1489	65	1994	1999	X	X	X	X	X	X			X			X	X	
1.7 TD	4EE1-T	1866	60	1995	1997	X	X	X	X	X								X	
1.8 16V	BP	1840	84	1994	1999	X	X	X	X	X	X			X			X	X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
MAZDA													
323 1994 1999													
2.0 D	RF	1998	52	1996	1999	X	X	X	X		X		X
2.0 V6 GT 24V	KF	1995	106	1994	1999	X	X	X	X		X	X	X
5 2005													
1.8 16V	L8	1798	85	2005		X	X						
2.0 16V	LF	1999	107	2005		X	X						
2.0 CiTD	RF	1998	81	2005		X	X						
2.0 CiTD	RF	1998	105	2005		X	X						
6 2002													
1.8 16V	L8	1798	88	2002		X	X	X	X	X	X		X
2.0 16V		1798	108	2005		X		X					
2.0 16V	LF	1999	104	2002	2005	X	X	X	X	X	X		X
2.0 CiTD	MZR-CD (RF Turbo)	1998	89	2002		X	X	X	X	X	X		X
2.0 CiTD	MZR-CD (RF Turbo)	1998	100	2002	2005	X	X	X	X	X	X		X
2.0 CiTD	MZR-CD (RF Turbo)	1998	105	2005		X	X	X	X		X		X
2.3	L3	2261	122	2002		X	X	X	X	X	X		X
626 1997 2003													
1.8 16V	FP	1840	74	2000	2003	X	X	X	X		X	X	
1.8 16V	FPY3	1840	66	1997	2000	X	X	X	X	X	X	X	X
2.0 16V	FSY9	1991	85	1997	2003	X	X	X	X	X	X	X	X
2.0 DiTD	RF-T	1998	66	1997	2003	X	X	X	X	X	X		X
2.0 DiTD	RF-T Hi-Power	1998	74	1997	2000	X	X	X	X	X	X	X	X
2.0 DiTD	RF-T Hi-Power	1998	81	2000	2003	X	X	X	X		X		
2.0 HP	FSY8	1991	100	1997	2003	X	X	X	X	X	X	X	X
626 1992 1998													
1.8i 16V	FP	1840	66	1994	1997	X	X	X	X		X		X
1.8i 16V	FP	1840	78	1992	1994	X	X	X	X		X	X	X
2.0 D Comprex	RF-CX	1998	56	1992	1997	X	X	X	X		X	X	X
2.0i 16V	FS	1991	85	1992	1997	X	X	X	X		X	X	X
2.5i V6 24V Xerxes	KL	2497	123	1992	1997	X	X	X	X		X	X	X
626 (Wagon ->1997) 1987 1992													
1.8 12V	F8	1789	68	1987	1992	X	X	X	X		X	X	X
1.8 12V Wagon	F8	1789	68	1987	1997	X	X	X	X		X	X	X
2.0 8V Wagon	FE	1998	66	1987	1997	X	X	X	X		X	X	X
2.0D	RF-CX	1998	55	1987	1990	X	X	X	X		X	X	X
2.0D	RF-N	1998	44	1987	1992	X	X	X	X		X	X	X
2.0D (OLD)	RF	1998	60	1983	1987	X		X	X			X	X
2.0D Wagon	RF-CX	1998	55	1987	1997	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.		
MAZDA													
626 (Wagon ->1997)	1987	1992											
2.0i 16V 4WS	FE DOHC	1998	109	1987	1992	X	X	X	X	X		X	X
2.0i 8V	FE	1998	66	1987	1992	X	X	X	X	X		X	X
2.0i 8V (OBSOLETE)	FE	1998	66	1990	1992	X		X	X	X		X	X
2.0i 8V (OBSOLETE)	FE	1998	66	1990	1992	X		X	X	X		X	X
2.2i	F2	2184	85	1990	1992	X	X	X	X	X		X	X
Demio	1998	2003											
1.3 16V	B3	1323	46	1998	2000	X	X	X	X	X			X
1.3 16V	B3	1323	46	2000	2003	X	X	X	X	X			X
1.3 16V	B3 Hi-Power	1323	53	1998	2000	X	X	X	X	X			X
1.5 16V	B5	1498	55	2000	2003	X	X	X	X	X			X
E-series	1984	1999											
E1800	F8	1789	61	1981	1983	X		X					
E1800	F8	1789	61	1984	1987	X	X	X					X
E2000	FE	1998	63	1984	1987	X	X	X					X
E2000	FE	1998	65	1988	1991	X	X	X					
E2000 4x4	FE	1998	63	1984	1987	X	X	X					X
E2000 4x4	FE	1998	65	1988	1991	X	X	X					
E2000 Automatic	FE	1998	65	1988	1991	X	X	X					
E2000i	FE CiS	1998	70	1997	1999	X	X	X					
E2000i	FE EGİ	1998	60	1991	1994	X	X	X					
E2000i	FE EGİ	1998	70	1994	1997	X	X	X					
E2000i 4x4	FE CiS	1998	70	1997	1999	X	X	X					
E2000i 4x4	FE EGİ	1998	60	1991	1994	X	X	X					
E2000i 4x4	FE EGİ	1998	70	1994	1997	X	X	X					
E2200 D	R2	2184	44	1984	1989	X	X	X					X
E2200 D	R2	2184	47	1990	1997	X	X	X					
E2200 D	R2	2184	52	1997	1999	X	X	X					
MPV	1996	1999											
2.5 TD	WL Turbo	2499	85	1996	1999			X					
3.0 V6 18V	JEE	2954	113	1996				X					
MPV	1999	2002											
2.0	FS	1991	90	1999	2002	X	X	X		X			X
2.5 V6	GY	2498	129	1999	2002	X	X	X		X			X
MPV	2002	2005											
2.0 CiTD	MZR-CD (RF Turbo)	1998	100	2002	2005	X	X	X		X			
2.3 16V	L3	2261	104	2002	2005	X	X	X		X			

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
MAZDA													
MPV 2002 2005													
3.0 V6 24V (NOT FOR EUROPE)	AJ	2967	147	2002	2005	X	X	X			X		
MX-3 1990 2001													
1.6i 16V	B6	1598	66	1990	1994	X	X	X	X		X		X
1.6i 16V	B6	1598	81	1994	2001	X	X	X	X		X		X
1.8i V6 24V	K8	1845	100	1990	2000	X	X	X	X		X		X
MX-5 1998 2005													
1.6 16V	B6	1597	81	1998	2005	X	X	X	X		X		
1.8 16V	BP	1839	103	1998	2000	X	X	X	X		X		
1.8 16V	BP	1839	107	2000	2005	X	X	X	X		X		
MX-5 / Miata 1990 1998													
1.6i 16V	B6	1598	66	1994	1998	X	X		X				
1.6i 16V	B6	1598	85	1990	1994	X	X	X	X		X		X
1.8i 16V	BP	1840	96	1994	1998	X	X	X	X		X		
MX-6 1991 1997													
2.0i 16V	FS	1991	85	1991	1994	X	X	X	X		X		X
2.5i V6 24V	KL	2497	123	1991	1997	X	X	X	X		X		X
Premacy 1999 2005													
1.8 16V	FP	1840	74	1999	2005	X	X	X	X		X		
1.8 16V HP	FP Hi-Power	1840	85	1999	2001	X	X	X	X		X		
2.0 16V	FS	1991	96	2001	2005	X	X						
2.0 DiTD	RF Turbo	1998	74	2001	2005	X							
2.0 TiTD	RF Turbo	1998	66	1999	2001	X	X	X	X		X		
2.0 TiTD	RF Turbo	1998	74	2000	2001	X	X						
Tribute 2000													
2.0 16V	Zetec YFD	1989	91	2000	2004	X	X	X	X		X		X
2.3 16V		2261	110	2004		X							
3.0 V6	Duratec AJD	2967	145	2000		X	X	X	X		X		X
Xedos 6 1992 1999													
1.6 16V	B6	1598	84	1992	1995	X	X	X	X		X		X
1.6 16V	B6	1598	97	1995	1999	X	X		X		X		X
2.0 V6 24V	KF	1995	103	1995	1999	X	X	X	X		X		X
2.0 V6 24V	KF	1995	106	1992	1995	X	X	X	X		X		X
Xedos 9 1993 2002													
2.0 V6 24V	KF	1995	105	1993	2001	X	X	X	X		X		
2.3 V6 24V Miller	KJ	2254	155	1995	2001	X	X	X	X				
2.5 V6 24V	KL	2497	123	1993	2002	X	X	X	X		X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
MERCEDES-BENZ													
W123 200 - 300 1979 1984													
200	102.920	1997	80	1982	1984	X	X	X	X		X		X
200 D	615.940	1998	44	1982	1984	X	X	X	X		X		X
230 E	102.980	2299	100	1982	1984	X	X	X	X		X		X
240 D	616.912	2399	50	1982	1984	X	X	X	X		X		X
300 D	617.912	2998	61	1982	1984	X	X	X	X				X
300 TD	617.952	2998	102	1982	1984	X	X	X	X				X
W124 200 - 500, E 1984 1995													
200	102.922	1997	80	1984	1992	X	X	X	X	X	X		X X
200D	601.912	1998	53	1984	1992	X	X	X	X	X	X		X X
200E, -TE	102.963	1997	87	1988	1992	X	X	X	X	X	X		X X
200TD	601.912	1997	53	1984	1992	X	X	X	X	X	X		X X
230E, -TE	102.982/985	2299	100	1984	1992	X	X	X	X	X	X		X X
250D Turbo, -TD Turbo	602.962	2497	93	1988	1993	X	X	X	X	X	X		X X
250D, -TD	602.912	2497	66	1984	1993	X	X	X	X	X	X		X X
260E	103.940	2599	122	1986	1992	X	X	X	X	X	X		X X
300CE	103.983	2962	132	1987	1992	X	X	X	X	X	X		X X
300CE 24V	104.980	2960	162	1989	1992	X	X	X	X	X	X		X X
300D	603	2996	83	1988	1992	X	X	X	X	X	X		X
300D Turbo, -TD Turbo	603.960	2996	105	1988	1992	X	X	X	X	X	X		X X
300D Turbo, -TD Turbo	603.963	2996	105	1988	1992	X	X	X	X	X	X		X X
300D, -TD	603.912	2996	80	1984	1993	X	X	X	X	X	X		X X
300D, -TD	603.913	2966	105	1988	1992	X	X	X	X	X	X		X X
300E 24V, -TE 24V	104.980	2960	162	1989	1992	X	X	X	X	X	X		X X
300E, -TE	103.980	2962	138	1984	1992	X	X	X	X	X	X		X X
420 E	119.975	4196	205	1992	1995	X	X	X	X	X	X		X X
500E	119.974	4973	235	1992	1995	X	X	X	X	X	X		X X
E200 Diesel	601.912	1997	55	1992	1995	X	X	X	X	X	X		X X
E200, -T (16V)	111.940	1998	100	1992	1995	X	X	X	X	X	X		X X
E220 (16V)	111.960	2199	110	1992	1995	X	X	X	X	X	X		X X
E220 Coupe (16V)	111.960	2199	110	1992	1995	X	X	X	X	X	X		X
E250 Diesel	602.912	2497	83	1992	1995	X	X	X	X	X	X		X
E250 Diesel Turbo	602.912	2497	93	1992	1995	X	X	X	X	X	X		X
E280 (24V)	104.942	2799	142	1992	1995	X	X	X	X	X	X		X X
E300 24V 4-Matic	103.983/985	2960	132	1992	1995	X	X	X	X	X	X		X X
E300 Diesel	603.912/913	2996	100	1992	1995	X	X	X	X	X	X		X
E300 Diesel Turbo	603.963	2996	108	1992	1995	X	X	X	X	X	X		X
E320 24V	104.992	3199	162	1992	1995	X	X	X	X	X	X		X X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Air Cond.	Wir. Diagram	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine				
MERCEDES-BENZ															
W124 200 - 500, E	1984	1995													
E320 Coupe 24V	104.992	3199	162	1992	1995	X	X	X	X	X	X				X
W126 SE & SEL, 260 - 560	1979	1992													
260 SE	103.941	2599	122	1985	1991	X	X	X	X	X				X	
260 SE	103.943	2597	118	1987	1991	X	X	X	X	X				X	
280 S	110.924	2746	115	1979	1982	X	X	X	X	X				X	
280 S	110.926	2746	115	1979	1985	X	X	X	X	X				X	
280 SE, -SEL	110.987	2746	136	1979	1985	X	X	X	X	X				X	
280 SE, -SEL	110.989	2746	136	1979	1985	X	X	X	X	X				X	
300 SE, -SEL	103.981	2962	138	1985	1991	X	X	X	X	X				X	
380 SE, -SEL	116.961	3839	160	1985	1986	X	X	X	X	X				X	
380 SE, -SEL	116.963	3839	150	1979	1983	X	X	X	X	X				X	
380 SEC	116.963	3839	150	1984	1985	X	X	X	X	X				X	
420 SE, -SEL	116.964	4196	160	1985	1991	X	X	X	X	X				X	
420 SE, SEL, SEC	116.965	4196	160	1985	1992	X	X	X	X	X				X	
420 SEC	116.964	4196	160	1985	1992	X	X	X	X	X				X	
500 SE, -SEL	117.961	4973	177	1979	1985	X	X	X	X	X				X	
500 SE, -SEL	117.963	4973	170	1979	1985	X	X	X	X	X				X	
500 SE, -SEL	117.964	4973	180	1985	1991	X	X	X	X	X				X	
500 SE, -SEL	117.965	4973	170	1979	1985	X	X	X	X	X				X	
500 SEC	117.963	4973	170	1981	1991	X	X	X	X	X				X	
500 SEC	117.965	4973	195	1985	1991	X	X	X	X	X				X	
560 SE, -SEL	117.967	5547	200	1985	1991	X	X	X	X	X				X	
560 SEC, -SEL	117.968	5547	220	1985	1992	X	X	X	X	X				X	
W129 SL, 280 - 600	1989	2001													
300SL	103.984	2960	140	1989	1993	X	X	X	X	X			X	X	
300SL 2.8	104.943	2799	170	1993	1999	X	X	X	X	X		X	X		
300SL 24V	104.981	2960	170	1989	1993	X	X	X	X	X		X	X	X	
300SL 3.2	104.991	3199	170	1993	2000	X	X	X	X	X		X	X	X	
500SL	119.970	4973	240	1989	1993	X	X	X	X	X		X		X	
500SL	119.972	4973	235	1992	2000	X	X	X	X	X		X	X	X	
500SL	119.982	4973	235	1995	1999	X	X	X	X	X		X	X		
600SL	120.983	5987	290	1995	1999	X	X	X	X	X		X	X	X	
SL280	104.944	2799	142	1993	2001	X	X	X	X	X		X	X	X	
SL280	112.923	2799	150	1997	2001	X	X	X	X	X		X	X	X	
SL280	112.925	2799	165	1998	2001	X	X	X	X	X		X	X	X	
SL320	104.990	3199	170	1993	2001	X	X	X	X	X		X	X	X	
SL320	112.943	3199	165	1997	2001	X	X	X	X	X		X	X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
MERCEDES-BENZ													
W129 SL, 280 - 600	1989	2001											
SL500	113.961	4966	225	1997	2001	X	X	X	X	X	X	X	X
SL500	119.960	4973	235	1993	2001	X	X	X	X	X	X	X	X
SL600	120.981	5987	290	1993	2001	X	X	X	X	X	X	X	X
W140 S, 280 - 600	1991	1999											
280 SE, -SEL	104.944	2799	142	1991	1993	X	X	X	X	X	X	X	X
300 SD Turbo	603.971	3449	110	1991	1999	X	X	X	X	X	X	X	X
300 SE	104.944	2799	145	1991	1993	X	X	X	X	X	X	X	X
300 SE, -SEL	104.990	3199	170	1991	1993	X	X	X	X	X	X	X	X
300 SE, -SEL	104.994	3199	162	1991	1993	X	X	X	X	X	X	X	X
350 SD Turbo	603.971	3449	110	1993	1999	X	X	X	X	X	X	X	X
400 SE, -SEL	119.971	4196	210	1991	1993	X	X	X	X	X	X	X	X
400 SE, -SEL	119.981	4196	205	1991	1993	X	X	X	X	X	X	X	X
500 SE Coupe	119.970	4973	235	1992	1996	X	X	X	X	X	X	X	X
500 SE Coupe	119.980	4973	235	1992	1996	X	X	X	X	X	X	X	X
500 SE, -SEL	119.970	4973	235	1991	1993	X	X	X	X	X	X	X	X
500 SE, -SEL	119.980	4973	235	1991	1993	X	X	X	X	X	X	X	X
600 SE Coupe	120.980	5987	290	1992	1996	X	X	X	X	X	X	X	X
600 SE Coupe	120.982	5987	290	1992	1996	X	X	X	X	X	X	X	X
600 SE, -SEL	120.980	5987	300	1991	1993	X	X	X	X	X	X	X	X
600 SE, -SEL	120.982	5987	290	1991	1993	X	X	X	X	X	X	X	X
CL420 Coupe	119.971	4196	205	1996	1999	X	X	X	X	X	X	X	X
CL420 Coupe	119.981	4196	205	1996	1999	X	X	X	X	X	X	X	X
CL500 Coupe	119.970	4973	235	1996	1999	X	X	X	X	X	X	X	X
CL500 Coupe	119.980	4973	235	1996	1999	X	X	X	X	X	X	X	X
CL600 Coupe	120.980	5987	290	1996	1999	X	X	X	X	X	X	X	X
CL600 Coupe	120.982	5987	290	1996	1999	X	X	X	X	X	X	X	X
S280	104.944	2799	145	1993	1999	X	X	X	X	X	X	X	X
S300 Turbo Diesel	606.961	2996	130	1991	1999	X	X	X	X	X	X	X	X
S320	104.990	3199	170	1993	1999	X	X	X	X	X	X	X	X
S320	104.994	3199	162	1993	1999	X	X	X	X	X	X	X	X
S350 Turbo Diesel	603.971	3449	110	1991	1999	X	X	X	X	X	X	X	X
S420 Coupe	119.971	4196	205	1993	1999	X	X	X	X	X	X	X	X
S420 Coupe	119.981	4196	205	1992	1996	X	X	X	X	X	X	X	X
S500	119.970	4973	235	1993	1999	X	X	X	X	X	X	X	X
S500 Coupe	119.970	4973	235	1993	1999	X	X	X	X	X	X	X	X
S500 Coupe	119.980	4973	235	1992	1996	X	X	X	X	X	X	X	X
S600	120.980	5987	290	1993	1999	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.
MERCEDES-BENZ													
W140 S, 280 - 600 1991 1999													
S600 Coupe	120.980	5987	290	1993	1999	X	X	X	X	X	X	X	X
S600 Coupe	120.982	5987	290	1992	1996	X	X	X	X	X			X
W163 ML, 230 - 500 1998 2005													
ML 230	111.977	2295	110	1998	2002	X	X	X	X		X	X	X
ML 270 CDI	612.963	2685	120	1999	2005	X	X	X	X		X	X	X
ML 320	112.942	3199	160	1998	2002	X	X	X	X		X	X	X
ML 350	112.970	3724	180	2002	2005	X	X	X	X		X	X	X
ML 400 CDI	628.963	3996	184	2002	2005	X	X	X	X			X	X
ML 430	113.942	4266	200	1998	2002	X	X	X	X		X	X	X
ML 500	113.965	4966	215	2002	2005	X	X	X	X		X	X	X
ML 55 AMG	113.981	5439	255	2000	2005	X	X	X	X		X	X	X
test						X		X	X				
W168 A 1998 2005													
A 140, -L	166.940	1397	60	1998	2005	X	X	X	X	X	X	X	X
A 140, -L	166.960	1598	60	2001	2005	X	X	X	X	X	X		X
A 160 CDi	668.940	1689	55	2001	2005	X	X	X	X	X	X		X
A 160 CDi	668.941	1689	44	1998	2001	X	X	X	X	X	X		X
A 160, -L	166.960	1598	75	1998	2005	X	X	X	X	X	X	X	X
A 170 CDi	668.940	1689	66	1998	2001	X	X	X	X	X	X		X
A 170 CDi, -L	668.942	1689	70	2001	2005	X	X	X	X	X	X		X
A 190, -L	166.990	1898	92	1999	2005	X	X	X	X	X	X		X
A 210 Evolution, -L	166.995	2084	103	2002	2005	X	X		X		X		X
W169 A 2005													
A 150	266.920	1498	70	2005		X	X	X	X		X		X
A 160 CDi	640.942	1991	60	2005		X	X	X	X		X		X
A 170	266.940	1699	85	2005		X	X	X	X		X		X
A 180 CDi	640.940	1991	80	2005		X	X	X	X		X		X
A 200	266.960	2034	100	2005		X	X	X	X		X		X
A 200 CDi	640.941	1991	103	2005		X	X	X	X		X		X
A 200 Turbo	266.980	2034	142	2005		X	X	X	X		X		X
wa						X		X	X				
WA2						X		X	X				
W170 SLK, 200 - 32AMG 1996 2004													
SLK 200	111.946	1998	100	1996	2000	X	X	X			X	X	X
SLK 200 Kompressor	111.943	1998	141	1996	2000	X	X	X			X	X	X
SLK 200 Kompressor	111.958	1998	120	2000	2004	X	X	X			X	X	X
SLK 230 Kompressor	111.973	2295	142	1996	2000	X	X	X			X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
MERCEDES-BENZ													
W170 SLK, 200 - 32AMG 1996 2004													
SLK 230 Kompressor	111.983	2295	145	2000	2004	X	X	X	X		X	X	X
SLK 32 AMG Kompressor	112.960	3199	260	2001	2004	X	X	X	X		X	X	X
SLK 320	112.947	3199	160	2000	2004	X	X	X	X		X	X	X
W171 SLK 2004													
200 Kompressor	271.944	1795	120	2004		X	X	X			X		X
280	272.942	2998	170	2005		X	X	X			X		X
350	272.963	3498	200	2004		X	X	X			X		X
55 AMG	113.989	5439	265	2004		X	X	X			X		X
W201 190 1982 1993													
190	102.921	1997	66	1982	1984	X	X	X	X		X		X
190	102.924	1997	77	1986	1991	X	X	X	X	X	X		X
190	102.924 (2E-E)	1997	77	1984	1989	X	X	X	X	X	X		X
190	102.938	1997	63	1982	1984	X	X	X	X		X		
190D	601	1997	53	1988	1993	X	X		X		X		X
190D	601.911	1997	53	1983	1988	X	X	X	X		X		X
190D 2.5	602.911	2497	66	1985	1988	X	X	X	X		X		X
190D 2.5	602.912	2497	66	1988	1993	X	X		X		X		X
190D 2.5 Turbo	602.961	2497	90	1987	1988	X	X	X	X		X		X
190D 2.5 Turbo	602A	2497	93	1988	1993	X	X		X		X		X
190E	102.961	1997	90	1982	1988	X	X	X	X		X		X
190E	102.962	1997	90	1988	1993	X	X	X	X	X	X		X
190E 1.8	102.910	1797	80	1990	1993	X	X	X	X	X	X		X
190E 2.3	102.985	2299	97	1986	1988	X	X	X	X		X		X
190E 2.3	102.985	2299	97	1988	1993	X	X	X	X		X		X
190E 2.3 16V	102.983	2299	136	1984	1988	X	X	X	X	X	X		X
190E 2.5 16V	102.990	2498	143	1988	1993	X	X	X	X	X	X		X
190E 2.6	103.942	2599	118	1986	1988	X	X	X	X	X	X		X
190E 2.6	103.942	2599	118	1988	1993	X	X	X	X	X	X		X
W202 C, 180 - 43 AMG 1993 2001													
C180 T	111.952	1998	95	2000	2001	X	X	X	X		X	X	X
C180, -T	111.920	1799	90	1993	2001	X	X	X	X	X	X	X	X
C180, -T	111.921	1799	90	1993	2000	X	X	X	X	X	X	X	X
C200 , -T	111.941	1998	100	1993	2001	X	X	X	X	X	X		X
C200 CDI, -T	611.960	2151	75	1998	2001	X	X	X	X	X	X	X	X
C200 Diesel	601.913	1997	55	1993	1996	X	X	X	X	X	X		X
C200 Diesel, -T	604.915	1997	65	1996	2000	X	X	X	X	X	X	X	X
C200 Kompressor T	111.956	1998	121	2000	2001	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
MERCEDES-BENZ													
W202 C, 180 - 43 AMG	1993	2001											
C200 Kompressor, -T	111.944	1998	141	1995	2000	X	X	X	X	X	X	X	X
C200 T	111.952	1998	95	2000	2001	X	X	X	X	X	X	X	X
C200, -T	111.945	1998	100	1993	2001	X	X	X	X	X	X	X	X
C220	111.961	2199	110	1993	2000	X	X	X	X	X	X	X	X
C220 CDI	611.960	2151	92	1997	2000	X	X	X	X	X	X	X	X
C220 CDI T	611.960	2151	92	1998	2001	X	X	X	X	X	X	X	X
C220 Diesel, -T	604.910	2155	70	1993	2000	X	X	X	X	X	X	X	X
C230 Kompressor	111.975	2295	142	1995	2000	X	X	X	X	X	X	X	X
C230 Kompressor T	111.975	2295	142	1997	2001	X	X	X	X	X	X	X	X
C230, -T	111.974	2295	110	1995	2000	X	X	X	X	X	X	X	X
C240 T	112.915	2597	126	2000	2001	X	X	X	X	X	X	X	X
C240, -T	112.910	2398	125	1997	2001	X	X	X	X	X	X	X	X
C250 Diesel	605.910	2497	83	1993	2000	X	X	X	X	X	X	X	X
C250 Turbodiesel, -T	605.960	2497	111	1995	2001	X	X	X	X	X	X	X	X
C280	104.941	2799	142	1993	1997	X	X	X	X	X	X	X	X
C280 (V6), -T	112.920	2799	145	1997	2001	X	X	X	X	X	X	X	X
C36 AMG	104.941?	3606	206	1993	1997	X	X	X	X	X	X	X	X
C43 AMG, -T	113.944	4266	228	1997	2001	X	X	X	X	X	X	X	X
W203 C, 160 - 55 AMG													
2000													
C160 Kompressor Coupe	271.921	1796	90	2005		X			X				
C180	111.951	1998	95	2001		X	X	X	X	X	X	X	X
C180 Kompressor, -T, -Coupe	271.946	1796	105	2002		X	X	X	X	X	X	X	X
C180, -T, -Coupe	111.951	1998	95	2001		X	X	X	X	X	X	X	X
C200 CDI DPF	646.962	2148	90	2006		X			X				
C200 CDI, -Coupe	611.962	2148	90	2001		X	X	X	X	X	X	X	X
C200 CDI, -Coupe	646.963	2148	90	2004		X			X				
C200 CGI Kompressor, -T	271.942	1998	125	2002		X	X	X	X	X	X	X	X
C200 Kompressor Coupe	271.942	1998	125	2001		X	X	X	X	X	X	X	X
C200 Kompressor, -T, -Coupe	111.955	1998	120	2000	2002	X	X	X	X	X	X	X	X
C200 Kompressor, -T, -Coupe	271.940	1798	120	2002		X	X	X	X	X	X	X	X
C220 CDI, -T, -Coupe	611.962	2148	105	2001		X	X	X	X	X	X	X	X
C220 CDI, -T, -Coupe	646.963	2148	110	2004		X			X				
C230 Kompressor Coupe	111.981	2295	141	2001		X	X	X	X	X	X	X	X
C230 Kompressor, -Coupe	271.948	2295	141	2001		X	X	X	X	X	X	X	X
C230, -T, -Coupe	272.920	2496	150	2005		X			X				
C240 4-Matic, -T	112.916	2597	125	2001		X	X	X	X	X	X	X	X
C240, -T	112.912	2597	125	2001		X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
MERCEDES-BENZ													
W203 C, 160 - 55 AMG 2000													
C270 CDI, -T	612.962	2685	125	2001		X	X	X	X		X	X	X
C280 4-Matic, -T	272.941	3498	170	2005		X			X				
C280, -T	272.940	2996	170	2005		X			X				
C30 CDI AMG, -T, -Coupe	612.990	2950	170	2002		X	X	X	X		X	X	X
C32 AMG Kompressor, -T	112.961	3199	260	2001		X	X	X	X	X	X	X	X
C320 4-Matic, -T	112.953	3199	160	2002		X	X	X	X		X	X	X
C320, -T, -Coupe	112.946	3199	160	2001		X	X	X	X	X	X	X	X
C350 4-Matic, -T	272.970	3498	200	2005		X			X				
C350, -T, -Coupe	272.960	3498	200	2005		X			X				
C55 AMG, -T	113.988	5439	270	2005		X			X				
W208 CLK, 200 - 55 AMG 1997 2002													
CLK 200	111.945	1998	100	1997	2002	X	X	X			X	X	X
CLK 200 Cabriolet	111.945	1998	100	1997	2002	X	X	X			X	X	X
CLK 200 Kompressor	111.944	1998	141	1997	2002	X	X	X			X	X	X
CLK 200 Kompressor	111.956	1998	121	2000	2002	X	X	X			X	X	X
CLK 200 Kompressor Cabriolet	111.944	1998	141	1997	2002	X	X	X			X	X	X
CLK 200 Kompressor Cabriolet	111.956	1998	121	2000	2002	X	X	X			X	X	X
CLK 230 Kompressor	111.975	2295	142	1997	2002	X	X	X			X	X	X
CLK 230 Kompressor	111.982	2295	143	2000	2002	X	X	X			X	X	X
CLK 230 Kompressor Cabriolet	111.975	2295	142	1997	2002	X	X	X			X	X	X
CLK 230 Kompressor Cabriolet	111.982	2295	143	2000	2002	X	X	X			X	X	X
CLK 320	112.940	3199	160	1997	2002	X	X	X			X	X	X
CLK 320 Cabriolet	112.940	3199	160	1997	2002	X	X	X			X	X	X
CLK 430	113.943	4266	205	1997	2002	X	X	X			X	X	X
CLK 430 Cabriolet	113.943	4266	205	1998	2002	X	X	X			X	X	X
CLK 55 AMG	113.984	5439	255	1999	2002	X	X	X			X	X	X
CLK 55 AMG Cabriolet	113.984	5439	255	2000	2002	X	X	X			X	X	X
W209 CLK, 200 - 500 2002													
CLK 200 K	271.940	1796	120	2002		X	X	X				X	X
CLK 200 K	271.942	1796	125	2002		X	X	X				X	X
CLK 240	112.912	2597	125	2002		X	X	X			X	X	X
CLK 270 CDI	612.967	2685	125	2002		X	X	X			X	X	X
CLK 320	112.955	3199	160	2002		X	X	X			X	X	X
CLK 500	113.968	4966	225	2002		X	X	X			X	X	X
CLK 55 AMG	113.987	5439	270	2002		X	X	X			X	X	X
W210 E, 200 - 55 AMG 1996 2002													
E200 CDi	611.961	2149	75	1998	2002	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.		
MERCEDES-BENZ													
W210 E, 200 - 55 AMG	1996	2002											
E200 CDi	611.961	2149	85	1999	2002	X	X	X	X	X	X	X	X
E200 Diesel	604.917	1997	65	1997	1999	X	X	X	X	X	X	X	X
E200 Kompressor, -T	111.947	1998	137	1997	1999	X	X	X	X	X	X	X	X
E200 Kompressor, -T	111.957	1998	120	2000	2002	X	X	X	X	X	X	X	X
E200, -T	111.942	1998	100	1996	2001	X	X	X	X	X	X	X	X
E220 CDi, -T	611.961	2149	92	1998	2002	X	X	X	X	X	X	X	X
E220 CDi, -T	611.961	2149	105	1998	1999	X	X	X	X	X	X	X	X
E220 Diesel	604.912	2155	70	1996	1999	X	X	X	X	X	X	X	X
E230, -T	111.970	2295	110	1996	1998	X	X	X	X	X	X	X	X
E240, -T	112.911	2398	125	1998	1999	X	X	X	X	X	X	X	X
E240, -T	112.914	2597	125	1999	2002	X	X	X	X	X	X	X	X
E250 Diesel, -T	605.912	2497	83	1995	1999	X	X	X	X	X	X	X	X
E250 Turbodiesel, -T	605.962	2497	110	1997	1999	X	X	X	X	X	X	X	X
E270 CDi, -T	612.961	2687	125	1999	2002	X	X	X	X	X	X	X	X
E280	104.945	2799	142	1996	1997	X	X	X	X	X	X	X	X
E280 4-Matic, -T	112.921	2799	150	1999	2002	X	X	X	X	X	X	X	X
E280, -T	112.921	2799	150	1998	2002	X	X	X	X	X	X	X	X
E280, -T not used	104.945	2799	142	1996	1997	X	X	X	X	X	X	X	X
E290 Turbodiesel, -T	602.982	2874	95	1996	1999	X	X	X	X	X	X	X	X
E300 Diesel, -T	606.912	2996	100	1996	1999	X	X	X	X	X	X	X	X
E300 Turbodiesel, -T	606.962	2996	130	1996	1998	X	X	X	X	X	X	X	X
E320 4-Matic, -T	112.941	3199	165	1997	1999	X	X	X	X	X	X	X	X
E320 CDi, T	613.961	3224	145	1998	2002	X	X	X	X	X	X	X	X
E320 not used	104.995	3199	170	1996	1997	X	X	X	X	X	X	X	X
E320, -T	104.995	3199	162	1996	1997	X	X	X	X	X	X	X	X
E320, -T	112.941	3199	165	1997	1999	X	X	X	X	X	X	X	X
E420, -T	119.985	4196	205	1996	1997	X	X	X	X	X	X	X	X
E430 4-Matic, -T	113.940	4266	205	1997	2002	X	X	X	X	X	X	X	X
E430, -T	113.940	4266	205	1997	2002	X	X	X	X	X	X	X	X
E50 AMG	119.980	4169	235	1996	1997	X	X	X	X	X	X	X	X
E55 AMG, -T	113.980	5439	260	1997	2002	X	X	X	X	X	X	X	X
W211 E, 200 - 55 AMG Kompressor													
E200 CDI	646.820	2148	100	2006		X		X					
E200 CDI	646.951	2148	90	2002	2005	X	X	X	X	X	X	X	X
E200 Kompressor	271.956	1796	120	2005		X		X					
E200 Kompressor, -T	271.941	1796	120	2002	2005	X	X	X	X	X	X	X	X
E200 Kompressor, -T	271.943	1796	120	2002	2005	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
MERCEDES-BENZ													
W211 E, 200 - 55 AMG Kompressor 2002													
E220 CDI	646.821	2148	125	2006		X		X					
E220 CDI, -T	646.961	2148	110	2002	2005	X	X	X	X	X	X	X	X
E240 4-Matic	112.917	2597	130	2002	2005	X	X	X		X	X	X	X
E240, -T	112.913	2597	130	2002	2005	X	X	X	X	X	X	X	X
E270 CDI, -T	647.961	2685	130	2002	2005	X	X	X	X		X	X	X
E280	272.943	2996	170	2006		X		X					
E280 4-Matic	272.944	2996	170	2006		X		X					
E280 CDI	642.920	2987	140	2006		X	X	X					
E280 CDI	648.961	3222	140	2004	2005	X		X					
E280 CDI 4-Matic	642.921	2987	140	2006		X		X					
E320 4-Matic	112.954	3199	165	2003	2005	X	X	X	X	X	X	X	X
E320 CDI 4-Matic	642.921	2987	165	2006		X		X					
E320 CDI, -T	648.961	3222	150	2002	2005	X	X	X	X		X	X	X
E320, -T	112.949	3199	165	2002	2005	X	X	X	X	X	X	X	X
E350	272.964	3498	200	2006		X		X					
E350 4-Matic	272.972	3498	200	2006		X		X					
E400 CDI, -T	628.961	3996	191	2003	2005	X	X	X	X		X	X	X
E420 CDI	629.910	3996	231	2005		X		X					
E500	113.967	4966	225	2002	2005	X	X	X	X	X	X	X	X
E500	273.960	5461	285	2006		X		X					
E500 4-Matic	113.969	4966	225	2003	2005	X	X	X	X	X	X		X
E500 4-Matic	273.962	5461	285	2006		X		X					
E55 AMG Kompressor	113.990	5439	350	2002	2005	X	X	X	X	X	X	X	X
E63 AMG	156.983	6208	378	2006		X		X					
W215 CL, 500 - 55 AMG 1999 2002													
CL500	113.960	4966	228	1999	2002	X	X	X	X	X	X		X
CL55 AMG	113.986	5439	265	1999	2001	X	X	X	X	X	X		X
CL55 AMG Kompressor	113.991	5439	373	1999	2002	X	X	X	X	X	X		X
CL600	137.970	5786	270	1999	2002	X	X	X	X	X	X		X
CL600	275.950	5786	368	1999	2002	X	X	X	X	X	X		X
W219 CLS 2005													
CLS 320 CDi	642.920	2987	167	2005		X	X	X	X		X		X
CLS 350	272.964	3498	203	2005		X	X	X	X		X		X
CLS 500	113.967	4966	306	2005		X	X	X	X	X	X		X
CLS 55 AMG V8 Kompressor	113.990	5439	355	2005		X	X	X	X	X	X		X
W220 S, 320 - 600 1999 2005													
S280	112.922	2799	150	1999	2002	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.		
MERCEDES-BENZ													
W220 S, 320 - 600	1999	2005											
S320	112.944	3199	165	2002	2005	X	X	X	X	X	X	X	X
S320 CDI	613.960	3222	145	2000	2002	X	X	X	X	X	X	X	X
S320 CDI	648.960	3222	150	2002	2005	X	X	X	X		X	X	X
S350	112.972	3724	182	2002	2005	X	X	X	X	X	X	X	X
S350 4-Matic	112.975	3724	182	2002	2005	X	X	X	X	X	X	X	X
S400 CDI	628.960	3996	175	2000	2002	X	X	X	X		X	X	X
S430	113.941	4266	205	2002	2005	X	X	X	X	X	X	X	X
S430 4-Matic	113.948	4266	205	2002	2005	X	X	X	X	X	X	X	X
S500	113.960	4966	225	2002	2005	X	X	X	X	X	X	X	X
S500 4-Matic	113.966	4966	225	2002	2005	X	X	X	X	X	X	X	X
S55 AMG	113.986	5439	265	2000	2001	X	X	X	X	X	X	X	X
S55 AMG Kompressor	113.991	5439	368	2002	2005	X	X	X	X	X	X	X	X
S600	137.970	5786	270	1999	2002	X	X	X	X	X	X	X	X
S600	275.950	5786	368	2002	2005	X	X	X	X		X	X	X
W230 SL, 350 - 600	2001												
SL 350	112.973	3724	180	2002		X	X	X	X	X	X		
SL 500	113.963	4966	225	2001		X	X	X	X	X	X		
SL 55AMG	113.992	5439	368	2001		X	X	X	X	X	X		
SL 600	275.951	5513	368	2002		X	X	X	X		X		
SL 65 AMG	275.981					X	X	X			X		
W245 B	2005												
B 150	266.920	1498	71	2005		X	X	X			X		X
B 170	266.940	1699	86	2005		X	X	X			X		X
B 180 CDi	640.940	1992	81	2005		X	X	X			X		X
B 200	266.960	2035	101	2005		X	X	X			X		X
B 200 CDi	640.941	1992	104	2005		X	X	X			X		X
B 200 Turbo	266.980	1992	144	2005		X	X				X		X
W414 Vaneo	2002	2005											
1.6	166.961	1598	60	2002	2005	X	X	X		X	X		
1.6	166.961	1598	75	2002	2005	X	X	X		X	X		
1.7 CDi	668.914	1689	55	2002	2005	X	X	X		X	X		
1.7 CDi	668.914	1689	67	2002	2005	X	X	X		X	X		
1.9	166.991	1898	92	2002	2005	X	X	X		X	X		
99	99					X	X	X					
W460 G, 200GE - 300GD	1979	1991											
200GE	102.964			1986	1991	X	X	X	X	X			
230G	115.973	2307	66	1979	1989	X	X	X	X			X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
MERCEDES-BENZ													
W460 G, 200GE - 300GD 1979 1991													
230GE	102.981	2299	92	1982	1991	X	X	X	X	X		X	
230GE	102.987	2298	90	1987	1989	X	X	X	X	X		X	
230GE	102.998	2298				X	X	X	X	X			
240GD	616.936	2399	53	1979	1991	X	X	X	X			X	
240GD	616.938	2399				X	X	X	X				
240GD	616.941	2399				X	X	X	X				
250GD	602.930	2497	62	1979	1991	X	X	X	X			X	
280GE	110.994	2746	110	1979	1991	X	X	X	X			X	
300GD	617.931	2998	65	1979	1991	X	X	X	X			X	
300GD	617.932	2998	65	1979	1991	X	X	X	X				
test						X		X					
W460-3 G, 230 - 350 1979													
230G	115	2307	80	1979	1982	X	X		X	X			
230GE	102.981/988	2299	93	1989	1993	X	X	X	X	X		X	
230GE	102.987/989	2299	100	1986	1992	X	X	X	X	X		X	
290 GDT	602.983					X	X	X	X	X			
290GD	602.946/947	2874	72	1992		X	X	X	X				
300 DT	606.964					X	X	X	X	X			
300GD	603.	2997	83	1989	1993	X	X		X	X			
300GE	103.987	2960	126	1989	1993	X	X	X	X	X		X	
320	104.996					X	X	X	X				
320	112.945					X	X	X	X				
350GD Turbo		3449	100	1991		X	X		X	X			
500	113.962					X	X	X	X				
G230		2298	93	1993		X	X		X	X			
G300	103.987	2960	125	1993		X	X	X	X	X		X	
G300 Diesel		2996	83	1993	1996	X	X		X	X			
G320	112.945	3199	155	1993		X	X	X	X	X		X	
W461 G, 230GE - 290GDT 1989													
230GE	102.979	2298	90	1989	1997	X	X	X	X	X		X	
230GE	102.981	2298	93	1989	1997	X	X	X	X	X			
230GE	102.996	2298	92	1989	1997	X	X	X	X	X		X	
230GE	102.997	2298	0	1989	1997	X	X	X	X	X			
230GE	102.998	2298		1989	1997	X	X	X	X	X			
250GD	602.939	2497	68	1990	1997	X	X	X	X			X	
290GD	602.938			1989	1997	X	X	X	X				
290GD	602.942	2874	70	1989	1997	X	X	X	X			X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
MERCEDES-BENZ													
W461 G, 230GE - 290GDT 1989													
290GD	602.946	2874	72	1989	1997	X	X	X	X	X			
290GD	602.947	2874	72	1989	1997	X	X	X	X	X			
290GDT	602.983	2874	88	1997	2001	X	X	X	X	X			X
G270 CDI	612.966			2002		X	X	X		X			
GL	612.966			1997		X	X	X	X	X			
test						X	X	X					
W463 G, 200GE - G500 1990													
200GE	102.965		87	1990	1997	X	X	X	X	X			
230GE, G230	102.989	2298	93	1990	1997	X	X	X	X	X			X
250GD	602.931	2497	69	1990	1997	X	X	X	X	X			X
300GD, G300 Diesel	603.931	2960	83	1990	1997	X	X	X	X	X			X
300GE, G300	103.987	2960	125	1990	1997	X	X	X	X	X			X
350GDTurbo, G350Turbodyesiel	603.972	3449	100	1990	1997	X	X	X	X	X			X
500GE V8	117.965	4973	177	1993	1997	X	X	X	X	X			X
G270 CDI	612.965	2688	115	2002		X	X	X	X	X	X		
G300 DT	606.964	2996	130	1996	2000	X	X	X	X	X	X		X
G320	104.996	3199	155	1994	1997	X	X	X	X	X			X
G320	112.945	3199	158	1997		X	X	X	X	X	X		X
G400 CDI	628.962	3996	184	2002		X	X	X	X	X	X		
G500	113.962	4996	218	1998		X	X	X	X	X	X		X
G500	113.982	5439	218	1998		X	X	X	X	X	X		X
G55 AMG	113.962	5439	350	1998		X	X	X	X	X	X		
G55 AMG	113.982	5439	350	1998		X	X	X	X	X	X		
test						X	X	X					
W601-2 T1, 208 - 410 D 1982 1995													
208 D	601.940	2299	58	1988	1995		X	X					X
210	102.945	2298	70	1982	1995		X	X					X
210 D	602.940	2874	70	1988	1995		X	X					X
308 D	601.940	2299	58	1988	1995		X	X					X
310	102.945	2298	70	1982	1995		X	X					X
310 D	602.940	2874	70	1998	1995		X	X					X
408 D	601.940	2299	58	1988	1995		X	X					X
410	102.945	2298	70	1982	1995		X	X					X
410 D	602.940	2874	70	1988	1995		X	X					X
W631 MB 100 1988 1995													
MB 100	616.963	2399	53	1988	1995		X	X					X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
MERCEDES-BENZ													
W638 Vito / V- 1996 2003													
108 CDI	611.980	2151	60	1999	2003	X	X	X	X	X	X	X	X
108 D	601.942	2299	58	1996	1999	X	X	X	X	X	X	X	X
110 CDI	611.980	2151	75	1999	2003	X	X	X	X	X	X	X	X
110 D	601.970	2299	72	1996	1999	X	X	X	X	X	X	X	X
112 CDI	611.980	2151	90	1999	2003	X	X	X	X	X	X	X	X
113	111.948	1998	95	1996	1999	X	X	X	X	X	X	X	X
113	111.950	1998	95	1999	2003	X	X	X	X	X	X	X	X
114	111.980	1998	105	1999	2003	X	X	X	X	X	X	X	X
114 KA, KB, 4X2, 3000	111.978	2295	105	1996	1999	X	X	X	X	X	X	X	X
V 200	111.948	1998	95	1996	1999	X	X	X	X	X	X	X	X
V 200	111.950	1998	100	1999	2003	X	X	X	X	X	X	X	X
V 200 CDI	611.980	2151	75	1999	2003	X	X	X	X	X	X	X	X
V 220 CDI	611.980	2151	95	1999	2003	X	X	X	X	X	X	X	X
V 230	111.978	2295	105	1996	1999	X	X	X	X	X	X	X	X
V 230	111.980	1998	105	1999	2003	X	X	X	X	X	X	X	X
V 230 TD	601.970	2295	72	1996	1999	X	X	X	X	X	X	X	X
V 280	104.900	2792	128	1996	2003	X	X	X	X	X	X	X	X
W639 Vito / Viano 2003													
9999	99	9				X		X	X				X
Viano 2.0 CDi	646.982	2148	65	2003		X	X	X	X	X	X		X
Viano 2.2 CDi	646.983	2148	80	2003		X	X	X	X	X	X		X
Viano 2.5 CDi	646.984	2148	110	2003		X	X	X	X	X	X		X
Viano 3.0	112.951	3199	140	2003		X	X	X	X	X	X		X
Viano 3.2	112.951	3199	160	2003	2004	X	X	X	X	X	X		X
Viano 3.5	112.976	3724	170	2004		X	X	X	X	X	X		X
Vito 109 CDi	646.982	2148	65	2003		X	X	X	X	X	X		X
Vito 111 CDi	646.983	2148	80	2003		X	X	X	X	X	X		X
Vito 115 CDi	646.984	2148	110	2003		X	X	X	X	X	X		X
Vito 119	112.951	3199	140	2003		X	X	X	X	X	X	X	X
Vito 122	112.951	3199	160	2003	2004	X	X	X	X	X	X	X	X
Vito 123	112.976	3724	170	2004		X	X	X	X	X	X	X	X
W901/2/3/4/5 Sprinter 1995													
208 CDI	611.987	2148	60	2000		X	X	X	X	X	X	X	X
208 D	601.943	2299	58	1995	2000	X	X	X	X	X	X	X	X
210 D	602.980	2874	75	1997	2000	X	X	X	X	X	X	X	X
211 CDI	611.981	2148	80	2000		X	X	X	X	X	X	X	X
212 D	602.980	2874	90	1995	2000	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
MERCEDES-BENZ													
W901/2/3/4/5 Sprinter 1995													
213 CDI	611.983	2148	95	2000		X	X	X	X	X	X	X	X
214	111.979	2295	105	1995	2000	X	X	X	X	X		X	X
214	111.984	2295	105	2000		X	X	X	X	X	X	X	X
216 CDI	612.981	2685	115	2000		X	X	X	X	X	X		X
308 CDI	611.987	2148	60	2000		X	X	X	X	X	X	X	X
308 D	601.943	2299	58	1995	2000	X	X	X	X	X		X	X
310 D	602.980	2874	75	1995	2000	X	X	X	X	X		X	X
311 CDI	611.981	2148	80	2000		X	X	X	X	X	X	X	X
312 D	602.980	2874	90	1995	2000	X	X	X	X	X		X	X
313 CDI	611.983	2148	95	2000		X	X	X	X	X	X	X	X
314	111.984	2295	105	2000		X	X	X	X	X	X	X	X
316 CDI	612.981	2685	115	2000		X	X	X	X	X	X	X	X
408 CDI	611.987	2148	60	2000		X	X	X	X	X	X	X	X
408 D	601.943	2299	58	1996	2000	X	X	X	X	X		X	X
410 D	602.980	2874	75	1996	2000	X	X	X	X	X		X	X
411 CDI	611.981	2148	80	2000		X	X	X	X	X	X	X	X
412 D	602.980	2874	90	1996	2000	X	X	X	X	X		X	X
413 CDI	611.983	2148	95	2000		X	X	X	X	X	X	X	X
414	111.979	2295	105	1996	2000	X	X	X	X	X		X	X
414	111.984	2295	105	2000		X	X	X	X	X	X	X	X
416 CDI	612.981	2685	115	2000		X	X	X	X	X	X	X	X
616 CDI	612.981	2685	115	2000		X	X	X	X	X	X		X
MERCURY													
Cougar 1988 1998													
3.8 V6	994/V6-232	3802	104	1988	1998			X					
4.6 V8	99W/V8-281	4601	153	1994	1998			X					
Grand Marquis 1990 2001													
4.6 V8	99W/V8-281	4601	149	1990	2001			X					
Mystique 1998 2001													
2.0 16V	993/4-121 NGA	1988	93	1998	2001			X					
2.5 V6 24V	DURATEC-	2544	127	1998	2001			X					
Sable 1991													
3.0 V6	99U/V6-182	2986	108	1991				X					
3.0 V6 24V	99Y/V6-182	2986	149	1991				X					
Tracer													
1.8 16V	998/4-112	1840	94		1999			X					

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
MG																			
MGF 1995 2002																			
1.6 MPI	K16	1588	82	2001	2002	X	X	X		X				X					X
1.8 MPI	K18	1796	88	1995	2002	X	X	X		X	X	X		X					X
1.8 VVC	K18VVC	1796	107	1995	2002	X	X	X		X	X	X		X					X
Trophy 160	K18VVC	1796	118	2001	2002	X	X	X		X				X					X
RV8 1993 1996																			
RV8	V8	3948	142	1993	1996	X		X											
TF 2002 2005																			
TF 115	K16	1597	85	2002			X				X	X							
TF 120 Stepspeed	K18	1796	88	2002			X				X	X							
TF 135	K18	1796	100	2002			X				X	X							
TF 160	K18	1796	118	2002			X				X	X							
ZR 2001 2004																			
100 iDT	20T2N	1994	74	2001	2004	X	X	X	X	X	X	X		X					X
105	14K4F	1396	76	2001	2004	X	X	X	X	X	X	X		X					X
115 iDT	20T2N	1994	83	2001	2004	X	X	X	X	X	X	X		X					X
120	18K4F	1796	86	2001	2004	X	X	X	X	X	X	X		X					X
160	18K4	1795	118	2001	2004	X	X	X	X	X	X	X		X					X
ZS 2001 2005																			
100 iDT	20T2N	1994	74	2001	2005	X	X	X	X	X	X	X		X					X
110	16K4F	1588	80	2001	2005	X	X	X	X	X	X	X		X					X
115 iDT	20T2	1994	83	2001	2005	X	X	X	X	X	X	X		X					X
120	18K4F	1796	86	2001	2005	X	X	X	X	X	X	X		X					X
180	25K4F	2497	130	2001	2005	X	X	X	X	X	X	X		X					X
ZT ZT-T 2001 2005																			
120	18K4F	1796	88	2001	2005	X	X	X	X	X	X			X					X
160 Turbo	18K4G	1796	118	2001	2005	X	X	X	X	X	X			X					X
180 V6	25K4F	2497	130	2001	2005	X	X	X	X	X	X			X					X
190 V6	25K4F	2497	140	2001	2005	X	X	X	X	X	X			X					X
260 V8	46F2F	4601	191	2001	2005	X	X	X	X	X	X								X
CDTi 115	204D2 (M47R)	1994	85	2001	2005	X	X	X	X	X	X			X					X
CDTi 135	204D2 (M47R)	1994	96	2001	2005	X	X	X	X	X	X			X					X
MINI																			
Mini R50 2000																			
1.6 16V Cooper	W10 B16B	1598	85	2000		X	X	X	X	X				X	X				
1.6 16V One	W10 B16A	1598	66	2000		X	X	X	X	X				X	X				

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
MINI													
Mini Cooper S R53 2002													
1.6 16V Cooper S	W11 B16A	1598	120	2002		X	X	X	X	X	X		
MITSUBISHI													
3000 1992 1999													
GT	6G72	2972	210	1992	1999	X	X	X		X			X
Carisma 1995 2004													
1.3 16V SOHC	4G13	1299	55	2002	2004	X	X	X	X	X			
1.6 16V SOHC	4G92	1597	66	1995	2004	X	X	X	X	X	X	X	X
1.8 16V DOHC	4G93	1834	103	1995	1999	X	X	X	X	X	X	X	X
1.8 16V GDI	4G93	1834	92	1997	2004	X	X	X	X	X	X	X	X
1.8 16V SOHC	4G93	1834	85	1995	1999	X	X	X	X	X	X	X	X
1.9 DI-D	F9Q	1870	74	2001	2004	X	X	X	X	X			
1.9 TD	F8QT	1870	66	1996	2000	X	X	X	X	X	X	X	X
Colt 1996 2004													
1.3 12V	4G13	1299	55	1996	2001	X	X	X	X	X		X	X
1.6 16V	4G92	1597	66	1996	2001	X	X	X	X	X		X	X
Colt 2005													
1.1 MPI 12V	134.910	1124	55	2005		X	X						
1.3 MPI 16V	135.930	1332	70	2005		X	X						
1.5 DI-D 12V	639.939	1493	70	2005		X	X						
1.5 MPI 16V	135.950	1499	80	2005		X	X						
Colt 1983 1988													
1.2	4G16	1198	44	1986	1988	X	X	X	X			X	
1.5	4G15	1468	55	1983	1988	X	X	X	X	X		X	
1.5	4G15B	1468	51	1986	1988	X	X	X	X	X		X	
1.6 Turbo	G32B	1597	77	1986	1988	X	X	X	X	X			
1.8 D	4D65	1795	44	1983	1988	X	X	X	X	X		X	
Colt 1988 1992													
1.3 12V	4G13	1298	55	1990	1992	X	X	X	X	X		X	
1.3 8V	4G13	1298	51	1988	1990	X	X	X	X	X		X	
1.8 D	4D65	1796	44	1988	1992	X	X	X	X	X		X	
1200	4 G 11	1244	40	1979	1984	X		X	X				
1200	4G16	1198	40	1984	1988	X		X					
1300	4G11	1244	0	1984	1988	X		X					
1400	4 G 12B	1410	52	1979	1984	X		X	X				
1400 Turbo	4 G 12T	1410	77	1980	1984	X		X	X				
1500	4 G 15	1468	55	1983	1988	X		X	X				

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
Identification																			
MITSUBISHI																			
Colt 1988 1992																			
1500	4G15	1468		1987	1989	X			X										
1500	4G15B	1468		1983	1988	X			X										
1500 12V	4G15	1468	66	1990	1992	X	X	X	X	X	X			X				X	
1500 12V	4G15	1468	66	1990	1992	X	X	X	X	X				X				X	
1500 8V	4G15	1468	62	1988	1990	X	X	X	X	X				X				X	
1500 8V	4G15	1468	62	1988	1992	X	X	X	X	X				X				X	
1600 GTi-16V	4G61	1596	94	1988	1990	X	X	X	X	X				X				X	
1600 Turbo	4G32-6ECI-Turbo	1597		1987	1987	X			X	X									
1600 Turbo	4G32-8ECI-Turbo	1597		1987	1988	X			X										
1600 Turbo	4G32TB	1598	92	1983	1988	X			X	X									
1800 GLD	4D65	1795		1987	1988	X			X										
1800 GTi 16V	4G67	1836	100	1989	1992	X	X	X	X	X				X				X	
Colt 1992 1996																			
1.3 i 12V	4G13	1298	55	1992	1996	X	X	X	X	X	X			X		X	X	X	
1.5 i 12V	4G15	1468	66	1992	1996	X	X	X	X	X								X	
1.6 i 16V	4G92	1597	83	1992	1996	X	X	X	X	X	X			X		X	X	X	
1.6i 4WD	4G92	1597	84	1992	1996	X	X	X	X	X	X			X		X	X	X	
1.8 GTi 16V	4G93 DOHC	1834	103	1992	1996	X	X	X	X	X	X		X	X		X	X	X	
Eclipse 1992 1996																			
2.0 GSi 16V	4 G 63	1997	110	1992			X			X				X				X	
Eclipse 1996																			
2.0 16V	4G63 DOHC	1997	107	1996				X											
Galant 1984 1988																			
1.6	4G32	1597	55	1984	1988		X	X		X				X				X	
1.8 TD	4D65	1795	55	1984	1988		X	X		X				X				X	
2.0	4G63	1997	55	1984	1988		X	X		X				X					
2.0 Turbo	4G63	1997	110	1984	1988		X	X		X				X				X	
Galant 1988 1993																			
1.6	4G32	1597	55	1980	1986	X			X										
1.6	4G32	1598	56	1988	1989	X	X	X	X	X				X				X	
1.8	4G37	1755	66	1988	1989	X	X	X	X	X				X				X	
1.8 D	4D65	1796	55	1988	1992	X	X	X	X	X				X				X	
1.8i	4G37	1775	66	1990	1992	X	X	X	X	X				X				X	
2.0	4G63	1997	75	1980	1987	X			X	X									
2.0	4G63	1997	80	1988	1992	X	X	X	X	X				X				X	
2.0 16V	4G63	1997	106	1988	1992	X	X	X	X	X				X				X	
2.0 GTi 4X4 16V 4WS	4G63	1997	110	1989	1992	X	X	X	X	X				X				X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
MITSUBISHI																			
Galant 1988 1993																			
2.0 Turbo A164A Inj.	4G63T	1997	125	1980	1984	X			X	X									
2.0i 4X4	4G63	1997	80	1989	1992	X	X	X	X	X				X			X		
2.0i SOHC 4x4 4WS E39	4G63	1997	82	1988	1992	X	X		X										
Galant 1993 1997																			
1.8 i	4G93	1834	93	1993	1997	X	X	X	X	X	X			X			X	X	
2.0	4G63	1997	101	1993	1997	X	X	X	X	X	X			X			X	X	
2.0 4WD	4G63	1997	101	1993	1997	X	X	X	X	X	X			X			X	X	
2.0 TD	4D68	1998	66	1993	1997	X	X	X	X	X				X			X	X	
2.0 V6 24V	6A12	1999	110	1993	1997	X	X	X	X	X	X			X			X	X	
2.0 V6 24V 4WS	6A12	1999	110	1993	1997	X	X	X	X	X	X			X			X	X	
2.5 V6 24V 4WD	6G73	2497	125	1993	1997	X	X	X	X	X	X			X			X	X	
Galant 1997 2004																			
2.0	4G63	1997	100	1997	2004	X	X	X		X	X	X		X			X	X	
2.0 TD	4D68	1998	66	1997	2004	X	X	X		X	X	X		X			X	X	
2.5 V6 24V	6A13	2498	120	1997	2004	X	X	X		X	X	X		X			X	X	
L200 1997																			
2.0 16V	4G63	1997	90	1997		X	X	X		X				X				X	
2.4 16V 4x4	4G64	2351	97	1997		X	X	X		X				X				X	
2.5 D	4D56	2477	55	1997	2001	X	X	X		X				X				X	
2.5 TD 4x4	4D56	2477	73	1997	2001	X	X	X		X				X				X	
2.5 TDi	4D56	2477	66	2001		X	X												
2.5 TDi 4x4	4D56	2477	85	2001		X	X												
3.0 V6 4x4	6G72	2972	110	2001		X	X												
L300 1987 2003																			
1.6	4G32	1597	48	1987	1989	X	X	X	X				X	X		X		X	
1.6	4G32	1597	51	1989	2000	X	X	X	X				X	X		X		X	
1.6 LWB	4G32	1597	48	1987	1989	X	X	X	X				X	X		X		X	
1.6 LWB	4G32	1597	51	1989	2000	X	X	X	X				X	X		X		X	
2.0	4G63	1997	65	1987	1989	X	X	X	X				X	X		X		X	
2.0	4G63	1997	65	1989	2003	X	X	X	X				X	X		X		X	
2.0 4x4	4G63	1997	65	1987	1989	X	X	X	X				X	X		X		X	
2.0 4x4	4G63	1997	65	1989	2003	X	X	X	X				X	X		X		X	
2.0 Automatic	4G63	1997	65	1991	2003	X	X	X	X				X	X		X		X	
2.0 LWB	4G63	1997	65	1989	1989	X	X	X	X				X	X		X		X	
2.0 LWB	4G63	1997	65	1989	2003	X	X	X	X				X	X		X		X	
2.0 Pick-up	4G63	1997	65	1989	2003	X	X	X	X				X	X		X		X	
2.0i	4G63	1997	85	1994	2003	X	X	X	X				X	X		X		X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	
MITSUBISHI													
L300 1987 2003													
2.0i LWB	4G63	1997	85	1994	2003	X	X	X	X		X	X	X
2.0i Pick-up	4G63	1997	85	1987	2003	X	X	X	X		X	X	X
2.5 D	4D56	2477	51	1987	1989	X	X	X	X		X	X	X
2.5 D	4D56	2477	51	1989	2001	X	X	X	X		X	X	X
2.5 D LWB	4D56	2477	51	1987	1989	X	X	X	X		X	X	X
2.5 D LWB	4D56	2477	51	1989	2001	X	X	X	X		X	X	X
2.5 D LWB	4D56	2477	51	1992	2001	X	X	X	X		X	X	X
2.5 D Pick-up	4D56	2477	51	1987	2001	X	X	X	X		X	X	X
2.5 D Pick-up (low polution)	4D56	2477	51	1987	2001	X	X	X	X		X	X	X
2.5 Turbo D 4x4	4D56	2477	64	1987	1989	X	X	X	X		X	X	X
2.5 Turbo D 4x4	4D56	2477	64	1989	2001	X	X	X	X		X	X	X
2.5 Turbo D LWB 4x4	4D56	2477	64	1991	2001	X	X	X	X		X	X	X
L400 1995 2001													
2.0	4G63	1997	78	1995	2001	X	X	X	X		X		X
2.0 LWB	4G63	1997	78	1995	2001	X	X	X	X		X		X
2.0i	4G63	1997	85	1995	2001	X	X	X	X		X		X
2.0i LWB	4G63	1997	85	1995	2001	X	X	X	X		X		X
2.4i 4x4	4G64	2351	97	1995	2001	X	X	X	X		X		X
2.5 TD	4D56	2476	64	1995	2001	X	X	X	X		X		X
2.5 TD 4x4	4D56	2476	64	1995	2001	X	X	X	X		X		X
2.5 TD LWB	4D56	2476	64	1995	2001	X	X	X	X		X		X
Lancer 2004													
1.3 16V MPI	4G13	1298	60	2004		X	X	X	X				
1.6 16V MPI	4G18	1584	72	2004		X	X	X	X				
2.0 16V MPI	4G63	1997	99	2004		X	X	X	X		X		
Lancer 1983 1988													
1.2	4G16	1198	44	1986	1988	X	X	X	X		X		X
1.2 EL,GL -F-	CA155A	1198	40	1983	1984	X							
1.2 EL,GL,GLX	A171A	1244	41	1979	1983	X							
1.3 Wagon	4G13	1299	51	1988	1991	X	X	X	X		X	X	X
1.4 GL,GLX	A172A	1410	52	1979	1983	X							
1.4 GLX -F-	A156A	1410	52	1983	1984	X							
1.5	4G15	1468	51	1986	1988	X	X	X	X		X		X
1.5	4G15	1468	55	1986	1988	X	X	X	X		X		X
1.5 GLX, Wagon	C12A/V	1468	55	1984	1988	X							
1.5 Wagon	4G15	1468	55	1985	1988	X	X	X	X		X	X	X
1.5 Wagon	4G15	1468	60	1988	1991	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
MITSUBISHI																			
Lancer 1983 1988																			
1.5i Wagon	4G15	1468	60	1988	1991	X	X	X		X			X	X				X	
1.6 GSR	A174A	1597	60	1979	1984	X												X	
1.8 4x4 Wagon	4G37	1755	44	1988	1991	X	X	X		X				X				X	
1.8 D	4D65	1795	44	1986	1988	X	X	X		X				X				X	
1.8 D Wagon	4D65	1795	44	1985	1988	X	X	X		X				X				X	
1.8 D Wagon	4D65	1796	44	1988	1991	X	X	X		X				X				X	
Lancer 1988 1992																			
1.2 SOHC	4G16	1198	40	1988	1992	X	X	X	X	X				X				X	
1.3 12V	4G13	1298	55	1990	1992	X	X	X	X	X				X				X	
1.3 8V	4G13	1298	44	1988	1990	X	X	X	X	X				X				X	
1.3i 8V	4G13	1298	51	1992		X	X	X	X	X	X			X				X	X
1.5	4G15	1468	55	1988	1990	X	X	X	X	X				X				X	
1.5 i 12V	4G15	1468	67	1990	1992	X	X	X	X	X	X			X				X	
1.5 i 8V	4G15	1468	62	1988	1990	X	X	X	X	X				X				X	
1.6 SOHC	4G92	1597	83	1992		X	X	X	X	X	X			X				X	X
1.6 SOHC 4x4	4G92	1597	83	1992		X	X	X	X	X	X			X					X
1.8 D	4D65	1795	44	1988	1992	X	X	X	X	X				X				X	
1.8 D Wagon	4D65	1795	44	1988	1992	X	X		X	X									
1.8 DOHC	4G93	1834	104	1992		X	X	X	X	X	X			X				X	X
1.8 GTi 16V	4G67	1755	100	1989	1992	X	X	X	X	X				X				X	
1.8i 4WD	4G37	1755	71	1988	1992	X	X	X	X	X				X				X	
2.0 D	4D68	1998	50	1992		X	X	X	X	X				X				X	X
Lancer 1992 1996																			
1.3i 12V	4G13	1298	55	1992	1996	X	X	X	X	X									X
1.3i 12V	4G13	1298	58	1992	1996	X	X	X	X	X	X			X		X	X	X	
1.6i	4G92	1597	83	1992	1996	X	X	X	X	X	X		X	X		X	X	X	
1.6i 4X4	4G92	1597	83	1992	1996	X	X	X	X	X	X			X		X	X	X	
1.8 GTi 16V	4G93	1836	103	1992	1996	X	X	X	X	X	X		X	X		X	X	X	
2.0 D	4D68	1998	50	1992	1996	X	X	X	X	X				X				X	X
Lancer 1996 2001																			
1.3 12V	4G13	1299	55	1996	2003	X	X	X	X	X	X	X	X	X				X	X
1.6 16V	4G92	1597	66	1996	2003	X	X	X	X	X	X	X	X	X					X
Lancer EVO VIII 2002																			
EVO VIII	4G63	1997	195	2002		X	X	X		X									
Outlander 2003																			
2.0 16V	4G63-7	1997	100	2003		X	X	X		X				X					
2.0 16V Turbo	4G63-7	1997	148	2005		X	X	X		X				X					

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diag.	
MITSUBISHI													
Outlander 2003													
2.4	4G69-2	2369	118	2004		X	X	X		X			
Pajero Montero 2000													
2.5 TD	4D56	2477	73	2000	2002	X	X	X		X			X
2.5 TD	4D56	2477	85	2002		X	X	X		X			
3.2 DI-D	4M41	3200	118	2002		X	X	X		X			
3.2 DI-D	4M41	3200	121	2000	2002	X	X	X		X			X
3.5 V6 GDi	6G74	3496	149	2000		X	X	X		X			X
Pajero Shogun 1983 2000													
2.3 D	4D55	2347	62	1983	1986	X	X	X		X			X
2.4	4G64	2351	82	1991	1994	X	X	X		X		X	X
2.5 D	4D56	2477	62	1986	1990	X	X	X		X		X	
2.5 TD	4D56	2477	69	1988	1991	X	X	X		X		X	
2.5 TD	4D56	2477	70	1989	1991	X	X	X		X		X	
2.5 TD	4D56	2477	73	1991	2000	X	X	X		X		X	
2.6	4G54	2555	79	1986	1988	X	X	X		X			X
2.6	4G54	2555	79	1988	1991	X	X	X		X		X	
2.6	G54B	2555	76	1988	1991	X	X	X		X		X	
2.8 TD	4M40	2835	92	1994	2000	X	X	X		X			X
3.0 V6 12V	6G72	2972	104	1989	1991	X	X	X		X		X	
3.0 V6 12V	6G72	2972	110	1991	1994	X	X	X		X		X	X
3.0 V6 24V	6G72	2972	130	1997	2000	X	X	X		X			
3.0 V6 24V	6G72	2972	134	1994	1997	X	X	X	X	X			X
3.5 V6 24V	6G74	3497	153	1994	2000	X	X	X		X			X
Pajero Pinin Montero io 1999 2005													
1.8	4G93	1834	84	2001	2005	X	X	X		X			
1.8 GDi	4G93	1834	88	1999	2001	X	X	X		X			
2.0 GDi	4G94	1999	95	2000	2005	X	X	X		X			
Pajero Sport Montero Sport 1999													
2.5 TD	4D56	2477	73	1999	2002	X	X	X		X			
2.5 TD	4D56	2477	85	2002		X	X	X		X			
3.0 V6	6G72	2972	125	2002		X	X	X		X			
3.0 V6	6G72	2972	130	1999	2002	X	X	X		X			
Sapporo 1986 1990													
1600	4G32	1597	56	1980	1985	X		X					
1600	4G32	1597	55	1978	1980	X		X					
2000	4G52	1995	67	1978	1980	X		X					
2000	4G63	1995	75	1980	1982	X		X					

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
MITSUBISHI													
Sapporo 1986 1990													
2000i	4G63TB	1997	125	1981	1985	X		X					
2400 i	4G64	2351	91	1987	1990	X	X	X		X		X	
Sigma 1989 1996													
3.0 V6 24V	6G72 DOHC	2972	154	1989	1996		X	X		X		X	
3.0 V6 Estate / Wagon	6G72	2972	125	1993	1996		X	X		X			
Space gear 1994 1998													
2.0	4G63	1997	78	1994	1998	X	X	X		X			X
2.0i	4G63	1997	85	1994	1998	X	X	X		X			X
2.4 i 4x4	4G64	2351	97	1994	1998	X	X	X		X			X
2.4i	4G64	2351	97	1994	1998	X	X	X		X			X
2.5 D	4D56	2477	64	1994	1998	X	X	X		X			X
2.5 D 4x4	4D56	2477	64	1994	1998	X	X	X		X			X
2.5 D intercooler	4D56	2477	73	1994	1998	X	X	X		X			X
2.5 D intercooler 4x4	4D56	2477	73	1994	1998	X	X	X		X			X
Space runner 1998 2004													
1.8 GDi	4G93	1834	110	1998	2004	X	X	X		X			X
Space star 1998													
1.3	4G13	1299	60	1998		X	X	X		X			X
1.6	4G92			2003		X							
1.8	4G93			1999		X	X						
1.8 GDi	4G93	1834	90	1998		X	X	X		X			X
1.9 DI-D	F9Q			2001		X							
Space wagon 1998 2004													
2.4 GDi	4G64	2351	108	1998	2004	X	X	X	X	X			X
Space wagon 1984 1991													
1.8	4G37	1755	66	1984	1991	X	X	X		X		X	
1.8 TD	4D65T	1796	53	1991	1991	X	X	X		X		X	X
1.8 TD	4D65T	1796	55	1985	1991	X	X	X		X		X	X
2.0 4WD	4G63	1997	75	1985	1991	X	X	X		X		X	X
2.0i	4G63	1997	75	1988	1991	X	X	X		X		X	X
2.0i 4WD	4G63	1997	76	1989	1991	X	X	X		X		X	X
Space wagon Space Runner / Chariot 1991 1998													
1.8i	4G93	1834	90	1991	1998	X	X	X	X	X		X	X
1.8i 4WD	4G93	1834	89	1991	1998	X	X	X	X	X		X	X
2.0 TD	4D68	1998	60	1992	1998	X	X	X		X		X	X
2.0i	4G63	1977	97	1992	1998	X	X	X	X	X			

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
mitsubishi													
Space wagon Space Runner / Chariot 1991 1998													
2.0i 4WD	4G63	1997	97	1992	1998	X	X	X	X	X	X	X	X
2.4i	4G64	2350	92	1992	1998	X	X	X	X	X	X	X	X
Starion 1982 1991													
2000 EX Turbo	4G63TC	1997	132	1986	1989	X		X	X				X
2000 EX Turbo	4G63T	1997	125	1982	1989	X			X				
2600 EX Turbo	4G54TB	2554	114	1988	1991	X	X	X	X				
NISSAN													
100NX B13 1990 1995													
100 NX 1.6	GA16DS	1597	66	1991	1992	X	X	X	X	X	X	X	X
100 NX 1.6	GA16DE	1597	75	1991	1995	X	X	X	X	X	X	X	X
100 NX 2.0 GTi	SR20DE	1998	105	1991	1995	X	X	X	X	X	X	X	X
200SX S13 1988 1994													
200 SX Turbo	CA18DET	1809	124	1988	1994	X	X	X	X		X	X	X
200SX S14 1994 1999													
200 SX Turbo	SR20DET	1998	148	1994		X	X	X	X	X	X	X	X
300ZX Z32 1989 1995													
300 ZX Twin Turbo	VG30DETT	2960	208	1989	1995	X	X	X	X	X	X	X	X
350Z Z33 2003													
350Z	VQ35DE	3498	213	2003		X	X	X	X		X	X	X
Almera N15 1995 2000													
1.4	GA14DE	1392	64	1995	2000	X	X	X	X	X	X	X	X
1.6	GA16DE	1597	73	1995	2000	X	X	X	X	X	X	X	X
2.0 D	CD20	1974	55	1995	2000	X	X	X	X	X	X	X	X
2.0 GTi	SR20DE	1998	105	1996	2000	X	X	X	X	X	X	X	X
Almera N16 2000													
1.5	QG15DE	1497	67	2000	2003	X	X	X	X	X	X	X	X
1.5	QG15DE	1497	67	2003		X	X	X	X	X	X	X	X
1.5 DCi	K9K	1461	60	2002		X	X	X	X	X	X	X	X
1.8	QG18DE	1769	84	2000	2003	X	X	X	X	X	X	X	X
1.8	QG18DE	1769	84	2003		X	X	X	X	X	X	X	X
2.2 D	YD22DDT	2184	82	2000	2003	X	X	X	X	X	X	X	X
2.2 DCi 112	YD22DDT	2184	82	2003		X	X	X	X	X	X	X	X
2.2 DCi 136	YD22DDTi	2184	100	2003		X	X	X	X	X	X	X	X
Almera Tino V10 2000													
1.8	QG18DE	1769	84	2000	2003	X	X	X	X	X	X	X	X
1.8	QG18DE	1769	84	2003		X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
NISSAN													
Almera Tino V10 2000													
2.0	SR20DE	1998	104	2000	2003	X	X	X	X	X	X		X
2.2 D	YD22DDT	2184	84	2000	2003	X	X	X	X	X	X		X
2.2 DCi 112	YD22DDT	2184	82	2003		X	X	X	X		X		
2.2 DCi 136	YD22DDTi	2184	100	2003		X	X	X	X		X		
Bluebird 1986 1990													
1.6	CA16S	1598	60	1986	1988			X					
1.6	CA16S	1598	62	1988	1990			X					
1.8 LX,SLX	CA18NS	1796	90	1987	1990			X					
1.8 Turbo	CA18ET	1809	99	1986	1990			X					
2.0	CA20S	1974	75	1986	1988			X				X	
2.0 Wagon	CA20S	1973	77	1986	1990			X					
2.0 D	LD20	1952	49	1986	1990			X				X	
2.0 kat.	CA20S	1973	75	1988	1990			X				X	
2.0i Kat.	CA20E	1974	77	1986	1988			X	X			X	
2.0i Wagon	CA20E	1973	77	1986	1990			X	X				
Interstar X70 2002													
1.9 dCi	F9Q-772	1870	60	2002		X	X	X	X		X		X
2.2 dCi	G9T-722	2188	66	2002		X	X	X	X		X		X
2.5 dCi	G9U-720	2463	85	2002		X	X	X	X		X		X
Kubistar X76 2003													
1.2 16V	D4F 712	1149	57	2003		X	X	X	X		X		X
1.2 8V	D7F 726	1149	44	2003		X	X	X	X		X		X
1.5 dci	K9K 702	1461	41	2003		X	X	X	X		X		X
1.5 dci	K9K 704	1461	48	2003		X	X	X	X		X		X
1.5 dci	K9K 710	1461	60	2003		X	X	X	X		X		X
1.6 16V	K4M 752	1598	72	2003		X	X	X	X		X		X
1.6 16V	K4M 753	1598	72	2003		X	X	X	X		X		X
Test						X		X					
Laurel C32 1985 1989													
2.0	CA20S	1973	77	1985	1989	X	X	X	X		X		
2.4 E	L24E	2393	94	1985	1989	X	X	X	X		X	X	
2.8 D	LD28	2792	62	1985	1987	X	X	X	X		X	X	
2.8 D	RD28	2825	66	1987	1989	X	X	X	X		X	X	
3.0 E	VG30E	2960	112	1987	1989	X	X	X	X		X		
Maxima J30 1988 1994													
3.0 E	VG30E	2960	125	1988	1994	X	X	X	X		X	X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	
NISSAN													
Maxima QX A32 1994 2000													
QX 2.0	VQ20DE	1995	103	1994	2000	X	X	X	X	X	X		
QX 3.0	VQ30DE	2988	142	1994	2000	X	X	X	X	X	X		
Maxima QX A33 2000													
QX 2.0	VQ20DE	1995	103	2000		X	X	X	X		X		X
QX 3.0	VQ30DE	2988	142	2000		X	X	X	X		X		X
Micra K10 1982 1992													
1.0	MA10	988	37	1982	1989	X	X	X	X		X	X	
1.0	MA10	988	40	1989	1992	X	X	X	X		X	X	
1.2	MA12	1235	40	1989	1992	X	X	X	X		X	X	
Micra K11 1992 2002													
1.0	CG10DE	998	40	1992	2000	X	X	X	X		X	X	X
1.0	CG10DE	998	44	2000	2002	X	X		X				X
1.3	CG13DE	1275	55	1992	2000	X	X	X	X		X	X	X
1.4	CGA3DE	1348	60	2000	2002	X	X		X				X
1.5 D	VJZ	1527	42	1998	2002	X		X					X
Micra K12 2002													
1.0 16V	CR10DE	998	48	2002		X	X	X	X	X	X		X
1.2 16V	CR12DE	1240	59	2002		X	X	X	X	X	X		X
1.4 16V	CR14DE	1386	65	2002		X	X	X	X	X	X		X
1.5 dCi	K9K-704	1461	48	2003		X	X	X	X				X
1.5 dCi 82	K9K-710?	1461	60	2003		X	X	X					X
Murano Z50 2004													
3.5 V6	VQ35DE	3500	172	2004		X	X	X	X		X		
Note E11 2006													
1.4 16V	CR14DE	1386	65	2006		X	X	X	X				
1.5 dCi	K9K	1461	63	2006		X	X	X	X		X		
1.6 16V	HR16DE	1598	81	2006		X	X	X	X				
Pathfinder R51 2005													
2.5 TDi DOHC	YD25DDTi	2448	130	2005		X	X	X	X		X		
4.0 V6 DOHC	VQ40DE	3954	200	2005		X	X	X	X		X		
Patrol 260/Y60 1983 1998													
2.8	L28	2753	89	1983	1989	X	X	X	X		X		
2.8 D	RD28	2826	68	1991	1997	X	X	X	X				
2.8 TD	RD28T	2826	85	1988	1997	X	X	X	X				
3.0	RB30S	2962	100	1989	1993	X	X	X	X				
3.3 D	SD33	3246	70	1983	1989	X	X	X	X				

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
NISSAN																			
Patrol 260/Y60 1983 1998																			
3.3 D	SD33T	3246	81	1983	1989	X	X	X	X	X									
GR 2.8 TD	RD28T	2826	85	1988	1998	X	X	X	X	X									
GR 4.2	TB42E	4169	125	1992	1998	X	X	X	X	X				X					
GR 4.2 D	TD42	4169	91	1993	1998	X	X	X	X	X									
Patrol GR Y61 1998																			
2.8D	RD28ETi	2826	85	1998	2000	X	X	X	X	X				X					X
3.0D	ZD30DDTi	2953	117	2000		X	X	X	X	X				X					
Prairie M10 1985 1989																			
1.5	E15S	1488	55	1987	1989		X	X	X	X				X					
1.8	CA18S	1809	65	1987	1989		X	X	X	X				X					
2.0	CA20S	1974	77	1985	1989		X	X	X	X				X					
Prairie M11 1988 1995																			
2.0	CA20S	1974	73	1989	1991	X	X	X	X	X				X					
2.0i	CA20E	1974	72	1989	1995	X	X	X	X	X	X			X					
2.4 12V	KA24E	2389	98	1990	1995	X	X	X	X	X	X			X					
Primastar X83 2002																			
1.9 dCi 100	F9Q-762	1870	75	2002		X	X	X		X	X	X		X					X
1.9 dCi 80	F9Q-760	1870	61	2002		X	X	X		X	X	X		X					X
2.0 16V	F4R-720	1998	88	2002		X	X	X			X	X							X
2.5 dCi 140	G9U-730	2464	99	2002		X	X												
Primera P10/W10 1990 1996																			
1.6	GA16DS	1597	66	1990	1993	X	X	X	X	X	X			X			X	X	
1.6 16V	GA16DE	1597	75	1990	1996	X	X	X	X	X	X		X	X			X	X	
2.0 D	CD20	1974	55	1990	1993	X	X	X	X	X	X		X	X			X	X	
2.0 D	CD20	1974	55	1993	1996	X	X	X	X	X	X		X	X			X	X	
2.0 GT	SR20DE	1998	109	1993	1996	X	X	X	X	X	X			X			X	X	
2.0i	SR20DI	2000	85	1990	1993	X	X	X	X	X	X			X			X	X	
2.0i	SR20DE	1998	110	1990	1993	X	X	X	X	X	X		X	X			X	X	
2.0i	SR20DE	1998	91	1993	1996	X	X	X	X	X	X		X	X			X	X	
Primera P11 1996 2000																			
1.6	GA16DE	1597	73	1996	2000	X	X	X		X	X			X			X	X	
2.0	SR20DE	1998	96	1996	2000	X	X	X		X	X			X			X	X	
2.0 GT	SR20DE	1998	110	1996	2000	X	X	X		X	X			X			X	X	
2.0 TD	CD20T	1974	66	1996	2000	X	X	X		X	X			X			X	X	
Primera P11-144 2000 2002																			
1.6	GA16DE	1597	74	2000	2001	X	X	X	X	X	X	X		X			X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
NISSAN													
Primera P11-144 2000 2002													
1.8	QG18DE	1769	84	2000	2001	X	X	X	X	X		X	X
2.0	SR20DE	1998	104	2000	2001	X	X	X	X	X		X	X
2.0DT	CD20T	1974	67	2000	2001	X	X	X	X	X		X	X
Primera P12 2002													
1.6	QG16DE	1597	73	2001		X	X	X	X	X			X
1.8	QG18DE	1769	85	2001		X	X	X	X	X			X
1.9 DCi	F9Q	1870	88			X		X					
2.0	QR20DE	1998	103	2001		X	X	X	X	X			X
2.2D	YD22DDTI	2184	93	2001		X	X	X	X	X			X
Serena C23 1992 2000													
1.6	GA16DE	1597	71	1992	2000	X	X	X	X	X		X	
2.0	SR20DE	1998	93	1992	2000	X	X	X	X	X		X	
2.0 D	LD20	1952	49	1992	1994	X	X	X	X	X		X	
2.3 D	LD23	2283	55	1994	2000	X	X	X	X	X		X	
Silvia S12 1984 1988													
1.8 i Turbo	CA18ET	1809	99	1984	1988	X	X	X	X	X			
2.0 i	CA20E	1974	83	1984	1988	X	X	X	X	X			
2.0 i	FJ20E	1990	106	1984	1988	X	X	X	X	X		X	
Sunny B12/N13 1982 1990													
1.0	E10S	988	37	1986	1990	X	X	X	X	X			
1.3	E13S	1270	44	1986	1989	X	X	X	X	X			
1.4 12V	GA14S	1392	55	1989	1990	X	X	X	X	X		X	
1.6 12V	E16S	1597	62	1986	1990	X	X	X	X	X		X	
1.6 12V (4x4)	E16S	1597	62	1989	1991	X	X	X	X	X		X	
1.6 GTi 16V	CA16DE	1598	88	1987	1990	X	X	X	X	X		X	
1.6i 12V (4x4)	GA 16i	1597	66	1988	1991	X	X	X	X	X		X	
1.7D	CD17	1681	40	1986	1990	X	X	X	X	X		X	
1.8 GTi	CA18DE	1809	92	1990	1990	X	X	X	X	X		X	
Sunny N14/Y10 1990 1994													
1.3	GA13DS	1295	44	1990	1994	X	X	X	X	X		X	X
1.4	GA14DS	1392	55	1990	1994	X	X	X	X	X		X	X
1.4 N14	GA14DS	1392	55	1990	1994	X	X	X	X	X		X	X
1.4 Y10	GA14DS	1392	55	1990	1994	X	X	X	X	X		X	
1.4i 16V	GA14DE	1392	64	1992	1994	X	X	X	X	X		X	X
1.6 N14	GA16DS	1597	66	1990	1994	X	X	X	X	X		X	X
1.6 N14 ???	GA16DS	1597	66	1990	1994	X		X	X	X		X	X
1.6 Y10	GA16DS	1597	66	1990	1994	X	X	X	X	X	X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
NISSAN																			
Sunny N14/Y10 1990 1994																			
1.6i 16V N14	GA16DE	1597	75	1992	1994	X	X	X	X	X	X			X				X	X
1.6i 16V N14 ???	GA16DE	1597	75	1992	1994	X		X	X	X	X			X				X	X
1.6i 16V Y10	GA16DE	1597	75	1992	1994	X	X	X	X	X	X		X	X				X	
1.7 D	CD17	1681	40	1990	1994	X	X	X	X	X	X		X	X					X
2.0 D N14	CD20	1974	55	1990	1994	X	X	X	X	X	X			X				X	X
2.0 D N14 ???/	CD20	1974	55	1990	1994	X		X	X	X	X			X				X	X
2.0 D Y10	CD20	1974	55	1990	1994	X	X	X	X	X	X		X	X				X	
2.0 GTi N14	SR20DE	1998	105	1990	1994	X	X	X	X	X	X			X				X	X
2.0 GTi Sedan N14 ????	SR20DE	1998	105	1990	1994	X	X	X	X	X	X			X				X	X
2.0 GTi-R Turbo	SR20DET	1998	162	1990	1994	X	X	X	X	X	X			X				X	
Terrano I 1987 1993																			
2.4i 4X4	Z24i	2389	74	1987	1993	X	X	X	X	X				X					X
2.7 TD	TD27T	2664	69	1989	1993	X	X	X	X	X				X					X
3.0i 4x4	VG30E	2960	95	1987	1991	X	X	X	X	X				X					X
3.0i 4X4	VG30i	2960	95	1987	1993	X	X	X	X	X									X
Terrano II R20 1993 2001																			
2.4	KA24E	2389	91	1993	2001	X	X	X	X	X	X			X					X
2.7 D	TD27	2664	92	1993	2001	X	X		X	X									X
2.7 TD	TD27T	2664	92	1993	2001	X	X	X	X	X	X			X					X
Urvan E24 1986 2001																			
2.0	Z20S	1952	64	1986	1994	X	X	X		X				X					
2.3 D	TD23	2289	51	1986	1989	X	X	X		X									
2.3 D automatic	TD23	2289	51	1986	1989	X	X	X		X									
2.4i	Z24i	2389	76	1994	1996	X	X	X		X	X			X					
2.5 D	TD25	2494	55	1989	1996	X	X	X		X	X								
2.5 D	TD25	2494	59	1994	2001	X	X	X		X									
2.5 D automatic	TD25	2494	55	1989	1994	X	X	X		X									
X-Trail T30 2001																			
2.0	QR20DE	1998	103	2001	2004	X	X	X	X	X				X					X
2.0	QR20DE	1998	103	2004		X	X	X	X	X				X					X
2.2D	YD22DDTi	2184	84	2001	2004	X	X	X	X	X				X					X
2.2D	YD22DDTi	2184	84	2004		X	X	X	X	X				X					X
2.2dCi	YD22 ??	2184	102	2004		X			X										
2.5	QR25DE	2448	121	2002	2004	X	X	X	X	X				X					X
2.5	QR25DE	2448	121	2004		X	X	X	X	X				X					X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diagn.	
OLDSMOBILE													
Achieva 1991 1999													
2.4 16V	LD9	2392	112	1996	1999		X						
3.1 V6	L82	3135	115	1991	1999		X						
Aurora 1995													
4.0 V8 32V		3998	186	1995			X						
Cutlass 1997													
3.1 V6	L82	3146	112	1997			X						
Eigthy-Eight 1995													
3.8 LSS Supercharger	L67	3791	179	1996			X						
3.8 V6	L36	3791	153	1995			X						
Intrigue 1996													
3.8 V6	L36	3791	145	1996			X						
Silhouette 1996													
3.4 V6	LA1	3350	134	1996			X						
OPEL / VAUXHALL													
Agila 2000													
1.0 12V	Z 10 XE	973	43	2000		X	X	X	X	X	X	X	X
1.0 12V	Z 10 XEP	998	44	2004		X	X	X	X	X	X		
1.2 16V	Z 12 XE	1199	55	2000		X	X	X	X	X	X	X	X
1.3 CDTi 16V	Z 13 DT	1248	51	2004		X	X	X	X	X	X		
Ascona C / Cavalier 1981 1988													
1.3 N	13 N OHC	1297	44	1981	1987	X	X	X					
1.3 S	13 S OHC	1297	55	1981	1987	X							
1.6 D	16 D	1598	40	1981	1988	X	X						
1.6 i	C 16 NZ	1598	55	1987	1988	X	X	X		X		X	
1.6 N	C 16 LZ	1598	55	1986	1988	X	X	X		X		X	
1.6 S	16 SH	1598	61	1987	1988	X	X	X		X		X	
1.6 S	16 SV	1598	60	1981	1986	X	X	X		X		X	
1.8	18 SE	1796	82	1986	1988	X	X	X		X			
1.8	C 18 NE	1796	62	1986	1988	X	X	X		X		X	
1.8	E 18 NV	1796	62	1987	1988	X	X	X		X		X	
1.8 E	18 E	1796	85	1982	1986	X	X	X		X		X	
2.0 i ,GT	C 20 NE	1998	85	1986	1988	X	X	X		X		X	
20	20 SEH	1998	95	1987	1988	X	X	X		X		X	
Astra F 1992 1999													
1.4i	14 SE	1389	60	1993	1998	X	X	X	X	X		X	X
1.4i	X 14 NZ	1389	44	1997	1999	X	X	X	X	X		X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
OPEL / VAUXHALL													
Astra F 1992 1999													
1.4i	C 14 NZ	1389	44	1991	1998	X	X	X	X	X		X	X
1.4i 16V	X 14 XE	1389	66	1996	1998	X	X	X	X	X			X
1.4S	14 NV	1389	55	1992	1993	X		X		X		X	X
1.4Si	C 14 SE	1389	60	1991	1998	X	X	X	X	X		X	X
1.6i	16 LZ2	1598	55	1996	1998	X	X	X	X	X		X	X
1.6i	16 NZR	1598	55	1997	1999	X	X	X		X			X
1.6i	X 16 SZ	1598	52	1993	1998	X	X	X	X	X		X	X
1.6i	X 16 SZR	1598	55	1996	1999	X	X	X	X	X			X
1.6i	C 16 NZ	1598	55	1991	1996	X	X	X	X	X		X	X
1.6i 16V	X 16 XEL	1598	74	1993	1999	X	X	X	X	X		X	X
1.6S	16 SV	1598	60	1992	1992	X	X	X		X			X
1.6Si	C 16 SE	1598	74	1991	1998	X	X	X	X	X		X	X
1.7 D	17 D	1686	42	1992	1992	X	X	X		X		X	X
1.7 D	17 DR	1686	44	1993	1994	X	X	X		X		X	X
1.7 TD	X 17 DTL	1700	50	1995	1998	X	X	X		X		X	X
1.7 TD	17 DT/ TC4EE1	1686	60	1992	1994	X	X	X		X		X	X
1.7 TDS	X 17 DT	1686	60	1995	1998	X	X	X		X			X
1.8i	C 18 NZ	1796	66	1991	1996	X	X	X	X	X		X	X
1.8i 16V	C 18 SEL	1798	85	1996	1998	X	X	X	X	X			X
1.8i 16V	C 18 XEL	1799	85	1995	1997	X	X	X	X	X		X	X
1.8i 16V	X 18 XE	1796	85	1996	1998	X	X	X	X	X			X
1.8i 16V	C 18 XE	1798	92	1993	1996	X	X	X	X	X		X	X
2.0i	20 SEH	1998	95	1992	1992	X	X	X		X			X
2.0i	C 20 NE	1998	85	1991	1998	X	X	X	X	X		X	X
2.0i 16V	X 20 XEV	1998	100	1995	1998	X	X	X	X	X		X	X
2.0i 16V	C 20 XE	1998	110	1991	1998	X	X	X	X	X		X	X
geen check mogelijk!!	20 NE	1998	85	1992	1992	X		X	X				
Astra G 1998 2004													
1.2 16V	X 12 XE	1199	48	1998	2001	X	X	X	X		X		X
1.2 16V	Z 12 XE	1199	55	2001	2004	X	X	X	X	X			X
1.4 16V	X 14 XE	1389	66	1998	2000	X	X	X	X	X			X
1.4 16V	Z 14 XE	1389	66	2001	2004	X	X	X	X	X			X
1.4 16V	Z 14 XEP	1364	66	2004	2004	X	X	X		X			X
1.6	X 16 SZR	1598	55	1998	2001	X	X	X	X	X			X
1.6	Z 16 SE	1598	62	2001	2004	X	X	X	X	X			X
1.6 16V	X 16 XEL	1598	74	1998	2000	X	X	X	X	X			X
1.6 16V	Z 16 XE	1598	74	2001	2004	X	X	X	X	X			X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
OPEL / VAUXHALL													
Astra G 1998 2004													
1.6 16V	Z 16 XEP	1598	76	2003	2004	X	X	X	X	X	X	X	X
1.6 16V CNG	Z 16 YNG	1598	71	2003	2004	X	X	X	X	X	X	X	X
1.7 CDTi 16V	Z 17 DTL	1686	59	2003	2004	X	X	X	X	X	X	X	X
1.7 DTi 16V	Y 17 DT	1686	55	2000	2004	X	X	X	X	X	X	X	X
1.7 TD	X 17 DTL	1700	50	1998	2000	X	X	X	X	X	X	X	X
1.8 16V	X 18 XE1	1796	85	1998	2001	X	X	X	X	X	X	X	X
1.8 16V	Z 18 XE	1796	92	2001	2004	X	X	X	X	X	X	X	X
1.8 16V	Z 18 XEL	1796	85	2001	2001	X	X	X	X	X	X	X	X
2.0 16V	X 20 XEV	1998	100	1998	2000	X	X	X	X	X	X	X	X
2.0 16V OPC	X 20 XER	1998	118	2000	2000	X	X	X	X	X	X	X	X
2.0 16V Turbo	Z 20 LET	1998	140	2001	2004	X	X	X	X	X	X	X	X
2.0 16V Turbo OPC	Z 20 LET	1998	147	2001	2004	X	X	X	X	X	X	X	X
2.0 Di 16V	X 20 DTL	1995	60	1998	2000	X	X	X	X	X	X	X	X
2.0 Di 16V	Y 20 DTL	1995	60	2001	2004	X	X	X	X	X	X	X	X
2.0 DTi 16V	Y 20 DTH	1995	74	2000	2004	X	X	X	X	X	X	X	X
2.2 16V	Z 22 SE	2198	108	2000	2004	X	X	X	X	X	X	X	X
2.2 DTi 16V	Y 22 DTR	2172	92	2003	2004	X	X	X	X	X	X	X	X
Astra H 2004													
1.4 16V	Z 14 XEL	1364	55	2004		X	X	X	X	X	X	X	
1.4 16V	Z 14 XEP	1364	66	2004		X	X	X	X	X	X	X	
1.6 16V	Z 16 XEP	1598	77	2004		X	X	X	X	X	X	X	
1.7 CDTi	Z 17 DTH	1686	74	2004		X	X	X	X	X	X	X	
1.7 CDTi	Z 17 DTL	1686	59	2004		X	X	X	X	X	X	X	
1.8 16V	Z 18 XE	1796	92	2004		X	X	X	X	X	X	X	
1.9 CDTi 16V	Z 19 DTH	1910	88	2005	2006	X	X	X	X	X	X	X	
1.9 CDTi 16V	Z 19 DTH	1910	110	2005		X	X	X	X	X	X	X	
1.9 CDTi 8V	Z 19 DT	1910	88	2006		X	X	X	X	X	X	X	
2.0 16V Turbo	Z 20 LEL	1998	125	2004		X	X	X	X	X	X	X	
2.0 16V Turbo	Z 20 LER	1998	147	2004		X	X	X	X	X	X	X	
Calibra 1990 1997													
2.0 16V	X 20 XEV	1998	110	1994	1997	X		X	X	X			X
2.0 16V 4x4	C 20 XEH	1998	110	1990	1994	X	X	X	X	X		X	X
2.0 Turbo 4x4	C 20 LET	1998	150	1990	1997	X	X	X	X	X	X	X	X
2.0i	C 20 NE	1998	85	1990	1997	X	X	X	X	X	X	X	X
2.0i 16V	C 20 XEH	1998	110	1990	1994	X	X	X	X	X	X	X	X
2.0i 4x4	C 20 NE	1998	85	1990	1997	X	X	X	X	X	X	X	X
2.5i V6 24V	C 25 XE	2498	125	1993	1997	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
OPEL / VAUXHALL													
Campo 1989 2002													
2.3	4ZD1	2254	66	1989	1994	X	X	X	X		X	X	X
2.3 i	4ZD1	2254	72	1995	2002	X	X	X	X	X	X		X
2.5 D	4JA1	2499	56	1992	1995	X	X	X	X		X		X
2.5 TD	4JA1T	2499	56	1996	2002	X	X	X	X		X		X
3.1 TD/TDS	4JG2T	3059	80	1992	2001	X	X	X	X		X		X
Corsa A / Nova 1982 1993													
1.0S	10 S OHV	993	33	1982	1988	X	X	X	X		X	X	
1.2	12 NV	1196	38	1982	1989	X	X	X	X		X	X	
1.2i	C 12 NZ	1189	33	1990	1993	X	X	X	X	X		X	
1.2N	12 NC	1196	33	1985	1987	X	X	X	X		X		
1.2N	12 GV OHV	1196	33	1987	1990	X	X	X	X		X	X	
1.2S	12 ST OHC	1196	40	1982	1989	X	X	X	X		X	X	
1.3i	C 13 N	1297	44	1987	1990	X	X	X	X	X		X	
1.3N Euronorm	13 NB OHC	1297	44	1986	1989	X	X	X	X		X	X	
1.3S	13 SB OHC	1297	51	1982	1989	X	X	X	X		X	X	
1.4	14 NV	1389	53	1990	1993	X	X	X	X		X	X	
1.4i	C 14 NZ	1389	44	1989	1990	X	X	X	X	X			
1.4i	C 14 NZ	1389	44	1990	1993	X	X	X	X		X	X	
1.4i	C 14 SE	1389	60	1990	1993	X	X	X	X		X	X	
1.5 D	4EC1	1488	38	1987	1990	X	X	X	X		X	X	
1.5 D	4EC1	1488	37	1990	1993	X	X	X	X		X	X	
1.5 TD	T4EC1	1488	49	1987	1990	X	X	X	X		X	X	
1.5 TD	T4EC1	1488	49	1990	1993	X	X	X	X		X	X	
1.6 GSi	C 16 SEI	1598	72	1989	1992	X	X	X	X	X		X	
1.6 GSi	E 16 SE(C)	1598	74	1990	1993	X	X	X	X		X	X	
1.6 GSi	C/E 16 NZ	1598	74	1988	1990	X	X	X	X		X	X	
1.6 GSi	E 16 SE	1598	74	1988	1990	X	X	X	X		X	X	
Corsa B 1993 2000													
1.0i 12V	X 10 XE	973	40	1997	2000	X	X	X	X	X		X	X
1.2i	12 NZ	1195	33	1993	2000	X	X	X	X	X		X	X
1.2i	C 12 NZ	1196	33	1993	1996	X	X	X	X	X		X	X
1.2i	X 12 SZ	1196	33	1993	1998	X	X	X	X	X		X	X
1.2i 16V	X 12 XE	1199	48	1998	2000	X	X	X	X	X		X	X
1.4 Si	C 14 SE	1389	60	1993	1994	X	X	X	X	X		X	X
1.4i	C 14 NZ	1389	44	1993	1998	X	X	X	X	X		X	X
1.4i	X 14 SZ	1389	44	1996	2000	X	X	X	X	X		X	X
1.4i 16V	C 14 SEL	1389	63	1998	2000	X	X	X	X	X		X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
OPEL / VAUXHALL													
Corsa B 1993 2000													
1.4i 16V	X 14 VE	1389	67	1994	2000	X	X	X	X		X		X
1.4i 16V	X 14 XE	1389	66	1995	2000	X	X	X	X	X		X	X
1.5 D	15D / 4EC1	1488	37	1993	1996	X	X	X	X			X	X
1.5 TD	15TD / T4EC1	1488	49	1993	1995	X	X	X	X	X		X	X
1.6i	C 16 SE	1598	74	1993	1993	X	X	X	X				X
1.6i 16V	C 16 SEL	1598	74	1998	2000	X	X	X	X	X			X
1.6i 16V	X 16 XE	1598	78	1995	2000	X	X	X	X	X		X	X
1.6i 16V	C 16 XE	1598	80	1993	1994	X	X	X	X	X		X	X
1.7 D	17 D / 4EE1	1686	44	1993	1996	X	X	X	X			X	X
1.7 D	X 17 D / 4EE1	1686	44	1997	2000	X	X	X	X				X
Corsa C 2001													
1.0 12V	Z 10 XE	973	43	2001		X	X	X	X	X			X
1.0 12V	Z 10 XEP	998	44	2004		X	X	X	X				X
1.2 12V	Z 12 XEP (empty)	1229	59	2004		X		X					
1.2 16V	Z 12 XE	1198	55	2001		X	X	X	X	X			X
1.3 CDTi 16V	Z 13 DT	1248	51	2004		X	X	X	X				X
1.4 16V	Z 14 XE	1389	66	2001		X	X	X	X	X			X
1.4 16V	Z 14 XEP	1364	66	2004		X	X	X	X				X
1.6	Z 16 SE	1598	64	2002	2005	X	X	X	X	X			X
1.7 CDTi 16V	Z 17 DTH	1686	74	2004		X	X	X	X				X
1.7 Di 16V	Y 17 DTL	1686	48	2001		X	X	X	X	X			X
1.7 DTi 16V	Y 17 DT	1686	55	2001		X	X	X	X				X
1.8 16V	Z 18 XE	1796	92	2001		X	X	X	X	X			X
Corsa C Combo 2002													
1.2 16V	Z 12 XEP			2005		X							
1.3 CDTi 16V	Y 13 DT			2005		X							
1.3 CDTi 16V	Z 13 DT			2005		X	X						
1.4 16V	Z 14 XEP			2005		X	X						
1.6 8V	Z 16 SE	1598	64	2002	2005	X	X	X	X		X		X
1.6 CNG	Z 16 YNG	1598	71	2005		X							
1.7 CDTi 16V	Z 17 DTH			2005		X	X						
1.7 Di	Y 17 DTL	1686	48	2002		X	X	X	X		X		X
1.7 DTi	Y 17 DT	1686	55	2002		X	X	X	X		X		X
Frontera 1992 1998													
2.0	X 20 SE	1998	85	1995	1998	X	X	X	X	X			X
2.0	C 20 NE	1998	85	1992	1995	X	X	X	X	X	X		X
2.2	X 22 XE	2198	100	1995	1998	X	X	X	X	X			X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
OPEL / VAUXHALL													
Frontera 1992 1998													
2.3 TD	23 DTR	2260	74	1992	1995	X	X	X	X		X	X	X
2.4	C 24 NE	2410	92	1992	1995	X	X	X	X		X	X	X
2.5 TD	VM41B	2499	85	1997	1998	X	X	X	X		X	X	X
2.8 TD	4JB1	2771	82	1995	1996	X	X	X	X		X	X	X
Frontera B 1999 2004													
2.2 16V	X 22 SE	2198	100	1999	2000	X	X	X	X	X	X	X	X
2.2 16V	Y 22 SE	2198	100	2001	2004	X	X	X	X	X	X	X	X
2.2 16V TD	X 22 DTH	2171	85	1999	2000	X	X	X	X	X	X	X	X
2.2 16V TD	Y 22 DTH	2171	85	2001	2004	X	X	X	X	X	X	X	X
3.2 V6 24V	6VD1-W	3165	151	1999	2004	X	X	X	X	X	X	X	X
Kadett E 1984 1991													
1.2	12 SC	1196	40	1984	1989	X	X	X	X		X	X	X
1.3 N	13 N/NB OHC	1297	44	1984	1989	X	X	X	X		X	X	X
1.3 S	13 S OHC	1297	55	1984	1990	X	X	X	X	X	X	X	X
1.3i	C 13 N	1297	44	1985	1989	X	X	X	X		X	X	X
1.4i	C 14 NZ	1389	44	1989	1991	X	X	X	X	X	X	X	X
1.5 TD	15 D/T4E-C1	1488	53	1988	1991	X	X	X	X		X	X	X
1.6 S	16 S	1598	66	1984	1986	X	X	X	X		X	X	X
1.6D	16 DA	1598	40	1986	1989	X	X	X	X		X	X	X
1.6i	C 16 LZ/NZ	1598	55	1986	1991	X	X	X	X	X	X	X	X
1.7 D	17 D	1699	42	1989	1991	X	X	X	X		X	X	X
1.8 N	E 18 NV	1796	62	1987	1989	X	X	X	X		X	X	X
1.8i	C 18 NT/NZ/SE	1796	82	1985	1991	X	X	X	X	X	X	X	X
2.0 GSi	C 20 NE	1998	85	1986	1989	X	X	X	X		X	X	X
2.0 GSi 16V	C 20 XE	1998	110	1987	1991	X	X	X	X	X	X	X	X
Meriva 2003													
1.3 CDTi	Z 13 DT	1248	51	2005		X		X					
1.4 16V	Z 14 XEP	1364	66	2004		X	X	X	X		X	X	X
1.6	Z 16 SE	1598	62	2003	2005	X	X	X	X		X	X	X
1.6 16V	Z 16 XE	1598	74	2003		X	X	X	X		X	X	X
1.7 CDTi 16V	Z 17 DTH	1686	74	2004		X	X	X	X		X	X	X
1.7 Di 16V (no check)	Y 17 DTL	1686	48	2004		X	X	X	X		X	X	X
1.7 DTi 16V	Y 17 DT	1686	55	2003		X	X	X	X		X	X	X
1.8 16V	Z 18 XE	1796	92	2003		X	X	X	X		X	X	X
Monterey 1991 1999													
3.0 DTi 16V	4JX1	2999	117	1998	1999	X	X	X	X	X			X
3.1 TD	4JG2-T	3059	84	1991	1998	X	X	X	X	X		X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
OPEL / VAUXHALL													
Monterey 1991 1999													
3.2 V6 24V	6VD1	3165	130	1991	1998	X	X	X	X	X	X	X	X
3.5 V6 24V	6VE1	3494	158	1998	1999	X	X	X	X	X	X	X	X
Movano 1999 2003													
1.9 DTi	F9Q-770	1870	59	2001	2003	X	X	X	X		X		X X
1.9 DTi	F9Q-772	1870	59	2002	2003	X	X	X	X	X	X		X X
1.9 DTi	F9Q-774	1870		2004		X		X					
2.2 DTi	G9T-720	2187	66	2001	2003	X	X	X	X		X		X X
2.2 DTi	G9T-722	2187		2002		X	X	X	X				X
2.2 DTi	G9T-750			2004		X		X					
2.5 D	S8U-770	2499	59	2000	2001	X	X	X	X		X		X X
2.5 D	S8U-772	2499	59	2000	2001	X	X	X	X		X		X X
2.5 DTi	G9U-720	2499		2002		X	X	X	X				X
2.5 DTi	G9U-724			2004		X		X					
2.5 DTi	G9U-750			2004		X		X					
2.5 DTi	G9U-754			2004		X		X					
2.8 DTi	S9W-700	2799	84	1999	2003	X	X	X	X		X		X X
2.8 DTi	S9W-702	2799	84	1999	2003	X	X	X	X		X		X X
3.0 DCi	ZD3 200			2004		X		X					
3.0 DCi	ZD3 202			2004		X		X					
Omega A / Carlton 1986 1994													
1.8i	18 SEH OHC	1796	85	1986	1992	X	X	X	X	X	X	X	X
1.8N	18 NV	1796	60	1986	1989	X	X	X	X	X	X	X	X
1.8S	18 SV OHC	1796	66	1986	1990	X	X	X	X	X	X	X	X
2.0i	20 SE	1998	90	1986	1989	X	X	X	X	X	X	X	X
2.0i	C 20 NE	1998	85	1986	1989	X	X	X	X	X	X	X	X
2.3 D	23 YD OHC	2260	54	1986	1994	X	X	X	X	X	X	X	X
2.3 TD	23 DTR	2260	74	1988	1994	X	X	X	X	X	X	X	X
2.3 TD	23 YTD	2260	66	1986	1989	X	X	X	X	X	X	X	X
2.4i	C 24 NE	2410	92	1988	1994	X	X	X	X	X	X	X	X
2.6i	C 26 NE	2594	110	1990	1994	X	X	X	X	X	X	X	X
3.0i	C 30 NE	2969	130	1986	1994	X	X	X	X	X	X	X	X
3.0i	C 30 NE	2969	130	1990	1994	X	X	X	X	X	X	X	X
3.0i 24V	C 30 SE	2969	150	1989	1994	X	X	X	X	X	X	X	X
Omega B 1994 2004													
2.0	20 SE	1998	85	1994	1999	X	X	X	X	X	X	X	X
2.0	X 20 SE	1998	85	1994	2000	X	X	X	X	X	X	X	X
2.0 16V	X 20 XEV	1998	100	1994	2000	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir. Diagram	Repair Times	Fuses & Relays
OPEL / VAUXHALL																		
Omega B 1994 2004																		
2.0 TD 16V	X 20 DTH	1995	74	1998	2000	X	X	X	X	X	X	X		X			X	X
2.2 16V	Y 22 XE	2198	106	2000	2001	X	X	X	X	X		X		X			X	X
2.2 16V	Z 22 XE	2198	106	2001	2004	X	X	X	X		X	X		X			X	X
2.2 DTi 16V	Y 22 DTH	2171	88	2001	2004	X	X	X	X			X		X			X	X
2.5 DTi 24V	Y 25 DT	2497	110	2002	2004	X	X	X	X					X			X	
2.5 TD	25 DT	2498	96	1994	1996	X	X	X	X	X	X		X	X		X	X	X
2.5 TD	X 25 DT	2497	96	1994	2001	X	X	X	X	X	X	X	X	X		X	X	X
2.5 V6	X 25 XE	2498	125	1994	2000	X	X	X	X	X	X	X	X	X		X	X	X
2.6 V6	Y 26 SE	2597	132	2001	2003	X	X	X	X			X		X			X	X
3.0 V6	X 30 XE	2962	155	1994	2001	X	X	X	X	X	X	X	X	X		X	X	X
3.2 V6	Y 32 SE	3175	160	2001	2004	X	X	X	X			X		X			X	X
Senator 1986 1994																		
2.6i	C 26 NE	2594	110	1990	1994	X	X	X	X	X	X	X	X	X		X	X	X
3.0i	C 30 LE/NE	2969	130	1987	1994	X	X	X	X	X	X	X	X	X		X	X	X
3.0i 24V	C 30 SE	2969	150	1989	1994	X	X	X	X	X	X	X	X	X		X	X	X
Signum 2003																		
1.8 16V	Z 18 XE	1796	90	2003		X	X	X	X	X				X	X			
1.9 CDTi	Z 19 DT	1910	88	2004		X	X	X	X	X	X			X	X			
1.9 CDTi 16V	Z 19 DTH	1910	110	2004		X	X	X	X	X	X			X	X			
2.0 16V Turbo	Z 20 NET	1998	129	2003		X	X	X	X	X	X			X	X			
2.2 DGi 16V	Z 22 YH	2198	114	2003		X	X	X	X	X	X			X	X			
2.2 DTi	Y 22 DTR	2172	92	2003		X	X	X	X	X				X	X			
3.0 V6 CDTi	Y 30 DT	2958	130	2003		X	X	X	X	X				X	X			
3.2 V6	Z 32 SE	3175	155	2003		X	X	X	X	X				X	X			
Sintra 1996 1999																		
2.0 TD 16V	X 20 DTH	1995	74	1996	1999	X	X	X	X	X				X				
2.2 16V	X 22 XE	2198	104	1996	1999	X	X	X	X	X	X	X	X			X		
2.2 D	X 22 DTH	2171	85	1998	1999	X	X	X	X		X		X	X		X		
3.0 V6 24V	X 30 XE	2962	148	1996	1999	X	X	X	X	X	X	X	X			X		
Speedster 2000																		
2.0 Turbo	Z 20 LET	1998	140	2003							X	X						X
2.2i 16V	Z 22 SE	2198	108	2000								X						X
Tigra 1995 2000																		
1.4i 16V	C 14 SEL	1389	63	1998	2000	X	X	X	X	X		X		X			X	X
1.4i 16V	X 14 XE	1389	66	1995	2000	X	X	X	X	X	X	X	X	X		X	X	X
1.6i 16V	C 16 SEL	1589	74	1998	2000	X	X	X	X	X		X		X			X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
OPEL / VAUXHALL																			
Tigra 1995 2000																			
1.6i 16V	X 16 XE	1598	78	1995	2000	X	X	X	X	X	X	X	X	X		X	X	X	
Tigra B 2005																			
1.3 CDTi 16V	Z 13 DT	1248	51	2005		X	X	X		X				X					
1.4 16V	Z 14 XEP	1364	66	2005		X	X	X		X				X					
1.8 16V	Z 18 XE	1789	92	2005		X	X	X		X				X					
Vectra A / Cavalier 1988 1995																			
1.4i (no documentation)	C 14 NZ	1389	44	1990	1995	X	X	X	X	X	X								X
1.4S	14 NV	1389	55	1988	1995	X	X	X	X	X		X	X	X		X	X	X	
1.6i	E/C 16 NZ	1598	55	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.6i	X 16 SZ	1598	52	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.6S	16 SV	1598	44	1988	1995	X	X	X	X	X		X	X	X		X	X	X	
1.7 D	17 D	1699	42	1988	1995	X	X	X	X	X			X			X	X	X	
1.7 TD	17 TC4EE1	1686	60	1990	1995	X	X	X	X	X			X			X	X	X	
1.8	18 SV	1796	60	1988	1989	X	X	X	X	X		X	X	X		X	X	X	
1.8 4x4	E 18 NVR	1796	65	1988	1995	X	X	X	X	X		X	X	X		X	X	X	
1.8i	C 18 NZ	1796	66	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.8S (no documentation)	E/C 18 S	1796	65	1988	1995	X	X	X	X	X									X
2.0 Turbo 4x4	C 20 LET	1998	150	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.0i	20 SEH	1998	95	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.0i	C 20 NE	1998	85	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.0i 16V	C 20 XE	1998	110	1988	1994	X	X	X	X	X	X	X	X	X		X	X	X	
2.0i 16V	X 20 XEV	1998	100	1994	1995	X	X	X	X	X		X	X	X		X	X	X	
2.0i 16V 4x4	C 20 XE	1998	110	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.0i 4x4	20 SEH	1998	95	1988	1995	X	X	X	X	X	X	X	X	X		X			X
2.0i 4x4	C 20 NE	1998	85	1988	1995	X	X	X	X	X	X	X	X	X		X			X
2.5 V6	C 25 XE	2495	125	1993	1995	X	X	X	X	X	X	X	X	X		X	X	X	
Vectra B 1995 2001																			
1.6	16 LZ2	1598	55	1996	2000	X	X	X	X	X		X	X	X		X	X	X	
1.6	X 16 SZR	1598	55	1995	2000	X	X	X	X	X	X	X	X	X		X	X	X	
1.6 16V	X 16 XEL	1598	74	1995	2000	X	X	X	X	X	X	X	X	X		X	X	X	
1.6 16V	Y 16 XE	1598	74	2000	2000	X	X	X	X	X	X			X			X	X	
1.6 16V	Z 16 XE	1598	74	2001	2001	X	X	X	X	X	X			X			X	X	
1.7 TD	X 17 DT	1686	60	1995	1998	X	X	X	X	X		X	X	X			X	X	
1.8 16V	X 18 XE	1799	85	1995	2000	X	X	X	X	X	X	X	X	X		X	X	X	
1.8 16V	X 18 XE1	1796	85	1998	2000	X	X	X	X	X	X	X	X	X		X	X	X	
1.8 16V	Z 18 XE	1799	85	2001	2001	X	X	X	X	X	X			X			X	X	
1.8 16V	Z 18 XEL	1799	85	2001	2001	X	X	X	X	X	X			X				X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
OPEL / VAUXHALL													
Vectra B 1995 2001													
2.0	20 NEJ	1998	82	1996	2000	X	X	X	X	X	X	X	X
2.0 16V	C 20 SEL	1998	100	1997	2001	X	X	X	X	X	X	X	X
2.0 16V	X 20 XEV	1998	100	1995	2001	X	X	X	X	X	X	X	X
2.0 16V TD	X 20 DTH	1995	74	1998	2000	X	X	X	X	X	X	X	X
2.0 16V TD	X 20 DTL	1995	60	1997	2000	X	X	X	X	X	X	X	X
2.0 16V TD	Y 20 DTH	1995	74	2001	2001	X	X	X	X	X	X	X	X
2.2 16V	C 22 SEL	2198	104	1998	2001	X	X	X	X	X	X	X	X
2.2 16V	Z 22 SE	2198	108	2001	2001	X	X	X	X	X	X	X	X
2.2 16V TD	Y 22 DTR	2171	92	2001	2001	X	X	X	X	X	X	X	X
2.5 V6	X 25 XE	2498	125	1996	2000	X	X	X	X	X	X	X	X
2.6 V6	Y 26 SE	2597	125	2001	2001	X	X	X	X	X	X	X	X
Vectra C 2002													
1.6 16V	Z 16 XE	1598	74	2002		X	X	X	X	X	X	X	X
1.8 16V	Z 18 XE	1796	90	2002		X	X	X	X	X	X	X	X
1.8 16V	Z 18 XEL	1796	81	2002		X	X	X	X	X	X	X	X
1.9 CDTi	Z 19 DT	1910	88	2004		X	X	X	X	X	X	X	X
1.9 CDTi 16V	Z 19 DTH	1910	110	2004		X	X	X	X	X	X	X	X
2.0 16V Turbo	Z 20 NET	1998	129	2003		X	X	X	X	X	X	X	X
2.0 DTi 16V	Y 20 DTH	1995	74	2002		X	X	X	X	X	X	X	X
2.2 16V	Z 22 SE	2198	108	2002		X	X	X	X	X	X	X	X
2.2 DGi 16V	Z 22 YH	2198	114	2003		X	X	X	X	X	X	X	X
2.2 DTi 16V	Y 22 DTR	2172	92	2002		X	X	X	X	X	X	X	X
3.0 V6 CDTi	Y 30 DT	2958	130	2003		X	X	X	X	X	X	X	X
3.2 V6	Z 32 SE	3175	155	2002		X	X	X	X	X	X	X	X
Vivaro 2001													
1.9 Di	F9Q 762	1870	59	2001		X	X	X	X	X	X	X	X
1.9 DTi	F9Q 760	1870	74	2001		X	X	X	X	X	X	X	X
2.0 16V	F4R 720	1998	88	2001		X	X	X	X	X	X	X	X
2.0 16V	F4R 722	1998		2001		X	X	X	X	X	X	X	X
Zafira 1999 2005													
1.6 16V	X 16 XEL	1598	74	1999	2001	X	X	X	X	X	X	X	X
1.6 16V	Z 16 XE	1598	74	2001	2005	X	X	X	X	X	X	X	X
1.6 16V CNG	Z 16 YNG	1595	71	2002	2005	X	X	X	X	X	X	X	X
1.8 16V	X 18 XE1	1796	85	1999	2001	X	X	X	X	X	X	X	X
1.8 16V	Z 18 XE	1796	74	2001	2005	X	X	X	X	X	X	X	X
2.0 TD 16V	X 20 DTL	1995	60	1999	2001	X	X	X	X	X	X	X	X
2.0 TD 16V	Y 20 DTH	1995	74	2001	2005	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
OPEL / VAUXHALL													
Zafira 1999 2005													
2.0 Turbo	Z 20 LET	1998	141	2002	2005	X	X	X	X	X	X	X	X
2.2 16V	Z 22 SE	2198	100	2001	2005	X	X	X	X	X	X	X	X
2.2 TD 16V	Y 22 DTR	2198	92	2002	2005	X	X	X	X	X	X	X	X
Zafira B 2005													
1.6 16V Twinport	Z 16 XEP	1598	77	2005		X	X	X	X		X	X	
1.8 16V	Z 18 XER	1796	103	2006		X	X	X	X				
1.9 CDTi 16V 150	Z 19 DTH	1910	110	2005		X	X	X	X		X	X	
1.9 CDTi 8V 110	Z 19 DTL	1910	74	2005		X	X	X	X		X	X	
1.9 CDTi 8V 120	Z 19 DT	1910	88	2005		X	X	X	X		X	X	
2.0 16V Turbo	Z 20 LEL	1998	125	2005		X	X	X	X		X		
2.0 16V Turbo	Z 20 LER	1998	147	2005		X	X	X	X		X	X	
2.0 Turbo	Z 20 LEH	1998	147	2005		X	X		X				
2.2 16V DGi	Z 22 YH	2198	110	2005		X	X	X	X		X	X	
wa						X		X	X				
PEUGEOT													
1007 2005													
1.4	TU3JP (KFV)	1360	55	2005		X	X	X	X		X		X
1.4 HDi	DV4TD (8HX)	1398	50	2005		X	X	X	X		X		X
1.6 16V	TU5JP4 (NFU)	1587	80	2005		X	X	X	X		X		X
test						X		X					
106 1991 2004													
1.0	TU9 (C1A)	954	33	1991	1994	X	X	X	X		X	X	X
1.0i	TU9M (CDY)	954	33	1994	2000	X	X	X	X		X	X	X
1.0i	TU9M (CDZ)	954	37	1991	1996	X	X	X	X		X	X	X
1.1	TU1/K (H1A)	1124	44	1991	1994	X	X	X	X		X	X	X
1.1	TU1/K (H3A)	1124	44	1991	1994	X	X	X	X		X	X	X
1.1i	TU1JP/L4 (HFX)	1124	44	2000	2004	X	X	X	X		X	X	X
1.1i	TU1M (HDY)	1124	40	1991	2000	X	X	X	X	X	X	X	X
1.1i	TU1M (HDZ)	1124	44	1991	2000	X	X	X	X	X	X	X	X
1.3i Rallye	TU2J2 (MFZ)	1294	72	1993	1996	X	X	X	X	X	X	X	X
1.4	TU3.2TR/K (K5A)	1360	52	1996	1998	X	X	X	X		X	X	X
1.4	TU3.2 (K2D)	1360	55	1991	1994	X	X	X	X		X	X	X
1.4	TU3TR (K3A)	1360	44	1991	1994	X	X	X	X		X	X	X
1.4 D	TUD3/L1 (K9B)	1360	38	1992	1994	X	X	X	X		X	X	X
1.4 D	TUD3/Y (K9Y)	1360	38	1992	1995	X	X	X	X		X	X	X
1.4i	TU3FJ2 (K6B)	1360	72	1991	1994	X	X	X	X		X	X	X
1.4i	TU3FJ2 (KFZ)	1360	69	1991	1995	X	X	X	X		X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
PEUGEOT													
106 1991 2004													
1.4i	TU3JP/L3 (KFX)	1361	55	1996	2000	X	X	X	X	X	X	X	X
1.4i	TU3JP/L4 (KFW)	1360	55	2000	2004	X	X	X	X	X	X	X	X
1.4i	TU3M (KDX)	1360	55	1991	1996	X	X	X	X	X	X	X	X
1.4i	TU3M (KDY)	1360	55	1991	1996	X	X	X	X	X	X	X	X
1.5 D	TUD5 (VJY)	1527	40	1994	1998	X	X	X	X	X	X	X	X
1.5 D	TUD5 (VJZ)	1527	42	1994	2001	X	X	X	X	X	X	X	X
1.5 D	TUD5B (VJX)	1527	42	2001	2004	X	X	X	X	X	X	X	X
1.6i	TU5J (NFY)	1587	76	1993	1996	X	X	X	X	X	X	X	X
1.6i	TU5J2 (NFW)	1587	74	1996	1999	X	X	X	X	X	X	X	X
1.6i	TU5JP/Z (NFZ)	1587	65	1995	2004	X	X	X	X	X	X	X	X
1.6i 16V	TU5J4/L3 (NFX)	1587	87	1996	2000	X	X	X	X	X	X	X	X
1.6i 16V	TU5J4/L4 (NFX)	1587	87	2000	2004	X	X	X	X	X	X	X	X
mag weg	0	0	0			X				X	X	X	X
107 2005													
1.0 12V	384F (CFA)	998	50	2005		X	X	X	X				X
1.4 HDi	DV4TD (8HT)	1398	40	2005		X	X	X	X		X		X
205 1983 1999													
1.0	TU9A/TU9M/C1A	954	33	1987	1999	X	X	X	X		X	X	X
1.0	XV8	954	33	1983	1987	X		X	X		X	X	X
1.1	TU1 (H1A)	1124	40	1987	1990	X	X	X	X		X	X	X
1.1	TU1M (H1)	1124	44	1989	1997	X	X	X	X	X	X	X	X
1.1	XW7	1124	37	1983	1987	X		X	X		X	X	X
1.3 Rallye	TU2.4 (M2A/M4A)	1294	75	1988	1996	X	X	X	X		X	X	X
1.4	TU3A (K1G)	1360	51	1989	1998	X	X	X	X		X	X	X
1.4	TU3CP	1360	44	1989	1990	X	X	X	X		X	X	X
1.4	TU3M (KDY/KDZ)	1360	55	1989	1997	X	X	X	X	X	X	X	X
1.4	TU3S (K2A/B)	1360	62	1987	1998	X	X	X	X		X	X	X
1.4	XY7 (150 D)	1360	44	1983	1987	X		X	X		X	X	X
1.4	XY8 (150 B)	1360	59	1983	1987	X		X	X		X	X	X
1.6 Automatic	XU51C (B1A)	1580	58	1987	1991	X	X	X	X		X	X	X
1.6 GTi	XU5J (180A)	1580	76	1987	1989	X		X	X	X	X	X	X
1.6 GTi/CTi	XU5JA (B6D)	1580	83	1986	1992	X	X	X	X		X	X	X
1.6i	XU5M3 (BDY)	1580	65	1989	1997	X	X	X	X		X	X	X
1.8 D	XUD7 (161A)	1768	44	1987	1987	X	X	X	X		X	X	X
1.8 D	XUD7 (A9A)	1768	44	1991	1999	X	X	X	X		X	X	X
1.8 Turbo D	XUD7 TE/L (A8D)	1768	58	1991	1998	X	X	X	X		X	X	X
1.9 CTi	XU9J1 (DFZ)	1905	75	1989	1994	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
PEUGEOT													
205 1983 1999													
1.9 D	XUD9 (D9A)	1905	47	1987	1999	X	X	X	X	X		X	X
1.9 GTi	XU9J1 (DFZ)	1905	75	1986	1994	X	X	X	X	X		X	X
1.9 GTi	XU9JA (D6B)	1905	95	1987	1996	X	X	X	X	X		X	X
1.9 GTi	XU9JAZ (DKZ)	1905	88	1989	1994	X	X	X	X	X		X	X
206 1998													
1.1	TU1JP (HFX)	1124	44	2000		X	X	X	X	X	X	X	X
1.1	TU1JP (HFX)	1124	40	1998	2001	X	X	X	X	X	X	X	X
1.1	TU1JP (HFZ)	1124	44	1998	2000	X	X	X	X	X	X	X	X
1.4	TU3JP (KFW)	1360	55	2000		X	X	X	X	X	X	X	X
1.4	TU3JP (KFX)	1360	55	1998	2000	X	X	X	X	X	X	X	X
1.4 16V	ET3J4 (KFU)	1361	65	2004		X	X	X	X	X	X	X	X
1.4 HDi	DV4TD (8HX)	1398	50	2002		X	X	X	X	X	X	X	X
1.6	TU5JP (NFY)	1587	76	1998	2000	X	X	X	X	X	X	X	X
1.6	TU5JP (NFZ)	1587	65	1998	2000	X	X	X	X	X	X	X	X
1.6 16V	TU5JP4 (NFU)	1587	80	2000		X	X	X	X	X	X	X	X
1.6 HDiF 16V	DV6TED4 (9HZ)	1560	80	2004		X	X	X	X	X	X	X	X
1.9 D	DW8 (WJZ)	1868	51	1998	2000	X	X	X	X	X	X	X	X
1.9 D	DW8B (WJY)	1868	51	2000	2003	X	X	X	X	X	X	X	X
2.0 16V (GTi)	EW10J4 (RFN)	1997	100	2000		X	X	X	X	X	X	X	X
2.0 16V GTi	EW10J4 (RFR)	1997	99	1999	2000	X	X	X	X	X	X	X	X
2.0 16V GTi 180	EW10J4S (RFK)	1997	130	2003		X	X	X	X	X	X	X	X
2.0 HDi	DW10TD (RHY)	1996	66	1999		X	X	X	X	X	X	X	X
CC 1.6 16V	TU5JP4 (NFU)	1587	80	2000		X	X	X	X	X	X	X	X
CC 2.0 16V	EW10J4 (RFN)	1997	100	2000		X	X	X	X	X	X	X	X
306 1993 2001													
1.1i	TU1M (HDY)	1124	40	1993	1998	X	X	X	X	X	X	X	X
1.1i	TU1M (HDZ)	1124	44	1993	1998	X	X	X	X	X	X	X	X
1.4	TU3.2 (K2D)	1360	55	1993	2000	X	X	X	X	X	X	X	X
1.4i	TU3JP/K (K6C)	1360	55	2000	2001	X	X	X	X	X	X	X	X
1.4i	TU3JP/L3 (KFX)	1360	55	1995	2000	X	X	X	X	X	X	X	X
1.4i	TU3JP/L4 (KFW)	1360	55	2000	2001	X	X	X	X	X	X	X	X
1.4i	TU3MC (KDX)	1360	55	1993	1995	X	X	X	X	X	X	X	X
1.6i	TU5JP/L3 (NFZ)	1587	65	1993	2000	X	X	X	X	X	X	X	X
1.6i	TU5JP/L4 (NFT)	1587	73	2000	2001	X	X	X	X	X	X	X	X
1.8 D	XUD7/L (A9A)	1768	45	1993	1995	X	X	X	X	X	X	X	X
1.8i	XU7JP (LFZ)	1761	74	1993	2000	X	X	X	X	X	X	X	X
1.8i	XU7JP/K (L6A)	1761	70	1995	2001	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
PEUGEOT													
306 1993 2001													
1.8i 16V	XU7JP4/L3 (LFY)	1761	81	1997	2000	X	X	X	X	X	X	X	X
1.8i 16V	XU7JP4/L4 (LFY)	1761	81	2000	2001	X	X	X	X		X	X	X
1.9 D	DW8 (WJZ)	1868	51	1998	2000	X	X	X	X		X	X	X
1.9 D	DW8B (WJY)	1905	51	2000	2001	X	X	X	X		X	X	X
1.9 D	XUD9A (DJY)	1905	50	1998	1999	X	X	X	X		X	X	X
1.9 D	XUD9A/L (D9B)	1905	51	1993	1998	X	X	X	X	X	X	X	X
1.9 D	XUD9A/Y (DJZ)	1905	47	1993	1998	X	X	X	X		X	X	X
1.9 TD	XUD9TE/L (D8A)	1905	68	1993	2000	X	X	X	X	X	X	X	X
1.9 TD	XUD9TE/Y (DHY)	1905	66	1995	2000	X	X	X	X	X	X	X	X
2.0 HDi	DW10TD (RHY)	1997	66	1999	2001	X	X	X	X	X	X	X	X
2.0 S16	XU10J4 (RFY)	1998	112	1993	1996	X	X	X	X	X	X	X	X
2.0 S16 GTi	XU10J4RS (RFS)	1998	122	1996	2000	X	X	X	X	X	X	X	X
2.0 XSi	XU10J2 (R6D)	1998	89	1992	1996	X	X	X	X		X	X	X
2.0 XSi	XU10J2C (RFX)	1998	89	1993	1998	X	X	X	X	X	X	X	X
2.0i 16V	XU10J4R (RFV)	1998	98	1995	2001	X	X	X	X	X	X	X	X
307 2001													
1.4	TU3JP (KFW)	1360	55	2001	2004	X	X	X	X	X	X	X	X
1.4 16V	ET3J4 (KFU)	1361	65	2004		X	X	X	X		X	X	X
1.4 HDi	DV4TD (8HZ)	1398	50	2003		X	X	X	X	X	X	X	X
1.6 16V	TU5JP4 (NFU)	1587	80	2001		X	X	X	X	X	X	X	X
1.6 HDi 16V	DV6TED4 (9HY)	1560	80	2004		X	X	X	X		X	X	X
1.6 HDi 16V 90	DV6TED4 (9HX)	1560	66	2005		X	X	X	X		X	X	X
1.6 HDiF 16V	DV6TED4 (9HZ)	1560	80	2004		X	X	X	X		X	X	X
2.0 16V	EW10J4 (RFN)	1997	100	2001		X	X	X	X	X	X	X	X
2.0 HDi 110	DW10ATED (RHZ)	1997	80	2001		X	X	X	X	X	X	X	X
2.0 HDi 90	DW10TD (RHY)	1998	66	2001		X	X	X	X	X	X	X	X
2.0 HDiF 110	DW10ATED (RHS)	1997	80	2002		X	X	X	X		X	X	X
2.0 HDiF 16V	DW10BTED4 (RHR)	1998	100	2003		X	X	X	X		X	X	X
CC 2.0 16V	EW10J4 (RFJ)	1997	103	2005		X	X	X	X		X	X	X
CC 2.0 16V	EW10J4 (RFN)	1997	100	2003		X	X	X	X	X	X	X	X
CC 2.0 16V	EW10J4S (RFK)	1997	130	2003		X	X	X	X		X	X	X
309 1985 1993													
1.1	E1A (1E1A)	1118	40	1985	1989	X	X	X	X		X	X	X
1.1	TU1/K (H1A/B)	1124	40	1989	1993	X	X	X	X		X	X	X
1.1i	TU1M (HDZ)	1124	40	1990	1993	X	X	X	X	X	X	X	X
1.3	G1A (1G1A)	1294	47	1985	1991	X	X	X	X		X	X	X
1.4	TU3A	1360	51	1989	1992	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
PEUGEOT													
309 1985 1993													
1.4	TU3S (K2A/K2B)	1360	62	1989	1993	X	X	X	X	X		X	
1.4i	TU3M (KDY/KDZ)	1360	55	1989	1993	X	X	X	X	X		X	
1.6	XU5 (KAY)	1580	55	1987	1993	X	X	X	X	X		X	
1.6	XU51C (B1A)	1580	58	1985	1989	X	X	X	X	X		X	
1.6 Automatic	XU52C (B2A/B2B)	1580	68	1989	1993	X	X	X	X	X		X	
1.6i	XU5JA (B6D)	1580	85	1986	1989	X	X	X	X	X		X	
1.6i	XU5JA (B6E)	1580	83	1990	1993	X	X	X	X	X		X	
1.6i	XU5M (BDZ/BDY)	1580	65	1989	1993	X	X	X	X	X		X	
1.8 D	XUD7 (A9A)	1769	44	1986	1989	X	X	X	X	X		X	
1.8 Turbo D	XUD7TE (A8B)	1769	58	1989	1993	X	X	X	X	X		X	
1.9	XU9M (DDZ)	1905	80	1988	1993	X	X	X	X	X		X	
1.9 D	XUD9 (D9A)	1905	48	1989	1993	X	X	X	X	X		X	
1.9 D	XUD9 (DJZ)	1905	47	1986	1989	X	X	X	X	X		X	
1.9 GTi	XU92C	1905	75	1985	1989	X	X	X	X	X		X	
1.9 GTi	XU9J1 (DFZ)	1905	75	1987	1989	X	X	X	X	X		X	
1.9 GTi	XU9JA (D6B)	1905	94	1986	1993	X	X	X	X	X		X	
1.9 GTi 16V	XU9J4/Z (DFW/D6C)	1905	116	1986	1989	X	X	X	X	X		X	
405 1987 1997													
1.4	TU3A (K1A)	1360	47	1989	1992	X	X	X	X		X		X
1.4	TU3A (K1G)	1360	47	1989	1992	X	X	X	X	X	X	X	X
1.4i	TU3MC (KDX)	1360	55	1988	1994	X	X	X	X	X		X	X
1.6	XU51C (B1E)	1580	53	1987	1989	X	X	X	X	X		X	X
1.6	XU52C (B2A)	1580	68	1987	1989	X	X	X	X	X	X	X	X
1.6i	XU5M3/L (BDY)	1580	65	1989	1997	X	X	X	X	X	X	X	X
1.8 Turbo D	XUD7TE (A8A)	1769	66	1988	1992	X	X	X	X	X	X	X	X
1.8i	XU7JPZ/L (LFZ)	1762	74	1992	1997	X	X	X	X	X	X	X	X
1.9	XU92C (D2D)	1905	81	1987	1992	X	X	X	X	X		X	X
1.9 D	XUD9A/L (D9B)	1905	51	1988	1997	X	X	X	X	X	X	X	X
1.9 MI16	XU9J4 (D6C)	1905	116	1989	1992	X	X	X	X	X		X	X
1.9 MI16	XU9J4 (DFW)	1905	108	1989	1992	X	X	X	X	X		X	X
1.9 MI16	XU9J4/Z (DFW)	1905	116	1987	1992	X	X	X	X	X		X	X
1.9 Turbo D	XUD9TE/L (D8A)	1905	68	1992	1997	X	X	X	X	X	X	X	X
1.9i	XU9J1 (DFZ)	1905	77	1989	1992	X	X	X	X	X	X	X	X
1.9i	XU9J2 (D6A)	1905	90	1989	1992	X	X	X	X	X	X	X	X
1.9i	XU9JA/Z (DKZ)	1905	88	1988	1992	X	X	X	X	X	X	X	X
1.9i	XU9M (DDZ)	1905	81	1989	1992	X	X	X	X	X	X	X	X
2.0 MI16	XU10J4Z/L (RFY)	1998	112	1992	1995	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
PEUGEOT													
405 1987 1997													
2.0 T16 X4	XU10J4TE/Z (RGZ)	1998	144	1993	1996	X	X	X	X	X	X	X	X
2.0i	XU10J2C/L (RFX)	1998	89	1992	1997	X	X	X	X	X	X	X	X
406 1995 2005													
1.6	XU5JP (BFZ)	1580	65	1995	1999	X	X	X	X	X	X	X	X
1.8	XU7JB (LFX)	1761	66	1998	2002	X	X	X	X	X	X	X	X
1.8	XU7JP (L6A)	1761	70	1995	2002	X	X	X	X	X	X	X	X
1.8 16V	EW7J4 (6FZ)	1749	85	2001	2004	X	X	X	X	X	X	X	X
1.8 16V	XU7JP4 (LFY)	1761	81	1995	2001	X	X	X	X	X	X	X	X
1.9 D Turbo	XUD9BTF (DHX)	1905	66	1995	1999	X	X	X	X	X	X	X	X
1.9 D Turbo	XUD9SD (DHW)	1905	55	1996	1999	X	X	X	X	X	X	X	X
1.9 D Turbo	XUD9TF (D8B)	1905	68	1995	1999	X	X	X	X	X	X	X	X
2.0 16V	EW10J4 (RFN)	1997	100	2000	2004	X	X	X	X	X	X	X	X
2.0 16V	EW10J4 (RFR)	1997	99	1998	2000	X	X	X	X	X	X	X	X
2.0 16V	XU10J4R (R6E)	1997	100	1995	2005	X	X	X	X	X	X	X	X
2.0 16V	XU10J4R (RFV)	1998	98	1995	2000	X	X	X	X	X	X	X	X
2.0 16V HPi	EW10D (RLZ)	1998	103	2000	2004	X	X	X	X	X	X	X	X
2.0 HDi	DW10ATED (RHZ)	1997	80	1999	2004	X	X	X	X	X	X	X	X
2.0 HDi	DW10TD (RHY)	1997	66	1999	2004	X	X	X	X	X	X	X	X
2.0 HDiF	DW10ATED (RHS)	1997	79	2001	2004	X	X	X	X	X	X	X	X
2.0 Turbo	XU10J2CTE (RGX)	1998	108	1995	1999	X	X	X	X	X	X	X	X
2.1 D Turbo	XUD11BTE (P8C)	2088	80	1995	1999	X	X	X	X	X	X	X	X
2.2 16V	EW12J4 (3FZ)	2230	116	2002	2004	X	X	X	X	X	X	X	X
2.2 16V HDi	DW12TED4 (4HZ)	2179	98	2000	2004	X	X	X	X	X	X	X	X
2.2 16V HDiF	DW12TED4 (4HX)	2179	98	2001	2004	X	X	X	X	X	X	X	X
3.0 V6	ES9J4 (XFZ)	2946	140	1997	2000	X	X	X	X	X	X	X	X
3.0 V6	ES9J4S (XFX)	2946	152	2000	2005	X	X	X	X	X	X	X	X
mag weg links verwijderen	obsolete	0	0	0	0	X		X		X			X
407 2004													
1.6 HDiF 16V	DV6TED4 (9HZ)	1560	80	2004		X	X	X	X		X		X
1.8 16V	EW7J4 (6FZ)	1749	85	2004		X	X	X	X		X		X
2.0 16V	EW10J4 (RFN)	1997	100	2004		X	X	X	X		X		X
2.0 HDiF 16V	DW10BTED4 (RHR)	1997	100	2004		X	X	X	X		X		X
2.2 16V	EW12J4 (3FZ)	2230	116	2004		X	X	X	X		X		X
3.0 V6	ES9A (XFV)	2946	155	2004		X	X	X	X		X		X
407 Coupe 2005													
2.2 16V	EW12J4 (3FY)	2230	116	2005		X	X	X			X		X
2.7 HDiF V6	DT17TED4 (UHZ)	2721	150	2005		X	X	X			X		X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
PEUGEOT													
407 Coupe 2005													
3.0 V6	ES9A (XFV)	2946	155	2005		X	X	X	X		X	X	X
605 1989 2000													
2.0	XU102CTR (R5A)	1998	79	1989	1992	X	X	X	X		X		X
2.0	XU102C/K (R2A)	1998	84	1989	1992	X	X	X	X	X	X	X	X
2.0i	XU10J2/K (R6A)	1998	94	1989	1994	X	X	X	X	X	X	X	X
2.0i	XU10J2Z (RFZ)	1998	89	1989	1994	X	X	X	X	X	X	X	X
2.0i	XU10M/Z (RDZ)	1998	79	1989	1992	X	X	X	X	X	X	X	X
2.0i 16V	XU10J4R/L	1998	98	1994	2000	X	X	X	X	X	X	X	X
2.0i Turbo	XU10J2TEZ (RGX/RGY)	1998	104	1994	2000	X	X	X	X	X	X	X	X
2.1 D	XUD11A/W (P9A)	2138	61	1989	1994	X	X	X	X		X	X	X
2.1 D Turbo	XUD11ATE/L (P8A)	2088	81	1989	1994	X	X	X	X	X	X	X	X
2.1 D Turbo	XUD11BTE (P8C)	2088	80	1994	2000	X	X		X		X		X
2.5 D Turbo	DK5ATE/L (THY)	2446	95	1994	2000	X	X	X	X		X		X
3.0i	ZPJ (S6A)	2975	123	1989	1994	X	X	X	X	X	X	X	X
3.0i	ZPJ/Z (SFZ)	2963	123	1994	1998	X	X	X	X	X	X	X	X
3.0i SV24	ZPJ4/Z (SKZ)	2975	147	1989	1994	X	X	X	X	X	X	X	X
3.0i SV24	ZPJ4/Z (UKZ)	2963	147	1994	1998	X	X	X	X	X	X	X	X
3.0i V6 24V	ES9J4 (XFZ)	2946	140	1997	2000	X	X	X	X	X	X	X	X
607 1999													
2.0 16V	EW10J4 (RFN)	1997	100	1999	2004	X	X	X	X	X	X		X
2.0 HDi	DW10ATED (RHZ)	1996	80	1999		X	X	X	X	X	X		X
2.0 HDiF	DW10ATED (RHS)	1996	79	1999		X	X	X	X		X		X
2.2 16V	EW12J4 (3FZ)	2231	116	1999		X	X	X	X	X	X		X
2.2 HDiF 16V	DW12TED4 (4HX)	2179	98	1999		X	X	X	X	X	X		X
2.7 V6 HDiF	DT17TED4 (UHZ)	2721	150	2004		X	X	X	X	X	X		X
3.0 V6	ES9A (XFV)	2946	155	2004		X	X	X	X		X		X
3.0 V6	ES9J4S (XFX)	2946	152	1999	2004	X	X	X	X	X	X		X
806 1994 2002													
1.8	XU7JP (LFW)	1761	72	1997	1998	X	X	X	X		X	X	X
1.8	XU7JP/Z (LFZ)	1761	74	1998	1999	X	X	X	X		X	X	X
1.9 D Turbo	XUD9BTF/Y (DHX)	1905	66	1994	2000	X	X	X	X	X	X	X	X
1.9 D Turbo	XUD9TF/L (D8B)	1905	67	1994	2000	X	X	X	X	X	X	X	X
2.0	XU10J2C/Z (RFU)	1998	89	1994	2000	X	X	X	X	X	X	X	X
2.0 16V	EW10J4 (RFN)	1997	100	2000	2002	X	X	X	X		X		X
2.0 16V	EW10J4 (RFR)	1997	99	2000	2002	X	X	X	X	X	X	X	X
2.0 16V	XU10J4R (RFV)	1998	97	2000	2002	X	X	X	X	X	X	X	X
2.0 HDi	DW10ATED (RHZ)	1997	80	1999	2001	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
PEUGEOT													
806 1994 2002													
2.0 HDi 16V	DW10ATED4 (RHW)	1997	80	2001	2002	X	X	X	X		X	X	X
2.0 Turbo	XU10J2TE/Z (RGX)	1998	108	1994	2000	X	X	X	X	X	X	X	X
2.1 D Turbo	XUD11BTE (P8C)	2088	80	1994	1999	X	X	X	X	X	X	X	X
807 2002													
2.0 16V	EW10J4 (RFN)	1997	100	2002		X	X	X	X		X	X	X
2.0 HDi 16V	DW10ATED4 (RHW)	1997	80	2002		X	X	X	X		X	X	X
2.0 HDiF 16V	DW10ATED4 (RHT)	1997	79	2002		X	X	X	X		X	X	X
2.2 16V	EW12J4 (3FZ)	2231	116	2002		X	X	X	X		X	X	X
2.2 HDiF 16V	DW12ATED4 (4HW)	2179	94	2002		X	X	X	X		X	X	X
3.0 V6 24V	ES9J4S (XFW)	2946	150	2002		X	X	X	X		X	X	X
Boxer 1994 2002													
270 1.9 D	XUD9AU/W2 (D9B)	1905	51	1994	2000	X	X	X	X		X	X	X
270 1.9 Turbo D	XUD9UTF/W2 (D8C)	1905	67	1994	2000	X	X	X	X		X	X	X
270 1.9 Turbo D	XUD9UTF/X3 (DHX)	1905	67	1994	2000	X	X	X	X		X	X	X
270 2.0i	XU10J2U/W2 (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X	X
270 2.0i	XU10J2U/X3 (RFW)	1998	80	1994	2002	X	X	X	X	X	X	X	X
270 2.5 Turbo D	8140.67 (SOFIM)	2499	62	1999	2002	X	X	X	X		X	X	X
270 2.8 D	8140.63 (SOFIM)	2798	64	1999	2002	X	X	X	X		X	X	X
270 2.8 HDi	8140.43S (SOFIM)	2798	94	1999	2002	X	X	X	X		X	X	X
270 2.8 TDi	8140.43 (SOFIM)	2798	90	1999	2002	X	X	X	X		X	X	X
270 4x4 2.0i	XU10J2U/W2 (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X	X
270 4x4 2.0i	XU10J2U/X3 (RFW)	1998	80	1994	2002	X	X	X	X	X	X	X	X
270 4x4 2.5 Turbo D	DJ5T/W2 (T8A)	2445	76	1994	2002	X	X	X	X		X	X	X
310 1.9 D	XUD9AU/W2 (D9B)	1905	51	1994	2002	X	X	X	X		X	X	X
310 1.9 Turbo D	XUD9UTF/W2 (D8C)	1905	67	1994	2000	X	X	X	X		X	X	X
310 1.9 Turbo D	XUD9UTF/X3 (DHX)	1905	67	1995	2000	X	X	X	X		X	X	X
310 2.0i	XU10J2U/W2 (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X	X
310 2.0i	XU10J2U/X3 (RFW)	1998	80	1994	2002	X	X	X	X	X	X	X	X
310 2.5 D	DJ5/W2 (T9A)	2445	63	1994	2002	X	X	X	X		X	X	X
310 2.5 TDdi	DJ5TED/W2 (THX)	2445	76	1995	2002	X	X	X	X		X	X	X
310 2.5 Turbo D	DJ5T/W2 (T8A)	2445	76	1994	2002	X	X	X	X		X	X	X
310 2.5 Turbo D	DJ5T/X3 (THZ)	2445	76	1994	2002	X	X	X	X		X	X	X
310 4x4 2.0i	XU10J2U/W2 (RFW)	1998	80	1995	1997	X	X	X	X	X	X	X	X
310 4x4 2.0i	XU10J2U/X3 (RFW)	1998	80	1994	2002	X	X	X	X	X	X	X	X
310 4x4 2.5 D	DJ5/W2 (T9A)	2445	63	1994	2002	X	X	X	X		X	X	X
310 4x4 2.5 TDdi	DJ5TED/W2 (THX)	2445	76	1995	2002	X	X	X	X		X	X	X
310 4x4 2.5 Turbo D	DJ5T/W2 (T8A)	2445	76	1994	2002	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
PEUGEOT													
Boxer 1994 2002													
350 2.0i	XU10J2U/W2 (RFW)	1998	80	1995	1997		X	X	X	X	X	X	X
350 2.0i	XU10J2U/X3 (RFW)	1998	80	1994	2002		X	X	X	X	X	X	X
350 2.5 D	DJ5/W2 (T9A)	2445	63	1994	2002		X	X	X	X	X	X	X
350 2.5 TDdi	DJ5TED/W2 (THX)	2445	76	1995	2002		X	X	X	X	X	X	X
350 2.5 Turbo D	DJ5T/W2 (T8A)	2445	76	1994	2002		X	X	X	X	X	X	X
350 2.5 Turbo D	DJ5T/X3 (THZ)	2445	76	1994	2002		X	X	X	X	X	X	X
350 4x4 2.0i	XU10J2U/W2 (RFW)	1998	80	1995	1997		X	X	X	X	X	X	X
350 4x4 2.0i	XU10J2U/X3	1998	80	1994	2002		X	X	X	X	X	X	X
350 4x4 2.5 D	DJ5/W2 (T9A)	2445	63	1994	2002		X	X	X	X	X	X	X
350 4x4 2.5 TDdi	DJ5TED/W2 (THX)	2445	76	1995	2002		X	X	X	X	X	X	X
350 4x4 2.5 Turbo D	DJ5T/W2 (T8A)	2445	76	1994	2002		X	X	X	X	X	X	X
Boxer 2002													
2.0	XU10J2U (RFL)	1998	82	2002			X	X	X	X	X	X	X
2.0 HDi	DW10UTD (RHV)	1997	64	2002			X	X	X	X	X	X	X
2.2 HDi	DW12UTED (4HY)	2179	74	2002			X	X	X	X	X	X	X
2.8 HDi	8140.?? (SOFIM-T)	2798	107	2004			X	X	X	X	X	X	X
2.8 HDi	8140.43S (SOFIM)	2798	94	2002			X	X	X	X	X	X	X
Expert 1995													
1.6 SPi	220 A2.000	1581	58	1995	2001		X	X	X	X	X	X	X
1.8	XU7JP (LFW)	1761	72	1997	2000		X	X	X	X	X	X	X
1.9 D	DW8 (WJZ)	1868	51	1999			X	X	X	X	X	X	X
1.9 D	DW8B (WJY)	1868	51	2000			X	X	X	X	X	X	X
1.9 D	XUD9A (D9B)	1905	51	1995	1999		X	X	X	X	X	X	X
1.9 TD	XUD9BTF (DHX)	1905	68	1997	2001		X	X	X	X	X	X	X
1.9 TD	XUD9TF (D8B)	1905	68	1995	1998		X	X	X	X	X	X	X
2.0 16V	EW10J4/L3 (RFN)	1997	100	2001			X	X	X	X	X	X	X
2.0 HDi	DW10ATED (RHZ)	1997	80	2000			X	X	X	X	X	X	X
2.0 HDi	DW10BTED (RHX)	1997	69	2000			X	X	X	X	X	X	X
2.0 HDi 16V	DW10ATED4 (RHW)	1997	80	2002			X	X	X	X	X	X	X
J5 1981 1994													
1000 1.8	XM7T/169B	1796	50	1981	1994		X	X	X	X	X	X	X
1000 1.9 D	XUD9A (D9B)	1905	51	1990	1994		X	X	X	X	X	X	X
1000 2.5 D	CRD93L/U25/661	2500	54	1981	1994		X	X	X	X	X	X	X
1300 2.0	XN1T/170B	1971	56	1981	1994		X	X	X	X	X	X	X
1300 2.5 D	CRD93L/U25/661	2500	54	1984	1994		X	X	X	X	X	X	X
1400 1.9 D	XUD9A (D9B)	1905	51	1990	1994		X	X	X	X	X	X	X
1400 2.0	XN1T/170B	1971	56	1981	1994		X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
PEUGEOT													
J5 1981 1994													
1400 2.5 Turbo D	CRD93LS/U25/673	2500	70	1987	1994	X	X	X	X	X			
1400 4x4 2.5 D	CRD93L/U25/661	2500	54	1989	1994	X	X	X	X	X			
1400 4x4 2.5 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X	X			
1500 2.0	XN1T/170B	1971	56	1981	1994	X	X	X	X	X			
1500 2.5 D	CRD/93L/U25/661	2500	54	1981	1994	X	X	X	X	X			
1800 2.0	XN1TA/170C	1971	62	1989	1994	X	X	X	X	X			
1800 2.5 D	CRD93L/U25/661	2500	54	1989	1994	X	X	X	X	X			
1800 2.5 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X	X			
Combi 1.8	XM7T/169B	1796	50	1982	1994	X	X	X	X	X			
Combi 1.9 D	XUD9A (D9B)	1905	51	1990	1994	X	X	X	X	X	X		
Combi 2.0	XN1T/170B	1971	56	1982	1994	X	X	X	X	X			
Combi 2.5 D	CRD93L/U25/661	2500	54	1982	1994	X	X	X	X	X			
Combi 2.5 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X	X			
Combi 4x4 2.5 D	CRD93L/U25/661	2500	54	1989	1994	X	X	X	X	X			
Combi 4x4 2.5 Turbo D	CRD93LS/U25/673	2500	70	1989	1994	X	X	X	X	X			
Partner 1996													
1.1i	TU1JP (HFX)	1124	44	2000		X	X	X	X	X	X	X	X
1.1i	TU1M+ (HDY)	1124	44	1996	2001	X	X	X	X	X	X	X	X
1.1i	TU1M+ (HDZ)	1124	44	1996	2001	X	X	X	X	X	X	X	X
1.4	TU3.2TR/K (K5A)	1360	51	1996	2002	X	X	X	X	X	X	X	X
1.4i	TU3JP (KFW)	1360	55	2000		X	X	X	X	X	X	X	X
1.4i	TU3JP (KFX)	1360	55	1996	2000	X	X	X	X	X	X	X	X
1.4i	TU3JP/K (K6D)	1360	55	2000	2002	X	X	X	X	X	X	X	X
1.6 HDi 16V	DV6ATED4 (9H)	1560	55	2005		X	X	X	X		X		X
1.6 HDiF 16V	DV6TED4 (9HY)	1560	75	2005		X		X					
1.6i 16V	TU5JP4 (NFU)	1587	80	2000		X	X	X	X		X	X	X
1.8 D	XUD7 (A9A)	1769	44	1996	1999	X	X	X	X	X	X	X	X
1.8i	XU7JB (LFX)	1761	66	2000	2002	X	X	X	X	X	X	X	X
1.9 D	DW8 (WJZ)	1868	51	2000	2001	X	X	X	X	X	X	X	X
1.9 D	DW8B (WJY)	1868	51	2000		X	X	X	X	X	X	X	X
1.9 D	XUD9A (D9B)	1905	51	1996	1999	X	X	X	X	X	X	X	X
1.9 D	XUD9Y (DJY)	1905	50	1996	1999	X	X	X	X	X	X	X	X
2.0 HDi	DW10TD (RHY)	1997	66	2000		X	X	X	X	X	X	X	X
PLYMOUTH													
Breeze 1995													
2.0i 16V	SOHC	1996	96	1995				X					
2.4i 16V	DOHC	2425	112	1995				X					

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
PLYMOUTH																			
Breeze 1995																			
2.5i V6	H00	2495	118	1995				X											
2.5i V6 Convertible	H00	2497	120	1995				X											
Neon 1993 1999																			
2.0i 16V DOHC		1995	108	1993	1999			X											
2.0i 16V SOHC	420H	1995	98	1993	1999			X											
PONTIAC																			
Bonneville 1991																			
3.8	L36	3791	153	1995				X											
3.8 Supercharger	L67	3791	179	1991				X											
Firebird 1992 1998																			
3.8 V6	L36	3791	149	1992	1998			X											
5.7 V8 Trans Am	LS1	5665	227	1995	1998			X											
Grand Am 1991 1998																			
2.4 16V	LD9	2392	112	1996	1998			X											
3.1	L82	3135	115	1994	1998			X											
Grand Prix 1996																			
3.1	L82	3135	119	1996				X											
Sunfire 1994																			
2.2	LN2-4	2196	90	1994				X											
2.4 16V	LD9	2392	112	1996				X											
Trans Sport 1997																			
3.4 V6	LA1	3350	134	1997				X											
PORSCHE																			
911 964 1989 1994																			
3.0 SC,Targa	Inj.	930-03/10	2993	132	1978	1983													
3.3 SC Turbo	Inj.	930-60/66	3299	221	1978	1983													
3.4 24V (996)		M 96.01	3387	221	1997			X											
3.6		M 64.20	3600	210	1995	1997													
3.6	Inj.		3600	200	1993	1997													
3.6 Bi-turbo		M 64.60	3600	300	1995	1999		X											
3.6 Carrera 2	Inj.	M64/01	3600	184	1989	1993													
3.6 Carrera 4 Coupe	Inj.	M64/01	3600	184	1988	1993													
3.6 Turbo	Inj.		3600	265	1992	1997													
911 993 1994 1998																			
3.6 Carrera		M64.05/06	3600	200	1994	1996	X	X					X				X		
3.6 Carrera		M64.21/22	3600	210	1995	1998	X	X											

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
PORSCHE																			
911 993 1994 1998																			
3.6 Turbo	M64.60	3600	300	1996	1998	X	X												
3.7 Carrera RS	M64.20	3746	221	1995	1996	X	X												
911 996 1998 2004																			
3.4 Carrera	M96.01	3387	221	1998	2001	X	X												
3.6 Carrera	M96.03	3596	235	2001	2004	X	X												
3.6 Turbo	M96.70	3596	309	2001		X	X												
40 years 911	M96.03S	3596	254	2004	2004	X													
GT2	M96.70S	3600	340	2001	2003	X	X												
GT3	M79.80	3596	280	2003		X	X												
GT3	M96.76	3600	265	1999	2001	X	X												
911 997 2004																			
3.6 Carrera	M96.05	3596	239	2004		X	X												
3.8 Carrera S	M97.01	3824	261	2004		X	X												
928 1977 1995																			
928 S	Inj.	M28/11/12	4664	221	1980	1986													
928 S2	Inj.	M28/21/22	4664	228	1984	1985													
928 S4	Inj.	M28/41/42	4957	235	1986	1991													
928 S4 GTS	Inj.	M28/49/50	5396	250	1991	1995													
944 1982 1991																			
944 S 16V	Inj.	M44/41	2990	155	1988	1991													
944 Turbo	Inj.	M44/51/52	2479	162	1986	1991													
968 1991 1994																			
3.0 CABRIO	Inj.	M44.43/44	2990	176	1991	1994													
3.0 COUPE	Inj.	M44.43/44	2990	176	1991	1994													
Boxster 986 1996 2005																			
2.5	M96.20	2480	150	1996	1999	X	X	X					X					X	
2.7	M96.22	2687	162	1999	2002	X	X											X	
2.7	M96.23	2687	168	2002		X	X											X	
S (3.2)	M96.21	3179	185	1999	2002	X	X											X	
S (3.2)	M96.24	3179	191	2002		X	X											X	
Cayenne 2002																			
3.2 V6	BFD	3189	184	2002		X	X								X				
4.5 V8 Turbo	M48.50	4511	330	2002		X	X												
S (4.5 V8)	M48.00	4511	250	2002		X	X												

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
PROTON																			
Gen-2																			
1.3	S4PH	1332	70	2005															
1.6	S4PH	1597	82	2004															
Impian																			
1.6	4G18 S4	1584	76	2005															
Jumbuck																			
1.5	4G15	1468	64																
Savvy																			
1.2	D4F	1149	55	2005															
RENAULT																			
11 1983 1989																			
1.7 GTX,TXE,GTE	Inj. F3N-722/08	1721	70	1986	1989						X								
1.7 Kat.	Inj. F3N-718	1721	55	1984	1989						X								
19 1988 1995																			
1.2	C1G-730	1237	40	1988	1995	X	X	X	X	X		X	X	X		X	X	X	
1.2e	E7F-700/706/730	1171	43	1989	1995	X	X	X	X	X	X		X	X		X	X	X	
1.2e	E7F-704	1171	43	1989	1995	X	X	X	X	X	X			X			X	X	
1.4	C1J-742	1397	43	1988	1995	X	X	X	X	X		X	X	X		X		X	
1.4	C2J-772/776	1397	49	1988	1992	X	X	X	X	X		X	X	X		X	X	X	
1.4	C3J-710/760	1390	43	1989	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.4e	E6J-700/701	1390	57	1989	1995	X	X	X	X	X		X	X	X		X	X	X	
1.4e	E7J-700	1390	58	1989	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.4e	E7J-706/740	1390	57	1989	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.4e	E7J-710/711/718/719	1390	57	1989	1995	X	X	X	X	X	X	X		X			X	X	
1.7	F2N-720/722	1721	66	1988	1995	X	X	X	X	X		X	X	X		X	X	X	
1.7	F2N-728	1721	54	1989	1995	X	X	X	X	X		X		X		X	X	X	
1.7	F3N-740/741	1721	54	1992	1994	X	X	X	X	X	X	X	X	X		X	X	X	
1.7	F3N-742	1721	66	1989	1992	X	X	X	X	X	X	X	X	X		X	X	X	
1.7	F3N-743	1721	54	1992	1994	X	X	X	X	X	X	X	X	X			X	X	
1.7	F3N-746	1721	79	1990	1992	X	X	X	X	X	X	X	X	X		X	X	X	
1.8	F3P-700	1794	83	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.8	F3P-704/706	1794	70	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.8	F3P-705/707	1794	70	1992	1995	X	X	X	X	X	X	X	X	X			X	X	
1.8	F3P-708/740/760	1794	70	1992	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.8	F3P-710/714	1794	70	1992	1995	X	X	X	X	X	X			X			X	X	
1.8	F3P-712	1794	70	1992	1995	X	X	X	X	X	X			X			X	X	
1.8 16V	F7P-700	1764	103	1988	1992	X	X	X	X	X	X	X		X		X	X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagr.	Fuses & Relays
RENAULT													
19 1988 1995													
1.8 16V	F7P-704	1764	101	1988	1995	X	X	X	X	X		X	X
1.8 16V	F7P-720	1764	101	1988	1995	X	X	X	X		X		X
1.8 16V	F7P-722	1764	101	1988	1995	X	X	X	X		X		X
1.9 D	F8Q-706	1870	47	1988	1995	X	X	X	X		X	X	X
1.9 D	F8Q-742	1870	47	1988	1995	X	X	X	X		X	X	X
1.9 D	F8Q-764	1870	47	1988	1995	X	X	X	X		X	X	X
1.9 Turbo D	F8Q-740	1870	68	1993	1995	X	X	X	X		X	X	X
1.9 Turbo D	F8Q-744	1870	68	1991	1993	X	X	X	X		X	X	X
21 Nevada 1985 1995													
1.4	C2J...	1397	0	1989	-	X	X	X	X				X
1.4i	C2J..	1397	0	1988	-	X	X	X	X				X
1.6	C2L..	1565	0	1988	-	X	X	X	X				X
1.7	F2N-712/716	1721	55	1986	1989	X	X	X	X		X	X	X
1.7	F2N-754	1721	66	1986	1995	X	X	X	X		X	X	X
1.7i	F2N-710/720	1721	65	1986	1989	X	X	X	X		X	X	X
1.7i	F3N-722/723	1721	69	1989	1995	X	X	X	X		X	X	X
1.7i	F3N-726/718	1721	55	1989	1994	X	X	X	X		X	X	X
1.9 D	F8Q-706	1870	47	1989	1991	X	X	X	X		X		X
2.0i	J7R-746/747	1995	88	1986	1989	X	X	X	X		X		X
2.0i	J7R-750/751	1995	88	1986	1989	X	X	X	X		X	X	X
2.0i 12V	J7R-740/754	1995	99	1989	1995	X	X	X	X		X		X
2.0i 12V	J7R-740/754	1995	99	1989	1995	X	X	X	X		X	X	X
2.0i Turbo	J7R-752/756	1995	129	1988	1990	X	X	X	X		X	X	X
2.0i Turbo 4x4	J7R-756	1995	129	1990	1992	X	X	X	X		X	X	X
2.1 D	J8S B704	2068	48	1986	1995	X	X	X	X		X	X	X
2.1 Turbo D	J8S B714	2068	65	1985	1995	X	X	X	X		X	X	X
2.2i	J7T-754/755	2165	79	1989	1995	X	X	X	X		X	X	X
2.2i 4X4	J7T-754/755	2165	79	1987	1989	X	X	X	X		X	X	X
25 1984 1993													
2.0	J6R-706/707	1995	74	1984	1989	X	X	X	X		X		X
2.0	J7R-722/723	1995	88	1987	1989	X	X	X	X		X		X
2.0i 12V	J7R-754/756	1995	100	1989	1993	X	X	X	X		X		X
2.1 D	J8S-706	2068	46	1984	1993	X	X	X	X		X		X
2.1 D	J8S-736	2068	46	1984	1993	X	X	X	X		X		X
2.1 Turbo D	J8S-708	2068	63	1984	1993	X	X	X	X		X		X
2.2i	J7T-706/707/708/730	2165	89	1984	1992	X	X	X	X		X		X
2.2i	J7T-732/733	2165	81	1986	1993	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
RENAULT													
25 1984 1993													
2.2i	J7T-732/733	2165	81	1986	1993	X	X	X	X		X		X
2.8 V6	Z7W-700/701	2849	118	1988	1992	X	X	X	X	X	X		X
2.8 V6i	Z7W-706/707	2849	118	1986	1993	X	X	X	X	X	X		X
V6 Turbo	Z7U-700	2458	151	1989	1992	X	X	X	X		X		X
V6 Turbo	Z7U-702	2458	133	1984	1989	X	X	X	X		X		X
V6i	Z7V-708/709 23362->	2664	110	1988	1992	X	X	X	X		X		X
V6i	Z7V-708/709->23361	2664	104	1984	1988	X	X	X	X		X		X
5 Super 5 1984 1993													
1.0	C1C-700	956	30	1984	1987	X	X	X	X		X	X	X
1.0	C1C-706	956	30	1986	1990	X	X	X	X		X		X
1.1	C1E-750/752	1108	34	1984	1989	X	X	X	X		X	X	X
1.2	C1G-702/703	1237	40	1986	1990	X	X	X	X		X	X	X
1.4	C1J-768	1397	43	1984	1989	X	X	X	X		X	X	X
1.4	C2J-700/780	1397	49	1984	1990	X	X	X	X		X	X	X
1.4	C2J-700/798	1397	49	1987	1990	X	X	X	X		X	X	X
1.4	C2J-781	1397	52	1984	1986	X	X	X	X		X		X
1.4	C3J-700/702	1397	44	1984	1993	X	X	X	X	X	X	X	X
1.4	E6J-	1390	45	1989	1991	X	X	X	X		X	X	X
1.4 Automatic	C2J780/781/788	1397	49	1984	1987	X	X	X	X		X	X	X
1.4 Automatic	C2J-Q781	1397	49	1987	1991	X	X	X	X		X	X	X
1.4 GT turbo	C1J782/784/788	1397	88	1984	1991	X	X	X	X		X	X	X
1.6 D	F8M-720	1595	40	1984	1991	X	X	X	X		X	X	X
1.7	F2N-710/740	1721	65	1987	1990	X	X	X	X		X	X	X
1.7i	F3N-702	1721	70	1986	1990	X	X	X	X	X	X	X	X
1.7i	F3N-716/718	1721	55	1986	1990	X	X	X	X	X	X	X	X
1.7i	F3N-722	1721	55	1986	1991	X	X	X	X	X	X	X	X
9 1981 1989													
1.7 GTX,TXE,GTE	Inj. F3N-722/08	1721	70	1986	1989				X				
1.7 Kat.	Inj. F3N-718	1721	55	1984	1989				X				
Avantime 2002 2003													
2.0 16V Turbo	F4R-760	1998	120	2002	2003	X	X	X	X	X	X	X	X
2.2 dCi 16V	G9T-718	2188	110	2002	2003	X	X	X	X	X	X		X
2.9 V6 24V	L7X-721/722	2946	152	2002	2003	X	X	X	X	X	X		X
Clio 1990 1998													
1.1	C1E-700	1108	35	1990	1994	X	X	X	X	X	X	X	X
1.2	E5F-710/716	1171	43	1990	1994	X	X	X	X	X	X	X	X
1.2 8V	D7F-730	1149	43	1994	1998	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
RENAULT																			
Clio 1990 1998																			
1.2i	C3G-720	1239	40	1991	1994	X	X	X	X	X	X		X	X				X	X
1.2i	E7F-700	1171	44	1994	1996	X	X	X	X	X	X		X	X		X		X	X
1.2i	E7F-704	1171	43	1992	1994	X	X	X	X	X	X		X	X					X
1.2i	E7F-706	1171	43	1990	1994	X	X	X	X	X	X		X	X		X		X	X
1.2i	E7F-708	1171	43	1994	1998	X	X	X	X	X	X		X	X				X	X
1.2i	E7F-750/754	1171	40	1991	1994	X	X	X	X	X	X		X	X				X	X
1.4i	E6J-712/713	1390	58	1990	1994	X	X	X	X	X			X	X					X
1.4i	E7J-710	1390	58	1994	1996	X	X	X	X	X	X		X	X		X		X	X
1.4i	E7J-711	1390	58	1990	1994	X	X	X	X	X	X		X	X		X		X	X
1.4i	E7J-718/719	1390	58	1994	1998	X	X	X	X	X	X		X	X		X		X	X
1.4i	E7J-754/601	1390	58	1991	1994	X	X	X	X	X	X		X	X				X	X
1.4i	E7J-756/757	1390	55	1996	1998	X	X	X	X	X			X	X				X	X
1.7	F2N-720/770	1721	67	1990	1994	X	X	X	X	X			X	X		X		X	X
1.8 RSi	F3P-712	1794	80	1993	1994	X	X	X	X	X	X		X	X				X	X
1.8 RSi	F3P-712	1794	81	1993	1997	X	X	X	X	X	X		X	X				X	X
1.8i	F3P-710	1794	66	1994	1996	X	X	X	X	X	X		X	X				X	X
1.8i	F3P-714	1794	69	1991	1994	X	X	X	X	X	X		X	X				X	X
1.8i	F3P-754	1794	66	1996	1998	X	X	X	X	X			X	X				X	X
1.8i	F3P-755	1794	66	1991	1998	X	X	X	X	X	X		X	X				X	X
1.8i	F3P-758	1794	69	1994	1998	X	X	X	X	X			X	X				X	X
1.8i 16V	F7P-720	1764	99	1991	1994	X	X	X	X	X	X		X	X		X		X	X
1.8i 16V	F7P-722	1764	99	1994	1996	X	X	X	X	X	X		X	X		X		X	X
1.9 D	F8Q-676/696	1870	48	1996	1998	X	X	X	X	X			X	X					X
1.9 D	F8Q-678	1870	48	1994	1998	X	X	X	X	X			X	X					X
1.9 D	F8Q-692	1870	48	1996	1998	X	X	X	X	X			X	X					X
1.9 D	F8Q-732	1870	48	1994	1996	X	X	X	X	X			X	X			X		X
1.9 D	F8Q-730	1870	48	1990	1994	X	X	X	X	X			X	X				X	X
2.0i Williams	F7R-700	1998	110	1993	1996	X	X	X	X	X	X		X	X				X	X
Clio II 1998 2006																			
1.0 16V not for Europe	D4D-700	999				X			X										
1.0 8V only Brasil	D7D-760	999	43	1999		X			X										X
1.2 16V	D4F-706	1149	55	2001		X	X	X	X	X				X					X
1.2 16V	D4F-712	1149	55	2000	2001	X	X	X	X	X	X	X		X			X		X
1.2 16V	D4F-728	1149	55	2001		X	X	X	X	X				X					X
1.2 16V Quickshift 5	D4F-722	1149	55	2001		X	X	X	X	X	X			X					X
1.2 16V SWITCH OFF NO DATA	D4F-714	1149	55	2001		X	X		X	X				X					
1.2 8V	D7F-720	1149	43	1998	2001	X	X	X	X	X	X		X	X			X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
RENAULT													
Clio II 1998 2006													
1.2 8V	D7F-722	1149	43	1999	2001	X	X	X	X	X	X	X	X
1.2 8V	D7F-726	1149	43	1998	2001	X	X	X	X	X	X	X	X
1.2 8V	D7F-745	1149	43	2000	2002	X	X	X	X	X	X	X	X
1.2 8V	D7F-746	1149	43	2000	2002	X	X	X	X	X	X	X	X
1.2 8V	D7F-766	1149	43	2002		X	X	X	X	X	X	X	X
1.2 8V is clio I phase III	D7F-700	1149	43	1998		X	X	X	X	X	X	X	X
1.2 8V is clio I phase III	D7F-730	1149	43	1998		X	X	X	X	X	X	X	X
1.2 8V LPG	D7F-744	1149	43	2000	2002	X	X	X	X	X	X	X	X
1.2 8V LPG	D7F-764	1149	43	2002		X	X	X	X	X	X	X	X
1.4 16V	K4J-710	1390	72	2000		X	X	X	X	X	X	X	X
1.4 16V	K4J-711	1390	72	2000		X	X	X	X	X	X	X	X
1.4 16V	K4J-712	1390	70	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	K4J-713	1390	70	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	K4J-715	1390	70	1999	2000	X	X	X	X	X	X	X	X
1.4 8V	E7J-634	1390	55	1999	2000	X	X	X	X	X	X	X	X
1.4 8V	E7J-635	1390	55	1999	2000	X	X	X	X	X	X	X	X
1.4 8V	E7J-780	1390	55	1998	2000	X	X	X	X	X	X	X	X
1.4 8V	K7J-700	1390	55	2000	2003	X	X	X	X	X	X	X	X
1.4 8V is clio I phase III	E7J-673	1390	55	1998		X	X	X	X	X	X	X	X
1.5 dCi 100	K9K-712	1461	74	2003		X	X	X	X	X	X	X	X
1.5 dCi 65	K9K-700	1461	47	2001	2003	X	X	X	X	X	X	X	X
1.5 dCi 65	K9K-704	1461	47	2001		X	X	X	X	X	X	X	X
1.5 dCi 80	K9K-702	1461	60	2001	2003	X	X	X	X	X	X	X	X
1.5 dCi 80	K9K-710	1461	60	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-708	1598	79	1998	2001	X	X	X	X	X	X	X	X
1.6 16V	K4M-742	1598	79	1998	2001	X	X	X	X	X	X	X	X
1.6 16V	K4M-743	1598	79	1998	2001	X	X	X	X	X	X	X	X
1.6 16V	K4M-744	1598	79	2001		X	X	X	X	X	X	X	X
1.6 16V	K4M-745	1598	79	2001		X	X	X	X	X	X	X	X
1.6 16V	K4M-748	1598	79	1998	2001	X	X	X	X	X	X	X	X
1.6 16V not for europe	K4M-740	1598	79	2000		X	X	X	X	X	X	X	X
1.6 16V sedan not for europe	K4M-732	1598	79	1998		X	X	X	X	X	X	X	X
1.6 16V sedan not for europe	K4M-734	1598	79	1998		X	X	X	X	X	X	X	X
1.6 8V	K7M-744	1598	66	1998	2000	X	X	X	X	X	X	X	X
1.6 8V	K7M-745	1598	66	1998	2000	X	X	X	X	X	X	X	X
1.6 8V does not exist	K7M-740	1598	66	2000		X	X	X	X	X	X	X	X
1.6 8V does not exist	K7M-748	1598	66	1999		X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
RENAULT													
Clio II 1998 2006													
1.6 8V LPG	K7M-746	1598	66	1999	2000	X	X	X	X	X			X
1.9 D	F8Q-630	1870	47	1998	2001	X	X	X	X	X		X	X
1.9 D	F8Q-632	1870	47	1999	2001	X	X	X	X	X			X
1.9 D	F8Q-662	1870	47	1998	2001	X	X	X	X	X		X	X
1.9 DTi	F9Q-780	1870	59	1999	2001	X	X	X	X	X		X	X
1.9 DTi	F9Q-782	1870	59	2000	2002	X	X	X	X	X			X
2.0 16V	F4R-730	1998	124	1998	2001	X	X	X	X	X		X	X
2.0 16V	F4R-732	1998	124	2001	2003	X	X	X	X	X			X
2.0 16V	F4R-736	1998	124	2001	2003	X	X	X	X	X			X
2.0 16V	F4R-738	1998	132	2003		X	X	X		X			X
test 13 inch	999					X	X	X					
test2	99					X		X					
Clio III 2005													
1.2 16V (48/55 kW)	D4F-740	1149	48	2005		X	X	X	X	X	X		
1.4 16V	K4J-780	1390	72	2005		X	X	X	X	X	X		
1.5 dCi 105	K9K-764	1461	78	2005		X	X	X	X	X	X		
1.5 dCi 70	K9K-768	1461	50	2005		X	X	X	X	X	X		
1.5 dCi 85	K9K-766	1461	63	2005		X	X	X	X	X	X		
1.6 16V	K4M-800	1598	82	2005		X	X	X	X	X	X		
1.6 16V	K4M-801	1598	82	2005		X	X	X	X	X	X		
2.0 16V	M4R-701	1997	105	2006		X	X	X	X	X	X		
Espace 1984 1991													
2.0	J6R-234/236	1995	81	1984	1989	X	X	X	X	X		X	X
2.0	J7R-760	1995	87	1987	1991	X	X	X	X	X		X	X
2.0 (NOT USED)	J7R-760/768	1995	87	1996	1996	X	X	X	X	X	X		
2.0i (NOT USED)	F3R-728/729	1998	84	1996	1996	X	X	X	X	X	X		
2.0i (NOT USED)	F3R-768	1998	84	1996	1996	X	X	X	X	X	X		
2.0i 16V (NOT USED)	F4R-700	1998	105	1996	1996	X	X	X	X	X	X		
2.1 ?? (NOT USED)	J8S-776	2068		1991	1996	X	X	X	X	X	X		
2.1 Turbo D	J8S-714	2068	0	1986	1991	X	X	X	X	X	X		X
2.1 Turbo D	J8S-772	2068	65	1991	1996	X	X	X	X	X	X	X	X
2.1 Turbo D	J8S-774	2068	65	1984	1991	X	X	X	X	X	X		X
2.2	J7T-770	2165	81	1986	1991	X	X	X	X	X	X	X	X
2.2	J7T-772/773	2165	81	1986	1996	X	X	X	X	X	X	X	X
2.2 D (NOT USED)	G8T-714	2188	83	1996	1996	X	X	X	X	X	X		
2.2 D (NOT USED)	G8T-716/718	2188	83	1996	1996	X	X	X	X	X	X		
2.2 Quadra	J7T-770/772	2165	79	1991	1996	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
RENAULT													
Espace 1984 1991													
2.8i V6	Z7W	2849	110	1986	1991	X	X	X	X		X		X
2.8i V6	Z7W-712	2849	110	1991	1996	X	X	X	X	X	X	X	X
3.0i V6 (NOT USED)	L7X-727	2946	140	1998	1996	X	X	X	X				
3.0i V6 (NOT USED)	Z7X-775	2963	123	1996	1996	X	X	X	X	X	X	X	
Espace II 1991 1997													
2.0 8V	J7R-768	1995	77	1991	1995	X	X	X	X		X		X
2.1 Turbo D	J8S-772					X		X					X
2.1 Turbo D	J8S-776					X		X					X
2.1 Turbo D 8V	J8S-610	2068	65	1991	1997	X	X	X	X	X	X	X	X
2.1 Turbo D 8V	J8S-612	2068	65	1991	1997	X	X	X	X	X	X	X	X
2.1 Turbo D 8V	J8S-778	2068	65	1991	1997	X	X	X	X	X	X	X	X
2.2 8V (79/81 KW)	J7T-772	2165	81	1991	1997	X	X	X	X		X		X
2.2 8V (79/81 KW)	J7T-773	2165	81	1991	1997	X	X	X	X		X		X
2.2 8V (79/81 KW)	J7T-776	2165	81	1991	1997	X	X	X	X	X	X	X	X
2.8 V6 12V (110/113 KW)	Z7W-712	2849	113	1991	1997	X	X	X	X		X		X
2.8 V6 12V (110/113 KW)	Z7W-713	2849	113	1991	1997	X	X	X	X		X		X
2.8 V6 12V (110/113 KW)	Z7W-717	2849	113	1991	1997	X	X	X	X	X	X	X	X
Espace III 1997 2002													
1.9 DTi	F9Q-722	1870	74	2000	2002	X	X	X	X		X		X
2.0 16V	F4R-700	1998	104	1999	2002	X	X	X	X	X	X		X
2.0 16V	F4R-701	1998	104	1999	2002	X	X	X	X		X		X
2.0 8V	F3R-728	1998	84	1997	1998	X	X	X	X	X	X		X
2.0 8V	F3R-729	1998	84	1997	1998	X	X	X	X		X		X
2.0 8V	F3R-768	1998	84	1998	2000	X	X	X	X		X		X
2.0 8V	F3R-769	1998	84	1998	2000	X	X	X	X	X	X		X
2.0 8V LPG	F3R-742	1998	84	1997	2000	X		X	X		X		X
2.0 Espace I+II only	J7R-760/768	1995	87	1997	1998	X		X	X	X	X	X	X
2.2 dCi 16V (85/95 kW)	G9T-710	2188	95	2000	2002	X	X	X	X		X		X
2.2 dT 12V	G8T-714	2188	83	1997	2000	X	X	X	X		X		X
2.2 dT 12V	G8T-716	2188	83	1997	2000	X	X	X	X	X	X		X
3.0 V6 12V	Z7X-775	2963	123	1997	2000	X	X	X	X	X	X		X
3.0 V6 24V	L7X-727	2946	144	1998	2002	X	X	X	X	X	X		X
99	99					X		X	X				
Espace IV 2002													
1.9 dCi	F9Q-680	1870	89	2002		X	X	X	X		X		X
1.9 dCi	F9Q-820	1870	89	2002		X	X	X	X		X		X
1.9 dCi	F9Q-826	1870	86	2002		X	X	X	X				X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
RENAULT													
Espace IV 2002													
2.0 16V	F4R-790	1998	102	2002		X	X	X	X	X	X		X
2.0 16V	F4R-792	1998	100	2002		X	X	X	X	X	X		X
2.0 16V	F4R-796	1998	102	2002		X	X	X	X	X	X		X
2.0 16V	F4R-797	1998	102	2002		X	X	X	X	X	X		X
2.0 16V Turbo	F4R-794	1998	122	2002		X	X	X	X	X	X		X
2.0 16V Turbo	F4R-795	1998	122	2002		X	X	X	X	X	X		X
2.2 16V dCi	G9T-642	2188	110	2002		X	X	X	X	X	X		X
2.2 16V dCi	G9T-742	2188	112	2002		X	X	X	X	X	X		X
2.2 16V dCi	G9T-743	2188	112	2002		X	X	X	X	X	X		X
3.0 V6 24V dCi	P9X-701	2958	130	2002		X	X	X	X	X	X		X
3.5 V6	V4Y-711	3498	179	2002		X	X	X	X	X	X		X
999	999					X		X	X				
Express 1985 1997													
1.0	C1C-700/706	956	30	1986	1989	X	X	X	X		X		X
1.1	C1E-750/752/756	1108	34	1986	1991	X	X	X	X		X		X
1.1	C1E-760	1108	34	1987	1991	X	X	X	X		X		X
1.1		1108	36	1991	-	X	X	X	X		X		X
1.2	C1G-726	1237	40	1991	1994	X	X	X	X		X		X
1.2i	C3G-710	1239	40	1991	1997	X	X	X	X		X		X
1.4	C1/2J-768/782	1397	43	1986	1991	X	X	X	X		X		X
1.4	E6J	1390	59	1991	1994	X	X	X	X		X		X
1.4i	C3J-700/702	1397	55	1989	1994	X	X	X	X		X		X
1.4i	C3J-762	1390	44	1991	1997	X	X	X	X		X		X
1.4i	E7J-718	1390	55	1991	1997	X	X	X	X		X		X
1.4i	E7J-770/771	1394	55	1996	1997	X	X	X	X		X		X
1.6 D	F8M-730	1595	40	1986	1991	X	X	X	X		X		X
1.6 D	F8M-760	1595	40	1991	1997	X	X	X	X		X		X
1.9 D	F8Q	1870	40	1994	1997	X	X	X	X		X		X
1.9 D	F8Q-706	1870	47	1989	1997	X	X	X	X		X		X
Kangoo 1997													
1.2 16V	D4F-712	1149	55	2002		X	X	X	X	X	X	X	X
1.2 16V	D4F-714	1149	55	2002		X	X	X	X	X	X	X	X
1.2 16V	D4F-716	1149	55	2002		X	X	X	X	X	X	X	X
1.2 16V	D4F-730 No data (yet?)	1149	55	2002		X	X	X	X	X	X	X	X
1.2 8V	D7F-720	1149	43	1998	2000	X	X	X	X	X	X	X	X
1.2 8V	D7F-722	1149	43	2000		X	X	X	X	X	X	X	X
1.2 8V	D7F-726	1149	43	1998	2000	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
RENAULT													
Kangoo 1997													
1.2 8V	D7F-746	1149	43	2000	2002	X	X	X	X	X		X	X
1.2 8V	D7F-766	1149	43	2002		X	X	X	X	X			X
1.2 8V LPG	D7F-710	1149	43	1997	1999	X	X	X	X	X		X	X
1.2 8V LPG	D7F-744	1149	43	2000		X	X	X		X			X
1.2 8V LPG	D7F-764	1149	43	2002		X	X	X		X			X
1.4 8V	E7J-634	1390	55	1997	2000	X	X	X	X	X		X	X
1.4 8V	E7J-635	1390	55	1998	2000	X	X	X		X		X	X
1.4 8V	E7J-780	1390	55	1997	2000	X	X	X	X	X		X	X
1.4 8V	K7J-700	1390	55	2001	2003	X	X	X	X	X	X	X	X
1.4 8V	K7J-701	1390	55	2000	2003	X	X	X		X	X	X	X
1.5 dCi 65	K9K-700	1461	47	2001	2003	X	X	X		X		X	X
1.5 dCi 65	K9K-704	1461	47	2003		X	X	X	X	X	X	X	X
1.5 dCi 80	K9K-702	1461	60	2002	2003	X	X	X	X	X	X	X	X
1.5 dCi 80	K9K-710	1461	60	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-708	1598	70	2000	2002	X	X	X		X			X
1.6 16V	K4M-730	1598	70	2001		X	X	X		X	X		X
1.6 16V	K4M-752	1598	70	2001		X	X	X		X	X	X	X
1.6 16V	K4M-753	1598	70	2001		X	X	X		X	X	X	X
1.6 16V 4x4	K4M-750	1598	70	2001		X	X	X	X	X	X	X	X
1.6 16V LPG	K4M-732	1598	70	2001		X	X	X		X			X
1.6 16V LPG	K4M-754	1598	70	2001		X	X	X		X			X
1.6 8V	K7M-746	1598	54	1998	2001	X	X	X		X	X	X	X
1.9 D	F8Q-630	1870	47	1997	2000	X	X	X	X	X	X	X	X
1.9 D	F8Q-632	1870	47	1998	2000	X	X	X		X	X	X	X
1.9 D	F8Q-662	1870	40	1997	2000	X	X	X	X	X		X	X
1.9 D does not exist	F8Q-620	1870	47	1997	2000	X	X	X		X		X	X
1.9 dCi	F9Q-792	1870	59	2001	2003	X	X	X	X	X			X
1.9 dCi 4x4	F9Q-790	1870	59	2001		X	X	X	X	X	X	X	X
1.9 dTi	F9Q-780	1870	59	1998	2001	X	X	X		X		X	X
1.9 dTi	F9Q-782	1870	59	2000	2001	X	X	X	X	X	X	X	X
99	99	99	99			X		X					
Laguna 1994 2001													
1.6 16V	K4M-720	1598	79	1998	2001	X	X	X	X	X		X	X
1.6 16V	K4M-724	1598	79	1998	2001	X	X	X		X		X	X
1.8	F3P-670	1783	66	1996	1998	X	X	X	X	X	X	X	X
1.8	F3P-674	1783	66	1995	1998	X	X	X	X	X	X	X	X
1.8	F3P-676	1783	66	1995	1998	X	X	X	X	X			X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
RENAULT													
Laguna 1994 2001													
1.8	F3P-678	1783	66	1995	1998	X	X	X	X	X			X
1.8	F3P-720	1794	69	1994	1998	X	X	X	X	X	X	X	X
1.8	F3P-724	1794	69	1994	1998	X	X	X	X	X		X	X
1.8 16V	F4P-760	1783	88	1998	2001	X	X	X	X	X		X	X
1.9 dCi	F9Q-718	1870	79	1999	2001	X	X	X	X	X		X	X
1.9 dTi	F9Q-710	1870	72	1998	2001	X	X	X	X	X	X	X	X
1.9 dTi	F9Q-716	1870	72	1998	2001	X	X	X	X	X		X	X
1.9 dTi	F9Q-717	1870	72	1998	2001	X	X	X	X	X			X
2.0	F3R-611	1998	84	1998	2001	X	X	X	X	X			X
2.0	F3R-722	1998	83	1994	1998	X	X	X	X	X	X	X	X
2.0	F3R-723	1998	83	1994	1998	X	X	X	X	X	X	X	X
2.0	F3R-728	1998	84	1996	2001	X	X	X	X	X	X	X	X
2.0	F3R-729	1998	84	1996	2001	X	X	X	X	X			X
2.0	F3R-768	1998	84	1998	2001	X	X	X	X	X	X		X
2.0	F3R-769	1998	84	1998	2001	X	X	X	X	X			X
2.0 16V	F4R-780	1998	102	1998	2001	X	X	X	X	X		X	X
2.0 16V	N7Q-700	1948	102	1995	1999	X	X	X	X	X	X	X	X
2.0 16V	N7Q-704	1948	102	1995	1999	X	X	X	X	X	X	X	X
2.2 D	G8T-706	2188	63	1994	1998	X	X	X	X	X	X	X	X
2.2 D	G8T-752	2188	63	1994	1998	X	X	X	X	X	X	X	X
2.2 D	G8T-790	2188	63	1994	1998	X	X	X	X	X	X	X	X
2.2 D	G8T-792	2188	63	1994	1998	X	X	X	X	X	X		X
2.2 D	G8T-794	2188	63	1994	1998	X	X	X	X	X	X	X	X
2.2 dT	G8T-760	2188	83	1996	2001	X	X	X	X	X	X	X	X
2.9 V6 24V	L7X-700	2946	143	1997	2001	X	X	X	X	X		X	X
2.9 V6 24V	L7X-701	2946	143	1997	2001	X	X	X	X	X			X
3.0 V6	Z7X-760	2963	123	1994	1997	X	X	X	X	X	X	X	X
3.0 V6	Z7X-765	2963	123	1994	1997	X	X	X	X	X		X	X
3.0 V6	Z7X-767	2963	123	1994	1997	X	X	X	X	X	X		X
Obsolete	0	0	0			X		X	X				X
Temp	0					X	X	X	X				X
Laguna II 2001													
1.6 16V	K4M-710/711	1598	81	2001	2005	X	X	X	X	X	X	X	X
1.6 16V	K4M-716			2005		X	X	X			X		X
1.6 16V	K4M-718	1598	81	2001	2005	X	X	X	X	X	X		X
1.6 16V LPG	K4M-714	1598	81	2001	2005	X	X	X	X	X	X		X
1.8 16V	F4P-772	1783	88	2001	2005	X	X	X	X	X	X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
RENAULT													
Laguna II 2001													
1.8 16V	F4P-773	1783	88	2001	2005	X	X	X	X	X		X	X
1.8 16V	F4P-774	1783	86	2001	2005	X	X	X	X	X		X	X
1.8 16V	F4P-775	1783	86	2001	2005	X	X	X	X	X		X	X
1.8 16V (85/89 KW)	F4P-770/771	1783	89	2001	2005	X	X	X	X	X		X	X
1.9 dCi 100	F9Q-690	1870	68	2002		X	X	X	X	X			X
1.9 dCi 110	F9Q-660	1870	79	2005		X	X	X		X			X
1.9 dCi 110	F9Q-751	1870	79	2001	2005	X	X	X	X	X			X
1.9 dCi 110	F9Q-752	1870	79	2001	2005	X	X	X	X	X			X
1.9 dCi 110	F9Q-754	1870	79	2001	2005	X	X	X	X	X			X
1.9 dCi 110	F9Q-755	1870	79	2001	2005	X	X	X	X	X			X
1.9 dCi 120	F9Q-670	1870	88	2005		X	X	X					X
1.9 dCi 120	F9Q-674	1870	88	2005		X	X	X					X
1.9 dCi 120	F9Q-750	1870	88	2001	2005	X	X	X	X	X		X	X
1.9 dCi 120	F9Q-758	1870	88	2002		X	X	X		X			X
2.0 16V	F4R-712	1998	102	2001	2005	X	X	X	X	X		X	X
2.0 16V	F4R-713	1998	102	2001	2005	X	X	X	X	X		X	X
2.0 16V	F4R-714	1998	103	2005		X	X	X	X	X		X	X
2.0 16V	F4R-715	1998	103	2005		X	X	X	X	X		X	X
2.0 16V IDE	F5R-700/701	1998	105	2002	2005	X	X	X	X	X		X	X
2.0 16V Turbo	F4R-764	1998	121	2002	2005	X	X	X	X	X			X
2.0 16V Turbo	F4R-765	1998	121	2002	2005	X	X	X	X	X			X
2.0 16V Turbo	F4R-786	1998	125	2005		X	X	X	X	X			X
2.0 16V Turbo	F4R-787	1998	125	2005		X	X	X	X	X			X
2.0 dCi	M9R-760			2005		X		X				X	X
2.0 dCi (EXPECTED 2005)	M9R-740			2005		X		X				X	X
2.2 dCi 16V	G9T-700	2188	107	2002	2005	X	X	X	X	X			X
2.2 dCi 16V	G9T-702	2188	107	2002	2005	X	X	X	X	X		X	X
2.2 dCi 16V	G9T-703	2188	107	2002	2005	X	X	X	X	X			X
2.2 dCi 16V	G9T-706	2188	110	2005		X	X	X	X	X			X
2.2 dCi 16V	G9T-707	2188	110	2005		X	X	X	X	X			X
2.2 dCi 16V (FAP)	G9T-600	2188	103	2005		X	X	X	X	X			X
3.0 V6 24V	L7X-731	2946	156	2001	2005	X	X	X	X	X	X	X	X
3.0 V6 24V	L7X-733	2946	156	2005		X	X	X	X	X			X
br wa all						X	X	X					
Master 1986 1998													
2.0	J5R-728 (829 730)	1995	59	1984	1998	X	X	X	X	X			X
2.0	J5R-731 (829 731)	1995	59	1984	1998	X	X	X	X	X			X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
RENAULT													
Master 1986 1998													
2.1 D	J8S-330	2068	48	1984	1998	X	X	X	X	X			X
2.2	J7T-782	2165	70	1984	1998	X	X	X	X	X			X
2.2	J7T-788	2165	70	1994	1998	X	X	X	X	X			X
2.5 D	S8U-730 (8140 612300)	2445	55	1984	1998	X	X	X	X	X			X
2.5 D	S8U-731 (8140 612300)	2445	55	1984	1998	X	X	X	X	X			X
2.5 D	S8U-742 (8140 672510)	2499	55	1984	1998	X	X	X	X	X			X
2.5 D	S8U-748	2499	55	1986	1998	X	X	X	X	X			X
2.5 TD	S9U-700 (8140 272500)	2499	59	1984	1998	X	X	X	X	X			X
2.5 TD	S9U-702 (8140 272580)	2499	59	1984	1998	X	X	X	X	X			X
2.5 TD	S9U-704 (8140 272510)	2499	59	1984	1998	X	X	X	X	X			X
2.5 TD	S9U-714	2499	59	1994	1998	X	X	X	X	X			X
2.5 TD	S9U-740	2499	59	1995	1998	X	X	X	X	X			X
Master II 1998 2003													
1.9 dCi	F9Q-772	1870	59	2001	2003	X	X	X	X	X			X
1.9 dTi	F9Q-770	1870	59	2000	2003	X	X	X	X	X			X
2.2 dCi	G9T-720	2188	66	2001	2003	X	X	X	X	X			X
2.2 dCi	G9T-722	2188	66	2001	2003	X	X	X	X	X			X
2.5 dCi	G9U-720	2463	84	2001	2003	X	X	X	X	X			X
2.5 dCi	G9U-724	2188	84	2001	2003	X	X	X	X	X			X
2.5 Turbo D	S8U-770	2499	59	1998	2001	X	X	X	X	X			X
2.5 Turbo D	S8U-772	2499	59	1998	2001	X	X	X	X	X			X
2.8 dTi	S9W-700	2799	84	1998	2003	X	X	X	X	X			X
2.8 dTi	S9W-702	2799	84	1998	2003	X	X	X	X	X			X
new type	F9Q-774	0	0			X		X	X	X			X
new type	G9T-750					X		X	X	X			X
new type	ZD 3200					X		X	X	X			X
new type	ZD 3202					X		X	X	X			X
Master II 2003													
1.9 dCi 80	F9Q-774	1870	60	2003		X	X	X	X	X			X
2.2 dCi 90	G9T-750	2188	66	2003		X	X	X	X	X			X
2.5 dCi 100	G9U-754	2463	73	2003		X	X	X	X	X			X
2.5 dCi 120	G9U-750	2463	84	2003		X	X	X	X	X			X
3.0 dCi 140	ZD3-200	2953	100	2003		X	X	X	X	X			X
3.0 dCi 140	ZD3-202	2953	100	2003		X	X	X	X	X			X
Megane 1996 2003													
1.4	E7J-626	1390	55	1998	2001	X	X	X	X	X			X
1.4	E7J-764	1390	55	1996	1999	X	X	X	X	X		X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagr.	Service Reset	Repair Times	
						Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagr.	Fuses & Relays
RENAULT												
Megane	1996	2003										
1.4 16V	K4J-714	1390	70	1999	2003	X	X	X	X	X	X	X
1.4 16V	K4J-750	1390	70	1999	2003	X	X	X	X	X	X	X
1.4 Eco	E7J-624	1390	51	1996	1999	X	X	X	X	X	X	X
1.6	K7M-703	1598	66	1996	1999	X	X	X	X	X	X	X
1.6	K7M-704	1598	54	2001	2003	X	X	X	X	X	X	X
1.6	K7M-720	1598	54	1996	1999	X	X	X	X	X	X	X
1.6	K7M-790	1598	66	1996	1999	X	X	X	X	X	X	X
1.6 (LPG)	K7M-702	1598	66	1996	1999	X	X	X	X	X	X	X
1.6 16V	K4M-700	1598	79	1999	2003	X	X	X	X	X	X	X
1.6 16V	K4M-706	1598	72	1999	2003	X	X	X	X	X	X	X
1.6 16V	K4M-708	1598	79	1999	2003	X	X	X	X	X	X	X
1.6 16V	K4M-709	1598	79	2000	2003	X	X	X	X	X	X	X
1.6 16V	K4M-701	1598	79	1999	2003	X	X	X	X	X	X	X
1.6 16V (LPG)	K4M-704	1598	79	1999	2003	X	X	X	X	X	X	X
1.6 16V (LPG)	K4M-712	1598	79	2000	2003	X	X	X	X	X	X	X
1.8 16V	F4P-720	1783	85	2000	2003	X	X	X	X	X	X	X
1.8 16V	F4P-722	1783	85	2000	2003	X	X	X	X	X	X	X
1.9 D	F8Q-620	1870	47	1996	1999	X	X	X	X	X	X	X
1.9 D	F8Q-622	1870	50	1998	2001	X	X	X	X	X	X	X
1.9 D	F8Q-624	1870	47	1996	2001	X	X	X	X	X	X	X
1.9 D	F8Q-790	1870	47	1999	2003	X	X	X	X	X	X	X
1.9 dCi	F9Q-732	1870	75	1999	2003	X	X	X	X	X	X	X
1.9 dCi	F9Q-733	1870	75	1999	2003	X	X	X	X	X	X	X
1.9 dCi	F9Q-738	1870	59	2000	2003	X	X	X	X	X	X	X
1.9 DT	F8Q-784	1870	66	1996	1997	X	X	X	X	X	X	X
1.9 DT	F8Q-786	1870	66	1996	1999	X	X	X	X	X	X	X
1.9 dTi	F9Q-730	1870	72	1999	2002	X	X	X	X	X	X	X
1.9 dTi	F9Q-731	1870	72	1998	2002	X	X	X	X	X	X	X
1.9 dTi	F9Q-734	1870	72	1998	2002	X	X	X	X	X	X	X
1.9 dTi	F9Q-736	1870	72	1998	2002	X	X	X	X	X	X	X
1.9 dTi	F9Q-744	1870	59	2001	2002	X	X	X	X	X	X	X
2.0	F3R-750	1998	84	1996	1999	X	X	X	X	X	X	X
2.0	F3R-751	1998	84	1996	1999	X	X	X	X	X	X	X
2.0	F3R-791	1995	84	1996	1999	X	X	X	X	X	X	X
2.0	F3R-796	1995	84	1996	1999	X	X	X	X	X	X	X
2.0	F3R-797	1995	84	1996	1999	X	X	X	X	X	X	X
2.0	F3R-798	1998	84	1996	1999	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
RENAULT													
Megane 1996 2003													
2.0 16V	F4R-740	1998	103	1999	2003	X	X	X	X	X	X		X
2.0 16V	F4R-741	1998	103	1999	2003	X	X	X	X		X		X
2.0 16V	F4R-746	1998	103	1999	2003	X	X	X	X		X		X
2.0 16V	F7R-710	1998	108	1996	2003	X	X	X	X	X	X	X	X
2.0 16V	F7R-714	1998	108	1998	2003	X	X	X	X	X	X	X	X
2.0 Doesn't Exist	F3R-795	0	0			X		X	X				
Megane II 2003													
1.4 16V	K4J-730	1390	72	2003		X	X	X	X	X	X	X	X
1.4 16V	K4J-732	1390	60	2003		X	X	X	X	X	X		X
1.5 dCi 110	K9K-728	1461	74	2003		X	X	X	X	X	X		X
1.5 dCi 110	K9K-729	1461	74	2003		X	X	X	X		X		X
1.5 dCi 80	K9K-722	1461	60	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-760	1598	83	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-761	1598	83	2003		X	X	X	X	X	X		X
1.6 16V	K4M-764	1598	83	2003		X	X		X		X		X
1.9 dCi 100	F9Q-808	1870	66	2003		X	X	X	X	X	X		X
1.9 dCi 120	F9Q-800	1870	86	2003		X	X	X	X	X	X	X	X
1.9 dCi 120	F9Q-814	1870	88	2004		X	X	X	X		X		X
1.9 dCi 131 FAP	F9Q-804	1870	96	2005		X		X			X		
2.0 16V	F4R-770	1998	99	2003		X	X	X	X	X	X	X	X
2.0 16V	F4R-771	1998	99	2003		X	X	X	X	X	X		X
2.0 16V obsolete	F4R-740	1998	102			X	X		X				X
2.0 16V obsolete	F4R-741	1998	102			X	X		X				X
2.0 16V Turbo	F4R-776	1998	120	2005		X	X	X	X		X	X	
2.0 16V Turbo RS	F4R-774	1998	165	2004		X	X	X	X	X	X		X
Obsolete	F4P-722	1783	88	2004		X		X					X
Megane Coupe Cabrio 1997 2003													
1.4 16V	K4J-714	1390	70	1999	2003	X	X	X	X		X		X
1.4 16V	K4J-750	1390	70	1997	2003	X	X	X	X	X	X		X
1.6	K7M-702	1598	66	1996	1999	X	X	X	X	X		X	X
1.6	K7M-703	1598	66	1996	1999	X	X	X	X	X		X	X
1.6 (Geen coupe)	K7M-720	1598	54	1996	1999	X		X	X	X		X	X
1.6 16V	K4M-700	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V	K4M-701	1598	79	1999	2003	X	X	X	X		X		X
1.6 16V	K4M-708	1598	79	1999	2003	X	X	X	X		X		X
1.6 16V	K4M-709	1598	79	1999	2003	X	X	X	X		X		X
1.9 dCi	F9Q-732	1870	75	1999	2003	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diagram	
RENAULT													
Megane Coupe Cabrio	1997	2003											
1.9 dCi	F9Q-733	1870	75	1999	2003	X	X	X	X	X		X	X
1.9 dTi	F9Q-731	1870	72	1998	2003	X	X	X	X	X		X	X
1.9 dTi	F9Q-734	1870	72	1998	2003	X	X	X	X	X		X	X
1.9 dTi	F9Q-736	1870	72	1998	2003	X	X	X	X	X		X	X
2.0	F3R-750	1998	84	1996	1999	X	X	X	X	X		X	X
2.0	F3R-751	1998	84	1996	1999	X	X	X	X	X		X	X
2.0	F3R-791	1998	84	1996	1999	X	X	X	X	X		X	X
2.0	F3R-796	1998	84	1996	1999	X	X	X	X	X	X	X	X
2.0	F3R-797	1998	84	1996	1999	X	X	X	X	X		X	X
2.0	F3R-798	1998	84	1996	1999	X	X	X	X	X		X	X
2.0 16V	F4R-746	1998	103	1999	2003	X	X	X	X	X		X	X
2.0 16V	F7R-710	1998	108	1996	1999	X	X	X	X	X	X	X	X
2.0 16V	F7R-714	1998	108	1996	1999	X	X	X	X	X		X	X
2.0 16V IDE	F5R-740	1998	103	1999	2003	X	X	X	X	X		X	X
temp cabrio						X		X					
Megane Scenic	1996	2003											
1.4	E7J-764	1390	55	1996	1999	X	X	X	X	X		X	X
1.4 16V	K4J-714	1390	70	2000	2003	X	X	X	X	X		X	X
1.4 16V	K4J-750	1390	70	1999	2003	X	X	X	X	X		X	X
1.6	K7M-703	1598	66	1996	2001	X	X	X	X	X	X	X	X
1.6	K7M-720	1598	54	1996	1999	X	X	X	X	X	X	X	X
1.6 (LPG)	K7M-702	1598	66	1996	1999	X	X	X	X	X		X	X
1.6 16V	K4M-700	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V	K4M-701	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V	K4M-706	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V	K4M-707	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V	K4M-708	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V	K4M-709	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V	K4M-776	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V (LPG)	K4M-704	1598	79	1999	2003	X	X	X	X	X		X	X
1.6 16V (LPG)	K4M-712	1598	79	1999	2003	X	X	X	X	X		X	X
1.8 16V	F4P-720	1783	85	2000	2003	X	X	X	X	X		X	X
1.8 16V	F4P-722	1783	85	2000	2003	X	X	X	X	X		X	X
1.9 D	F8Q-788	1870	47	1999	2003	X	X	X	X	X	X	X	X
1.9 D	F8Q-790	1870	47	1999	2003	X	X	X	X	X		X	X
1.9 dCi	F9Q-732	1870	75	1999	2003	X	X	X	X	X		X	X
1.9 dCi	F9Q-733	1870	75	1999	2003	X	X	X	X	X		X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
RENAULT													
Megane Scenic	1996	2003											
1.9 dCi	F9Q-738	1870	59	2000	2003	X	X	X	X		X		X
1.9 dCi	F9Q-746	1870	75	1999	2003	X	X	X	X		X		X
1.9 DT	F8Q-784	1870	66	1996	1999	X	X	X	X	X	X	X	X
1.9 DT	F8Q-786	1870	66	1996	1999	X	X	X	X	X	X	X	X
1.9 dTi	F9Q-730	1870	72	1997	1999	X	X	X	X	X		X	X
1.9 dTi	F9Q-731	1870	72	1999	2003	X	X	X	X	X		X	X
1.9 dTi	F9Q-734	1870	72	1997	1999	X	X	X	X	X		X	X
1.9 dTi	F9Q-736	1870	72	1999	2003	X	X	X	X	X		X	X
1.9 dTi	F9Q-744	1870	59	2001	2003	X	X	X	X		X		X
2.0	F3R-750	1998	84	1996	1999	X	X	X	X	X	X	X	X
2.0	F3R-751	1998	84	1996	1999	X	X	X	X	X		X	X
2.0	F3R-791	1998	84	1996	1999	X	X	X	X	X	X	X	X
2.0	F3R-796	1998	84	1996	1999	X	X	X	X	X	X	X	X
2.0	F3R-797	1998	84	1996	1999	X	X	X	X		X		X
2.0	F3R-798	1998	84	1996	1999	X	X	X	X	X	X	X	X
2.0 16V	F4R-740	1998	103	1999	2003	X	X	X	X	X		X	X
2.0 16V	F4R-741	1998	103	1999	2003	X	X	X	X	X			X
2.0 16V	F4R-746	1998	103	2002	2003	X	X	X	X		X		X
2.0 16V	F4R-747	1998	103	1999	2003	X	X	X	X		X		X
Mag weg	0	0	0			X		X	X	X		X	
RX4 1.9 dCi	F9Q-740	1870	75	2000	2003	X	X	X	X	X		X	X
RX4 1.9 dCi	F9Q-748	1870	75	1999	2003	X	X	X	X		X		X
RX4 1.9 dCi	F9Q-796	1870	75	1999	2003	X	X		X				X
RX4 2.0 16V	F4R-744	1998	103	2000	2003	X	X	X	X	X		X	X
Modus 2004													
1.2 16V (48/55 kW)	D4F-740	1149	48	2004		X	X	X	X		X		X
1.4 16V	K4J-770	1390	72	2004		X	X	X	X		X		X
1.5 dCi 105	K9K-764	1461	78	2005		X	X	X	X				X
1.5 dCi 65	K9K-752	1461	48	2004	2006	X	X	X	X		X		X
1.5 dCi 70	K9K-762	1461	50	2005		X	X	X	X		X		X
1.5 dCi 80	K9K-750	1461	60	2004	2006	X	X	X	X		X		X
1.5 dCi 85	K9K-760	1461	63	2005		X	X	X	X		X		X
1.6 16V	K4M-790	1598	82	2004		X	X	X	X		X		X
1.6 16V	K4M-791	1598	82	2004		X	X	X	X		X		X
1.6 16V	K4M-794	1598	82	2004		X	X	X	X		X		X
Safrane 1992 2001													
2.0	J7R-732/733	1995	79	1992	1997	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
RENAULT													
Safrane 1992 2001													
2.0 12V	J7R-734/735	1995	99	1992	1997	X	X	X	X	X	X	X	X
2.0 12V	J7R-738/739	1995	97	1992	1997	X	X	X	X	X	X	X	X
2.0 16V	N7Q-710/711	1948	102	1997	2001	X	X	X	X	X	X	X	X
2.1 dT	J8S-760	2068	65	1992	1997	X	X	X	X	X	X	X	X
2.2	J7T-762	2165	81	1992	1997	X	X	X	X	X	X	X	X
2.2 12V	J7T-760/761	2165	103	1992	1997	X	X	X	X	X	X	X	X
2.2 dT	G8T-740	2188	83	1997	2001	X	X	X	X	X	X	X	X
2.4 20V	N7U-700/701	2435	121	1997	2001	X	X	X	X	X	X	X	X
2.5 dT	S8U-762/763	2499	83	1992	1997	X	X	X	X	X	X	X	X
2.9 V6 24V	L7X-713	2946	140	1997	2001	X	X	X	X	X	X	X	X
3.0 V6	Z7X-721	2963	123	1992	1997	X	X	X	X	X	X	X	X
3.0 V6	Z7X-722/723	2963	123	1992	1997	X	X	X	X	X	X	X	X
3.0 V6	Z7X-744	2963	123	1997	2001	X	X	X	X	X	X	X	X
3.0 V6	Z7X-753	2963	123	1995	1997	X	X	X	X	X	X	X	X
3.0 V6	Z7X-755	2963	125	1997	2001	X	X	X	X	X	X	X	X
3.0 V6 Biturbo	Z7X-726	2963	193	1994	1997	X	X	X	X	X	X	X	X
Scenic II 2003													
1.4 16V	K4J-730	1390	72	2003		X	X	X	X	X	X	X	X
1.4 16V	K4J-740	1390		2003		X	X	X	X	X	X	X	X
1.5 dCi	K9K-724	1461				X	X	X	X	X	X	X	X
1.5 dCi	K9K-732	1461	0			X	X	X	X	X	X	X	X
1.5 dCi 110	K9K-728	1461	74	2003		X	X	X	X	X	X	X	X
1.5 dCi 110	K9K-729	1461	74	2003		X	X	X	X	X	X	X	X
1.5 dCi 80	K9K-722	1461	59	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-761	1598	83	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-782	1598	83	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-812	1598	83	2003		X	X	X	X	X	X	X	X
1.6 16V	K4M-813	1598		2003		X	X	X	X	X	X	X	X
1.9 dCi	F9Q-804	1870	88	2003		X	X	X	X	X	X	X	X
1.9 dCi	F9Q-812	1870	88	2003		X	X	X	X	X	X	X	X
1.9 dCi	F9Q-814	1870		2003		X	X	X	X	X	X	X	X
2.0 16V	F4R-770	1998	99	2003		X	X	X	X	X	X	X	X
2.0 16V	F4R-771	1998	99	2003		X	X	X	X	X	X	X	X
2.0 16V Turbo	F4R-776	1998	115	2004		X	X	X	X	X	X	X	X
2.0 dCi	M9R-700	1995	105	2005		X	X	X	X	X	X	X	X
Sport Spider 1996													
2.0	F7R?								X				

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir. Diagram	Repair Times	Fuses & Relays
RENAULT																		
Traffic 1986 2000																		
Pxx1	841 J 705	1647	49	1986	1990	X	X	X	X	X								X
Pxx2	829 E 720	1995	59	1986	1990	X	X	X	X	X								X
Pxx2	J5R-726	1995	59	1986	1990	X	X	X	X	X							X	X
Pxx2	J5R-726	1995	59	1991	1995	X	X	X	X	X							X	X
Pxx3	852 C 720	2068	43	1986	1990	X	X	X	X	X				X			X	X
Pxx3	852 C 720	2068	43	1991	1995	X	X	X	X	X				X			X	X
Pxx4	8140 61 240 (S8U-722)	2445	55	1986	1990	X	X	X	X	X							X	X
Pxx8	F1N-722	1721	50	1986	1990	X	X	X	X	X							X	X
Pxx8	F1N-722	1721	50	1991	1995	X	X	X	X	X							X	X
PxxF	J8S-620	2068	47	1991	1995	X	X	X	X	X				X				X
PxxF	J8S-620	2068	47	1996	2000	X	X	X	X	X				X			X	X
Txx0	847 D 700	1397	35	1986	1990	X	X	X	X	X				X				X
Txx0	C1J-700	1397	35	1991	1995	X	X	X	X	X				X			X	X
Txx1	A1M P 707	1647	49	1986	1990	X	X	X	X	X								X
Txx1 Automatic	A1M Q 708	1647	49	1986	1990	X	X	X	X	X								X
Txx2	J5R-716	1995	59	1986	1990	X	X	X	X	X							X	X
Txx2	J5R-716	1995	59	1991	1995	X	X	X	X	X								X
Txx3	852 D 750	2068	43	1986	1990	X	X	X	X	X				X				X
Txx3	852 D 750	2068	43	1991	1995	X	X	X	X	X				X			X	X
Txx4	8140 672 500 (S8U-750)	2445	55	1986	1990	X	X	X	X	X							X	X
Txx4	8140 672 500 (S8U-750)	2499	55	1991	1995	X	X	X	X	X							X	X
Txx8	F1N-720	1721	50	1986	1990	X	X	X	X	X								X
Txx8	F1N-724	1721	50	1991	1995	X	X	X	X	X								X
TxxA	J7T-780	2165	70	1986	1990	X	X	X	X	X								X
TxxA	J7T-780	2165	70	1991	1995	X	X	X	X	X							X	X
TxxB	8140 672 580 (S8U-752)	2445	55	1986	1990	X	X	X	X	X				X				X
TxxB	8140 672 580 (S8U-752)	2499	50	1991	1995	X	X	X	X	X				X			X	X
TxxE	J7T-600	2165	70	1991	1995	X	X	X	X	X								X
TxxE	J7T-600	2165	74	1996	2000	X	X	X	X	X	X						X	
TxxF	J8S-758	2068	47	1991	1995	X	X	X	X	X				X			X	X
TxxF	J8S-758	2068	47	1996	2000	X	X	X	X	X				X			X	
TxxG	S8U-758	2449	55	1996	2000	X	X	X	X	X				X			X	
TxxG	S8U-758	2499	55	1991	1995	X	X	X	X	X				X			X	X
TxxK	J8S-622	2068	48	1996	2000	X	X	X	X	X				X				
Vxx???? 1.9 D	F8Q-600	1870	47	1998	2000	X	X		X									
Vxx1	A1M P 707	1647	49	1986	1990	X	X	X	X	X								X
Vxx2	J5R-716	1995	59	1986	1990	X	X	X	X	X								X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
RENAULT													
Traffic 1986 2000													
Vxx2	J5R-716	1995	59	1991	1995	X	X	X	X	X			X
Vxx3	852 D 750	2068	43	1986	1990	X	X	X	X	X			X
Vxx3	852 D 750	2068	43	1991	1995	X	X	X	X	X			X
Vxx4	8140 672 500 (S8U-750)	2445	55	1986	1990	X	X	X	X	X			X
Vxx4	8140 672 500 (S8U-750)	2499	55	1991	1995	X	X	X	X	X			X
VxxA	J7T-780	2165	70	1986	1990	X	X	X	X	X			X
VxxA	J7T-780	2165	70	1991	1995	X	X	X	X	X			X
VxxB	8140 672 580 (S8U-752)	2445	55	1986	1990	X	X	X	X	X			X
VxxB	8140 672 580 (S8U-752)	2499	55	1991	1995	X	X	X	X	X			X
VxxE	J7T-600	2165	74	1991	1995	X	X	X	X	X			X
VxxE	J7T-600	2165	74	1996	2000	X	X	X	X	X			
VxxG	S8U-758	2449	55	1996	2000	X	X	X	X	X			
VxxG	S8U-758	2499	55	1991	1995	X	X	X	X	X			X
Traffic II 2001													
1.9 dCi 100	F9Q-760	1870	74	2001		X	X	X	X	X			X
1.9 dCi 80	F9Q-762	1870	59	2001		X	X	X	X	X			X
2.0 16V	F4R-720	1998	88	2001		X	X	X	X	X			X
2.5 dCi 140	G9U-730	2464	99	2002		X	X	X	X	X			X
Twingo 1993													
1.0 16V Not for Europe	D4D-712	999	50	2001		X	X	X	X	X			X
1.0 8V Not for Europe	D7D-740	999	43	2001		X	X	X	X	X			X
1.2	C3G-700	1238	40	1992	1998	X	X	X	X	X		X	X
1.2	C3G-702	1238	40	1994	1997	X	X	X	X	X		X	X
1.2 16V	D4F-700	1149	55	2000		X	X	X	X	X		X	X
1.2 16V	D4F-702	1149	55	2000		X	X	X	X	X		X	X
1.2 16V Quikshift 5	D4F-708	1149	55	2001		X	X	X	X	X		X	X
1.2 8V	D7F-700	1149	44	1996	2001	X	X	X	X	X		X	X
1.2 8V	D7F-701	1149	44	1996	2001	X	X	X	X	X		X	X
1.2 8V	D7F-702	1149	43	1998	2001	X	X	X	X	X		X	X
1.2 8V	D7F-703	1149	43	2001		X	X	X	X	X		X	X
1.2 8V	D7F-706	1149	43	1998		X	X	X	X	X		X	X
1.2 8V	D7F-720	1149	44	1996	1998	X	X	X	X	X		X	X
1.2 8V LPG	D7F-704	1149	44	1996	1998	X		X	X	X		X	X
1.2 Easy	C3G-700	1238	40	1994	1998	X	X	X	X	X		X	X
9999	8					X		X	X				
Vel Satis 2002													
2.0 16V Turbo	F4R-762	1998	122	2002		X	X	X	X	X		X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
RENAULT													
Vel Satis 2002													
2.0 16V Turbo	F4R-763	1998	122	2002		X	X	X	X	X	X	X	X
2.0 16V Turbo	F4R-766	1998	122	2002		X	X	X	X	X	X	X	X
2.0 16V Turbo	F4R-767	1998	122	2002		X	X	X	X	X	X	X	X
2.2 dCi 16V	G9T-600	2188	102	2002		X	X		X	X	X	X	X
2.2 dCi 16V	G9T-700	2188	102	2002		X	X		X	X	X	X	X
2.2 dCi 16V	G9T-702	2188	112	2002		X	X	X	X	X	X	X	X
2.2 dCi 16V	G9T-703	2188	112	2002		X	X	X	X	X	X	X	X
3.0 dCi V6 24V	P9X-701	2958	130	2002		X	X	X	X	X	X	X	X
3.5 V6 24V	V4Y-701	3498	177	2002		X	X	X	X	X	X	X	X
3.5 V6 24V	V4Y-711	3498	177	2002		X	X	X	X	X	X	X	X
ROLLS ROYCE													
Limousine													
6.8 V8	L 4101 T	6749	224					X					
Silver Dawn													
6.8 V8	L 410 MN	6749	182					X					
Silver Spur													
6.8 V8	L 4101 T	6749	224					X					
ROVER													
100 / Metro 1990 1998													
1.1 MPi	K8-1.1	1119		1996	1998	X	X	X	X	X	X		X
1.4 MPi	K8-1.4	1396	55	1996	1998	X	X	X	X	X	X		X
111	K8-1.1	1120	44	1990	1996	X	X	X	X	X	X	X	X
111 C, L, S, Cabriolet	K8-1.1	1120	44	1990	1996	X	X	X	X	X	X	X	X
111 MPI	K8-1.1	1120	44	1996	1998	X	X	X	X	X	X		X
111 SPI	K8-1.1	1120	44	1992	1996	X	X		X	X	X		X
114 D	K9A (TUD3)	1360	38	1992	1994	X	X	X	X	X	X	X	X
114 Gta / Gti-16V	K16-1.4	1396	66	1990	1996	X	X	X	X	X	X	X	X
114 Gta, Gtr, Windsor	K8-1.4	1396	55	1990	1992	X	X	X	X	X	X	X	X
114 GTi-16V	K16-1.4	1396	76	1992	1996	X	X	X	X	X	X	X	X
114 i	K8-1.4	1396	55	1990	1996	X	X	X	X	X	X	X	X
115 D	VJY (TUD5)	1527	40	1995	1998	X	X	X	X	X	X	X	X
200 1984 1990													
213 S, SE	EV 2	1342	54	1984	1990	X	X	X	X	X	X		
216 S, SE	16 HD 94	1598	63	1985	1989	X	X	X	X	X	X		
216 S, SX	16 HE 58	1598	63	1989	1990	X	X	X	X	X	X		
216 SE, Vitesse EFi	16 H (S)	1598	75	1985	1989	X	X	X	X	X	X		

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
ROVER													
200 1995 1999													
200 Vi	18K4K	1796	107	1995	1999	X	X	X	X	X	X	X	X
211	11K8	1119	45	1998	1999	X	X	X	X	X	X	X	X
214 8V	14K8/K4	1396	55	1995	1999	X	X	X	X	X	X	X	X
214 Si 16V	14K4F	1396	76	1995	1999	X	X	X	X	X	X	X	X
216 Si 16V	16K4F	1589	82	1995	1999	X	X	X	X	X	X	X	X
218 Si 16V	18K4K	1796	90	1997	1999	X	X	X	X	X	X	X	X
220 D	20T2R	1994	63	1995	1999	X	X	X	X	X	X	X	X
220 SDi	20T2N	1994	77	1995	1999	X	X	X	X	X	X	X	X
BRM	18K4K	1796	107	1995	1999	X	X	X	X	X	X	X	X
mag weg	14K16 DOHC	1396	86	1995	1999	X	X	X	X	X	X	X	X
mag weg	16K16 DOHC	1589	82	1995	1999	X	X	X	X	X	X	X	X
mag weg	20T2N	1994	79	1996	1999	X	X	X	X	X	X	X	X
mag weg	20T2R	1994	79	1996	1999	X	X	X	X	X	X	X	X
mag weg	20T4G	1994	147	1995	1996	X	X	X	X	X	X	X	X
mag weg	D16A8	1590	90	1995	1999	X	X	X	X	X	X	X	X
mag weg	D16B2	1590	86	1997	1999	X	X	X	X	X	X	X	X
200 / 400 1989 1995													
214i / 414i	14K2	1397	55	1989	1995	X	X	X	X	X	X	X	X
214i / 414i	14K4	1396	68	1990	1995	X	X	X	X	X	X	X	X
214i / 414i	14K4F	1397	76	1992	1995	X	X	X	X	X	X	X	X
214S / 414S	14K2	1397	56	1989	1992	X	X	X	X	X	X	X	X
216 / 416 DOHC	D16A8	1590	90	1992	1995	X	X	X	X	X	X	X	X
216 / 416 SOHC	D16A6	1590	82	1990	1995	X	X	X	X	X	X	X	X
216 Coupé, Cabrio, Tourer	16K16	1589	86	1992	1995	X	X	X	X	X	X	X	X
216i / 416i DOHC	D16A9	1590	96	1989	1995	X	X	X	X	X	X	X	X
216i / 416i DOHC Aut.	D16Z4	1590	91	1989	1995	X	X	X	X	X	X	X	X
216i / 416i SOHC	D16A7	1590	85	1990	1995	X	X	X	X	X	X	X	X
216i / 416i SOHC Aut.	D16Z2	1590	82	1990	1995	X	X	X	X	X	X	X	X
218 / 418 SD	XUD9 (D9A)	1905	49	1993	1995	X	X	X	X	X	X	X	X
218 TD / 418 TD	XUD7TE (A8A)	1769	66	1991	1995	X	X	X	X	X	X	X	X
218 VVC Coupé, Cabrio, Tourer	18K16	1796	87	1992	1995	X	X	X	X	X	X	X	X
220 Coupe Turbo	20T4 GG23/24	1994	147	1992	1995	X	X	X	X	X	X	X	X
220 GTi	20M4F	1994	103	1991	1995	X	X	X	X	X	X	X	X
220i / 420i	20T4H	1994	100	1992	1995	X	X	X	X	X	X	X	X
25 1999 2004													
1.1 16V	11K4F	1119	55	2002	2004	X	X	X	X	X	X	X	X
1.4 16V	14K4M	1396	62	1999	2004	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance		Techn. Drawings		Motor Manag.		Wiring Diagram		Service Reset		Repair Times	
						Identification	Adjustment	Lubricants		ABS		Engine		Air Cond.	Wir. Diag.	Fuses & Relays	
ROVER																	
25 1999 2004																	
1.4 16V +	14K4F	1396	76	1999	2004	X	X	X	X	X	X	X					X
1.6 16V	16K4F	1588	80	1999	2004	X	X	X	X	X	X	X					X
1.8 16V	18K4F	1796	86	1999	2004	X	X	X	X	X	X	X					X
1.8 16V VVC	18K4K	1796	107	1999	2004	X	X	X	X	X	X	X					X
2.0 iDT	20T2N	1994	74	1999	2004	X	X	X	X	X	X	X					X
2.0 iDT	20T2N	1994	83	2002	2004	X	X	X	X	X	X	X					X
400 1995 1999																	
414 i, Si 16V	14K4F	1396	76	1995	1999	X	X	X	X	X	X	X					X
416 Si	D16Y3	1590	83	1995	1997	X	X	X	X	X							X
416 Si 16V	16K4F	1589	82	1995	1999	X	X	X	X	X	X	X					X
416 Si 16V	D16B2	1590	86	1997	1999	X	X	X	X	X							X
420 D	20T2R	1994	63	1996	1999	X	X	X	X	X							X
420 SDi, Di	20T2N	1994	77	1996	1999	X	X	X	X	X							X
420 Si	20T4H	1994	100	1995	1999	X	X	X	X	X	X	X			X		X
45 1999 2005																	
1.4 16V	14K4F	1396	76	2001	2005	X	X	X	X	X	X	X					X
1.6 16V	16K4F	1588	80	2001	2005	X	X	X	X	X	X	X					X
1.8 16V	18K4F	1796	86	2001	2005	X	X	X	X	X	X	X					X
2.0 iDT 100	20T2N	1994	74	2001	2005	X	X	X	X	X	X	X					X
2.0 iDT 113	20T2	1994	83	2001	2005	X	X	X	X	X	X	X					X
2.0 V6	20K4F	1997	110	2001	2005	X	X		X		X	X					X
600 1993 1999																	
618	F18A3	1850	85	1996	1999	X	X	X	X	X	X	X					X
620 Di	20T2N	1994	77	1995	1999	X	X	X	X	X							X
620 i	F20-Z2	1997	85	1993	1997	X	X	X	X	X	X	X	X				X
620 Si,SLi,GSi	F20-Z1	1997	96	1993	1999	X	X	X	X	X	X	X	X				X
620 Ti	20T4G	1994	145	1994	1999	X	X	X	X	X		X	X				X
623 i	H23A3	2259	116	1993	1999	X	X	X	X	X		X	X				X
75 1998 2005																	
1.8	18K4F	1796	88	1998	2005	X	X	X	X	X			X	X		X	X
1.8 T	18K4	1976	110	2002	2005	X	X		X	X				X			X
2.0 CDT	204D2 (M47R)	1950	85	1998	2005	X	X	X	X	X			X	X		X	X
2.0 V6	20K4F	1997	110	1998	2005	X	X	X	X	X			X	X		X	X
2.5 V6	25K4F	2497	130	1998	2005	X	X	X	X	X			X	X		X	X
75 obsolete 1998 2005																	
1.8i	K1.8	1796	88	1998													
2.0 CDT	M47R	1950	85	1998													

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	
ROVER													
75 obsolete	1998	2005											
2.0i V6	KV6-2.0	1997	110	1998									
2.5i V6	KV6-2.5	2497	130	1998									
800	1986	1998											
820	20 H	1994	74	1990	1992	X	X	X	X		X		
820 E	20 HD	1996	88	1986	1990	X	X	X	X	X	X		
820 i	20T4H	1994	100	1992	1998	X	X	X	X	X	X	X	X
820 i, Si	20 HD-M16	1994	103	1986	1992	X	X	X	X	X	X		
820 i, Si 16V	20 HD	1994	102	1991	1991	X	X	X	X		X		
820 Ti	20T4G	1994	147	1994	1998	X	X	X	X	X	X		X
820 Ti 16V	20T4G	1994	132	1992	1998	X	X	X	X	X	X	X	X
820 Turbo	20M4G	1994	132	1991	1991	X	X	X	X	X	X		
825 D	425 SLi ER	2498	89	1996	1998	X	X	X	X		X	X	X
825 D, SD	4924 SLI RR	2499	87	1992	1998	X	X	X	X		X		X
825 i	C25A	2494	127	1986	1990	X	X	X	X		X	X	
825 Si, Sterling V6 24V	25K4F	2497	127	1996	1998	X	X	X	X	X	X	X	X
825 TD	9424 SHI	2498	96	1990	1992	X	X	X	X		X		
827 i V6	C27A1	2675	124	1991	1991	X	X	X	X	X	X		
827 i, Si V6	C27A1	2675	130	1988	1992	X	X	X	X		X		
827 Si V6 24V	C27A1	2675	124	1992	1998	X	X	X	X	X	X	X	
CityRover	2003	2005											
1.4	475	1405	63	2003	2005	X	X	X	X		X		
Maestro	1983	1995											
1.3	12HC32,36	1275	50	1983	1989	X	X	X	X		X		X
1.3	12HC35	1275	50	1983	1989	X	X	X	X		X		X
1.3	12HC47,34	1275	50	1983	1989	X	X	X	X		X		X
1.3	12HC52,53	1275	50	1984	1989	X	X	X	X		X		X
1.3	12HE16	1275	50	1983	1989	X	X	X	X		X		X
1.3	12HE19	1275	50	1984	1989	X	X	X	X		X		X
1.3	12HE43	1275	47	1988	1993	X	X	X	X		X		X
1.3	12HE76,77	1275	51	1988	1993	X	X	X	X		X		X
1.3	12HE78,94	1275	51	1988	1993	X	X	X	X		X		X
1.3	12HE79	1275	47	1988	1992	X	X	X	X		X		X
1.3 Cat	12HF44,45	1275	49	1990	1993	X	X	X	X		X		X
1.3 HLE, Special, Magic	12H	1275	46	1983	1991	X	X		X				X
1.3 L, LS	12H	1275	49	1983	1989	X	X	X	X		X		X
1.6	16HE54,55	1598	63	1988	1993	X	X	X	X		X		X
1.6	16HE56/57	1598	63	1988	1993	X	X	X	X		X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diagram	
ROVER													
Maestro 1983 1995													
1.6 L, HLS	16H (R)	1598	60	1983	1984	X	X	X	X				X
1.6 L, HLS, Vandenplas, Mayfair	16HC37,38	1598	63	1983	1988	X	X	X	X	X			X
1.6 L, HLS, Vandenplas, Mayfair	16HC55,56	1598	63	1983	1988	X	X	X	X	X			X
1.6 L, HLS, Vandenplas, Mayfair	16HC60/62	1598	63	1983	1988	X	X	X	X	X			X
1.6 L, HLS, Vandenplas, Mayfair	16HD73	1598	63	1983	1988	X	X	X	X	X			X
1.6 L, HLS, Vandenplas, Mayfair	16HE04,05	1598	63	1983	1988	X	X	X	X	X			X
1.6 L, HLS, Vandenplas, Mayfair	16HE06,07	1598	63	1983	1988	X	X	X	X	X			X
1.6 L, HLS, Vandenplas, Mayfair	16HE08	1598	63	1983	1988	X	X	X	X	X			X
1.6 MG	16H (R)	1598	63	1983	1984	X	X	X	X				X
1.6 MG	16H (S)	1598	72	1983	1985	X	X	X	X				X
2.0 D	MDi	1994	44	1990	1992	X	X	X	X				X
2.0 D Turbo	MDi	1994	60	1992	1995	X	X	X	X				X
2.0 MG Efi	20 HB (O)	1994	83	1984	1989	X	X	X	X	X			X
2.0i	20HE99	1994	85	1989	1993	X	X	X	X				X
Turbo	20H	1994	112	1989	1991	X	X	X	X				X
Metro 1980 1990													
1.0	A PLUS	998	33	1980	1985	X		X	X	X			
1.0 HLE, Surf, Special	99 HA+	998	34	1981	1987	X		X	X	X			
1.0 L	99 H	998	33	1981	1986	X		X	X	X			
1.0 Saloons & Vans	99HB87P	998	34	1986	1988	X	X	X	X	X			
1.0 Saloons & Vans	99HB88P	998	34	1986	1988	X	X	X	X	X			
1.0 Saloons & Vans	99HB89P	998	34	1986	1988	X	X	X	X	X			
1.0 Saloons & Vans	99HB90P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HB91P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HB92P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HB93P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HB95P	998	34	1986	1988	X	X	X	X	X			
1.0 Saloons & Vans	99HB96P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HB97P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HB98P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HB99P	998	34	1986	1986	X	X	X	X	X			
1.0 Saloons & Vans	99HD27,29	998	34	1987	1989	X	X	X	X	X			
1.0 Saloons & Vans	99HD27P	998	34	1987	1989	X	X	X	X	X			
1.0 Saloons & Vans	99HD28P	998	34	1987	1989	X	X	X	X	X			
1.0 Saloons & Vans	99HD29P	998	34	1987	1989	X	X	X	X	X			
1.0 Saloons & Vans	99HD30,31	998	34	1987	1989	X	X	X	X	X			
1.0 Saloons & Vans	99HD30,31P	998	34	1986	1988	X	X	X	X	X			

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
ROVER													
Metro 1980 1990													
1.0 Saloons & Vans	99HD32,33	998	34	1989	1989	X	X	X	X	X	X		
1.0 Saloons & Vans	99HD32P	998	34	1987	1988	X	X	X	X	X	X		
1.0 Saloons & Vans	99HD33P	998	34	1987	1988	X	X	X	X	X	X		
1.0 Saloons & Vans	99HD34P	998	34	1987	1988	X	X	X	X	X	X		
1.0 Saloons & Vans	99HD35P	998	34	1987	1988	X	X	X	X	X	X		
1.0 Saloons & Vans	99HE35,67	998	34	1989	1989	X	X	X	X	X	X		
1.0 Saloons & Vans	99HE38,39	998	34	1989	1989	X	X	X	X	X	X		
1.0 Saloons & Vans	99HE68,69	998	34	1989	1989	X	X	X	X	X	X		
1.0 Saloons & Vans	99HE70,76	998	34	1989	1989	X	X	X	X	X	X		
1.0 Saloons & Vans	99HE94	998	34	1989	1989	X	X	X	X	X	X		
1.3 (CH)	12HC12AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 (CH)	12HC13AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 L,LS,Gta,GS,Sport	12 HF	1275	54	1989	1990	X			X	X	X		
1.3 LS, Magic, Autom.	12 HA	1275	46	1987	1990	X			X	X	X		
1.3 MG Turbo	12HC16AA	1275	68	1983	1989	X	X	X	X	X	X		
1.3 MG Turbo	12HD26	1275	68	1983	1989	X	X	X	X	X	X		
1.3 MG Turbo	12HD26AA	1275	68	1983	1989	X	X	X	X	X	X		
1.3 MG, Vanden Plas	12HC14AA	1275	53	1982	1989	X	X	X	X	X	X		
1.3 MG, Vanden Plas	12HC15	1275	53	1982	1989	X	X	X	X	X	X		
1.3 MG, Vanden Plas	12HD17,24	1275	53	1982	1989	X	X	X	X	X	X		
1.3 MG, Vanden Plas	12HD17AA	1275	53	1982	1989	X	X	X	X	X	X		
1.3 MG, Vanden Plas	12HD25,24	1275	53	1982	1989	X	X	X	X	X	X		
1.3 S, HLS, LS, Vandenplas, Autom.	12 HA+	1275	47	1981	1987	X			X	X	X		
1.3 Saloons	12HC01AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HC02AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HC03AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HC04AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HC05AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HC06AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HC07AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HC08AA	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HD09,10	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HD09AA	1275	38	1987	1988	X	X	X	X	X	X		
1.3 Saloons	12HD10AA	1275	38	1987	1988	X	X	X	X	X	X		
1.3 Saloons	12HD11,12	1275	38	1986	1986	X	X	X	X	X	X		
1.3 Saloons	12HD11AA	1275	38	1987	1988	X	X	X	X	X	X		
1.3 Saloons	12HD12AA	1275	38	1987	1988	X	X	X	X	X	X		

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diagram	
ROVER													
Metro 1980 1990													
1.3 Saloons	12HD13,21	1275	38	1986	1986	X	X	X	X	X			
1.3 Saloons	12HD13AA	1275	38	1987	1988	X	X	X	X	X			
1.3 Saloons	12HD21AA	1275	38	1987	1988	X	X	X	X	X			
1.3 Saloons	12HD22AA	1275	38	1987	1988	X	X	X	X	X			
1.3 Saloons	12HE25	1275	38	1989	1989	X	X	X	X	X			
1.3 Saloons & Vanden Plas A/T	12HC11AA	1275	38	1986	1986	X	X	X	X	X			
1.3 Saloons & Vanden Plas A/T	12HD23	1275	38	1986	1986	X	X	X	X	X			
1.3 Saloons & Vanden Plas A/T	12HD23AA	1275	38	1986	1986	X	X	X	X	X			
1.3 Saloons & Vans	12HC17AA	1275	38	1986	1989	X	X	X	X	X			
1.3 Saloons & Vans	12HC18AA	1275	38	1986	1989	X	X	X	X	X			
1.3 Saloons & Vans	12HC19AA	1275	38	1986	1989	X	X	X	X	X			
1.3 Saloons & Vans	12HD18	1275	38	1986	1989	X	X	X	X	X			
1.3 Saloons & Vans	12HD18AA	1275	38	1986	1989	X	X	X	X	X			
1.3 Saloons A/T	12HE25	1275	38	1989	1989	X	X	X	X	X			
1.3 Vans	12HC09AA	1275	38	1986	1986	X	X	X	X	X			
1.3 Vans	12HC10AA	1275	38	1986	1986	X	X	X	X	X			
1.3 Vans	12HD14,15	1275	38	1987	1989	X	X	X	X	X			
1.3 Vans	12HD14AA	1275	38	1987	1989	X	X	X	X	X			
1.3 Vans	12HD15AA	1275	38	1987	1989	X	X	X	X	X			
1.3 Vans	12HD19,20	1275	38	1987	1989	X	X	X	X	X			
1.3 Vans	12HD19AA	1275	38	1987	1989	X	X	X	X	X			
1.3 Vans	12HD20AA	1275	38	1987	1989	X	X	X	X	X			
1.3 Vans	12HE41,42	1275	38	1987	1989	X	X	X	X	X			
MGF obsolete 1995 2001													
1.8 MPi	1.8i K-series	1796	88	1995					X	X			
1.8 VVC	1.8i VVC K-series	1796	107	1995					X				
Mini 1983 2000													
1.3 Cat	12A2BG03	1275	37	1992	1994	X	X	X	X	X			X
1.3 Cat	12A2BG05	1275	37	1992	1994	X	X	X	X	X			X
1.3 Cooper/Cabriolet	12A2EF77	1275	46	1991	2000	X	X	X	X	X			X
1.3 MPi	12A2LK70	1275	47	1996	2000	X	X	X	X	X			X
1.3i	12A2EK71	1275	47	1996	2000	X	X	X	X	X			X
1.3i	12A2EK72	1275	47	1996	2000	X	X	X	X	X			X
1.3i Cat	12A2DF75	1275	39	1991	1996	X	X	X	X	X			X
1.3i Cat	12A2DF76	1275	39	1991	1996	X	X	X	X	X			X
1.3i Cat	12A2DF77	1275	39	1991	1996	X	X	X	X	X			X
1000	99H	998	31	1983	1989	X	X	X	X	X			

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
ROVER													
Mini 1983 2000													
1000	99HE22	998	31	1989	1992	X	X	X	X	X	X		X
1000 & 1000 Cat	99HE20,D81	998	31	1989	1992	X	X	X	X	X	X		X
Cooper	12A2AF53	1275	45	1990	1992	X	X	X	X	X	X		X
Turbo	12HD26AA	1275	68	1989	1990	X	X	X	X	X	X		
Montego Estate 1984 1994													
1.3	12HE17,18	1275	51	1984	1989	X	X	X	X	X	X		X
1.3	12HE19,44	1275	47	1989	1991	X	X	X	X	X	X		X
1.3	12HE80	1275	51	1989	1993	X	X	X	X	X	X		X
1.6	16H (S)	1598	61	1984	1992	X	X	X	X	X	X		X
1.6	16HE33,34	1598	61	1989	1993	X	X	X	X	X	X		X
1.6	16HE60,66	1598	63	1989	1993	X	X	X	X	X	X		X
1.6	16HE86,91	1598	63	1989	1990	X	X	X	X	X	X		X
1.6	16HE89,93	1598	63	1989	1991	X	X	X	X	X	X		X
2.0	20HE	1998	76	1989	1995	X	X	X	X	X	X		X
2.0	20HE09,11	1998	77	1984	1989	X	X	X	X	X	X		X
2.0 EFi	20H	1994	83	1985	1989	X	X	X	X	X	X		X
2.0 EFi	20HE51,52	1994	77	1990	1995	X	X	X	X	X	X		X
2.0 TD	MDi	1993	60	1988	1991	X	X	X	X	X	X		X
2.0 TD	MDi	1994	60	1989	1994	X	X	X	X	X	X		X
2.0 Turbo	20H	1994	110	1985	1988	X	X	X	X	X	X		X
2.0 Turbo	20HE50	1994	112	1990	1992	X	X	X	X	X	X		X
2.0i	20H	1994	85	1984	1991	X	X	X	X	X	X		X
2.0i	20HE13,14	1994	85	1989	1993	X	X	X	X	X	X		X
2.0i	20HE99	1994	85	1989	1993	X	X	X	X	X	X		X
2.0i MEMS	20HE36,37	1994	85	1989	1993	X	X	X	X	X	X		X
MG Turbo	20HE15	1994	112	1989	1991	X	X	X	X	X	X		X
Streetwise 2003 2005													
1.4i	14K4F	1396	76	2003	2005	X	X	X	X	X	X		
1.6i	16K4F	1588	80	2003	2005	X	X	X	X	X	X		
1.8i	18K4F	1796	86	2003	2005	X	X	X	X	X	X		
2.0 iDT	20T2N	1994	74	2003	2005	X	X	X	X	X	X		
SAAB													
90 1984 1987													
2.0	B 201 C	1985	74	1984	1987	X	X	X	X	X	X		
900 1983 1994													
2.0	B201 C	1985	73	1984	1988	X	X	X	X	X	X		X
2.0	B201T	1985	79	1983	1988	X	X	X	X	X	X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diagram	
SAAB													
900 1983 1994													
2.0i	B201i	1985	87	1984	1988	X	X	X	X	X		X	X
2.0i 16V Forty	B202i	1985	94	1988	1993	X	X	X	X	X		X	X
2.0i 16V kat	B202i	1985	92	1985	1993	X	X	X	X	X	X	X	X
2.0i kat	B201i	1985	81	1983	1993	X	X	X	X	X	X	X	X
2.0i Turbo	B201 S	1985	114	1985	1986	X	X	X	X	X		X	X
2.0i Turbo 16V	B202 L	1985	129	1984	1990	X	X	X	X	X		X	X
2.0i Turbo 16V	B202 L	1985	129	1989	1993	X	X	X	X	X	X	X	X
2.0i Turbo 16V	B202 LTT	1985	107	1989	1993	X	X	X	X	X		X	X
2.0i Turbo 16V	B202 S	1985	129	1987	1990	X	X	X	X	X		X	X
2.0i Turbo 16V kat	B202 L	1985	107	1988	1993	X	X	X	X	X	X	X	X
2.0i Turbo APC kat	B201 S	1985	103	1986	1987	X	X	X	X	X		X	X
2.0i Turbo H-APC	B201 S	1985	107	1984	1989	X	X	X	X	X		X	X
2.0i Turbo, Cabriolet 16V,16S	B202 S/Si Kat.	1985	118	1990	1993	X	X	X	X	X		X	X
2.1i Cabriolet	B212i	2119	103	1990	1994	X	X	X	X	X	X	X	X
900 1993 1998													
2.0 SE Turbo 16V	B204 L	1985	136	1993	1998	X	X	X	X	X	X	X	X
2.0 Si	B206i	1985	98	1993	1998	X	X	X	X	X	X	X	X
2.0i	B204i	1985	96	1994	1998	X	X	X	X	X	X	X	X
2.3 Si	B234i	2290	110	1993	1998	X	X	X	X	X	X	X	X
2.5i V6	B258i	2498	131	1993	1997	X	X	X	X	X	X	X	X
9000 1984 1998													
2.0i 16V	B 202i	1985	96	1985	1988	X	X	X	X	X		X	X
2.0i 16V	B 202i	1985	99	1988	1993	X	X	X	X	X	X	X	X
2.0i 16V	B 204 i	1985	96	1993	1998	X	X	X	X	X	X	X	X
2.0i 16V CD Turbo	B 202 L	1985	118	1985	1988	X	X	X	X	X		X	X
2.0i 16V CD Turbo	B 202 L	1985	129	1984	1992	X	X	X	X	X	X	X	X
2.0i 16V kat	B 202i	1985	92	1985	1988	X	X	X	X	X		X	X
2.0i 16V kat	B 202i	1985	96	1988	1993	X	X	X	X	X	X	X	X
2.0i 16V Turbo	B 202 L2	1985	121	1988	1993	X	X	X	X	X	X	X	X
2.0i 16V Turbo	B 204 E	1985	110	1995	1998	X	X	X	X	X		X	
2.0i 16V Turbo	B 204 S	1985	110	1993	1998	X	X	X	X	X		X	X
2.0i 16V Turbo Ecopower	B 202 S	1985	110	1991	1998	X	X	X	X	X		X	X
2.0i 16V Turbo Ecopower	B 204 L	1985	136	1993	1995	X	X	X	X	X	X	X	X
2.3i 16V	B 234i	2290	108	1993	1996	X	X	X	X	X	X	X	X
2.3i 16V	B 234i	2290	110	1989	1993	X	X	X	X	X	X	X	X
2.3i 16V Turbo	B 234 E	2290	125	1993	1997	X	X	X	X	X	X	X	X
2.3i 16V Turbo	B 234 L	2290	147	1990	1997	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
SAAB													
9000 1984 1998													
2.3i 16V Turbo	B 234 L	2290	147	1993	1997	X	X	X	X	X	X	X	X
2.3i 16V Turbo	B 234 R	2290	165	1993	1997	X	X	X	X	X	X	X	X
2.3i 16V Turbo CS Aero	B 234 R	2290	166	1992	1993	X	X	X	X	X	X	X	X
3.0i V6 24V	B 308i	2961	155	1994	1997	X	X	X	X	X	X	X	X
mag weg	B 234 L	2290	110	1989		X		X	X	X			
9-3 1998 2003													
2.0 t	B204E	1985	113	1999	2001	X	X	X	X	X	X	X	X
2.0 t	B205E	1985	110	2001	2003	X	X	X	X	X	X	X	X
2.0 T	B204L	1985	136	1998	2000	X	X	X	X	X	X	X	X
2.0 T	B204R	1985	147	1999	2000	X	X	X	X	X	X	X	X
2.0 T	B205L	1985	136	2000	2003	X	X	X	X	X	X	X	X
2.0 T	B205R	1985	151	2000	2003	X	X	X	X	X	X	X	X
2.0i	B204i	1985	96	1998	2001	X	X	X	X	X	X	X	X
2.2 TiD	D223L	2172	85	1998	2002	X	X	X	X	X	X	X	X
2.2 TiD	D223L	2172	92	2001	2003	X	X	X	X	X	X	X	X
2.3 T Viggen	B235R	2290	169	1999	2003	X	X	X	X	X	X	X	X
2.3i	B234i	2290	110	1998	1999	X	X	X	X	X	X	X	X
mag weg	0	0	0			X		X	X	X			X
9-3 2003													
1.8	Z18XE	1796	92	2004		X	X	X	X		X	X	
1.8 t	B207E	1998	110	2003		X	X	X	X		X	X	
1.9 TiD	Z19DT	1910	88	2005		X	X	X	X		X	X	
1.9 TiD 16V	Z19DTH	1910	110	2005		X	X	X	X		X	X	
2.0 t	B207L	1998	129	2003		X	X	X	X		X	X	
2.0 t (NOT USED)	B205E	1985	112	2003		X		X	X	X			X
2.0 t (NOT USED)	B205L	1985	138	2003		X		X	X	X			X
2.0 t (NOT USED)	B205R	1985	153	2003		X		X	X	X			X
2.0 Turbo	B207R	1998	154	2003		X	X	X	X		X	X	
2.2 TiD	D223L	2171	92	2003	2004	X	X	X	X	X	X	X	X
2.3 (NOT USED)	B235R	2290	187	2003		X		X	X	X			X
2.8T V6 (Empty)	B	2792	184	2005		X		X	X				
9-5 1998 2005													
2.0 t	B205E	1985	110	1998	2005	X	X	X	X	X	X	X	X
2.0 Turbo	B205F	1985	129	1998	2003	X	X	X	X		X	X	X
2.0 Turbo 185	B205E	1985	136	2002	2005	X	X	X	X	X	X	X	X
2.2 TiD	D223L	2172	88	2002	2005	X	X	X	X	X	X	X	X
2.3 t	B235E	2290	136	1998	2005	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
SAAB													
9-5 1998 2005													
2.3 Turbo	B235L	2290	162	2004	2005	X	X	X	X		X	X	
2.3 Turbo 230	B235R	2290	169	2000	2002	X	X	X	X	X	X		X
2.3 Turbo 250	B235R	2290	184	2002	2005	X	X	X	X		X	X	X
2.3 Turbo 280	B235R	2290	206	2004	2005	X	X	X	X		X	X	
2.3 Turbo 305	B235R	2290	224	2004	2005	X	X	X	X		X	X	
3.0 V6 t	B308E	2962	147	1998	2003	X	X	X	X	X	X		X
3.0 V6 TiD	D308L	2958	130	2002	2005	X	X	X	X	X	X		X
9-5 (OBSOLETE) 2002													
2.0 t	B205E	1985	110	2003		X	X	X	X	X	X		X
2.2 TiD	D223L	2171	88	2002		X	X	X	X	X	X		X
2.3 t	B235E	2290	136	2003		X	X	X	X	X	X	X	X
2.3 T 250	B235R	2290	184	2003		X	X	X	X	X	X		X
3.0 V6 t	B308E	2962	147	2002	2003	X	X	X	X	X	X		X
3.0 V6 TiD	D308L	2958	130	2002		X	X	X	X	X	X		X
SEAT													
Alhambra 1995													
1.8 Turbo	AJH	1781	110	1998	2000	X	X	X	X		X	X	X
1.8 Turbo	AWC	1781	110	2000		X	X	X	X	X	X	X	X
1.9 TDi	1Z	1896	66	1996	1996	X	X	X	X		X	X	X
1.9 TDi	AFN	1896	81	1997	2000	X	X	X	X		X	X	X
1.9 TDi	AHU	1896	66	1996	2000	X	X	X	X		X	X	X
1.9 TDi	ANU	1896	66	1999		X	X	X	X	X	X	X	X
1.9 TDi	ASZ	1781	96	2002		X	X	X	X		X		X
1.9 TDi	AUY	1896	85	2000		X	X	X	X	X	X	X	X
1.9 TDi	AVG	1896	81	1999	2000	X	X	X	X		X		X
2.0	ADY	1984	85	1996	2000	X	X	X	X	X	X	X	X
2.0	ATM	1984	85	2000		X	X	X	X	X	X	X	X
VR6	AAA	2792	128	1995	1998	X	X	X	X		X		X
VR6	AMY	2792	128	1998	2000	X	X	X	X		X		X
VR6	AYL	2792	150	2000		X	X	X	X	X	X	X	X
Altea 2004													
1.6	BGU	1595	75	2004		X	X	X	X		X	X	
1.9 TDi	BJB	1896	77	2004		X	X	X	X		X	X	
1.9 TDi	BKC	1896	77	2004		X	X	X	X		X	X	
2.0 16V FSi	AXW	1984	110	2004		X	X	X	X		X	X	
2.0 16V FSi	BLR	1984	110	2004		X	X				X		
2.0 16V FSi	BLY	1984	110	2004		X	X				X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
SEAT													
Altea 2004													
2.0 16V TDi	AZV	1968	100	2004		X	X	X	X	X	X		
2.0 16V TDi	BKD	1968	103	2004		X	X	X	X		X	X	
Arosa 1997 2005													
1.0	AER	999	37	1997	1999	X	X	X	X	X	X	X	X
1.0	AHT	999	37	1997	2000	X	X	X	X	X	X	X	X
1.0	ALD	999	37	1999	2000	X	X	X	X		X	X	X
1.0	ANV	999	37	1999	2000	X	X	X	X		X	X	X
1.0	AUC	999	37	2000	2002	X	X	X	X		X	X	X
1.4	AEX	1390	44	1997	1998	X	X	X	X	X	X	X	X
1.4	AKK	1390	44	1999	2000	X	X	X	X		X	X	X
1.4	AUD	1390	44	1999	2005	X	X	X	X	X	X		X
1.4	ANW	1390	44	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	AFK	1390	74	1999	2000	X	X	X	X		X	X	X
1.4 16V	AQQ	1390	74	1999	2000	X	X	X	X		X	X	X
1.4 16V	AUB	1390	74	2000	2005	X	X	X	X		X	X	X
1.4 TDi	AMF	1422	44	1997	2002	X	X	X	X		X	X	X
1.7 SDi	AKU	1716	44	1997	2002	X	X	X	X	X	X	X	X
Cordoba 1993 2000													
1.3	2G	1272	40	1993	1994	X	X	X	X		X	X	X
1.3	AAV	1272	40	1993	1994	X	X	X	X	X	X		X
1.4	AEX	1390	44	1995	1998	X	X	X	X	X	X		X
1.4	APQ	1390	44	1997	1998	X	X	X	X	X	X		X
1.4	ABD	1391	44	1993	1996	X	X	X	X	X	X		X
1.4 16V	AFH	1390	74	1997	1999	X	X	X	X	X	X		X
1.6	1F	1595	55	1994	1998	X	X	X	X	X	X	X	X
1.6	AEE	1598	55	1997	1999	X	X	X	X	X	X		X
1.6	AFT	1595	74	1995	1999	X	X	X	X	X	X		X
1.6	ALM	1595	55	1997	1999	X	X	X	X	X	X		X
1.6	ABU	1598	55	1993	1999	X	X	X	X	X	X		X
1.7 SDi	AHB	1718	42	1996	1999	X	X	X	X	X	X		X
1.8	ACC	1781	66	1996	1999	X	X	X	X		X		X
1.8	ADZ	1781	66	1994	1999	X	X	X	X	X	X		X
1.8	ABS	1781	66	1993	1996	X	X	X	X	X	X		X
1.8 16V	ADL	1781	95	1994	1999	X	X	X	X	X	X		X
1.9 D	1Y	1896	47	1993	1999	X	X	X	X	X	X		X
1.9 SDi	AEY	1896	47	1996	1999	X	X	X	X	X	X		X
1.9 TD	AAZ	1896	55	1993	1997	X	X	X	X	X	X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
SEAT													
Cordoba 1993 2000													
1.9 TDi	1Z	1896	66	1996	1997	X	X	X	X	X	X	X	X
1.9 TDi	AFN	1896	81	1996	1999	X	X	X	X	X	X	X	X
1.9 TDi	AHU	1896	66	1996	1999	X	X	X	X	X	X	X	X
2.0	AGG	1984	85	1996	1999	X	X	X	X	X	X	X	X
2.0	2E	1984	85	1993	1999	X	X	X	X	X	X	X	X
2.0 16V	ABF	1984	110	1996	1999	X	X	X	X	X	X	X	X
Cordoba 1999 2002													
1.0	ALD	999	37	1999	2002	X	X	X	X	X	X	X	X
1.0	ANV	999	37	1999	2002	X	X	X	X	X	X	X	X
1.0	AUC	999	37	2000	2002	X	X	X	X	X	X	X	X
1.0 16V	AFR	999	51	2000	2002	X	X	X	X	X	X	X	X
1.0 16V	AVZ	999	51	2000	2002	X	X	X	X	X	X	X	X
1.2	AZQ (naar Ibiza 2002)		47			X		X		X			
1.4	AKK	1390	44	1999	2002	X	X	X	X	X	X	X	X
1.4	ANW	1390	44	1999	2002	X	X	X	X	X	X	X	X
1.4	AUD	1390	44	1999	2002	X	X	X	X	X	X	X	X
1.4 16V	APE	1390	55	1999	2002	X	X	X	X	X	X	X	X
1.4 16V	AQQ	1390	74	1999	2002	X	X	X	X	X	X	X	X
1.4 16V	AUA	1390	55	2000	2002	X	X	X	X	X	X	X	X
1.4 16V	AUB	1390	74	2001	2002	X	X	X	X	X	X	X	X
1.6	AEH	1595	74	1999	2002	X	X	X	X	X	X	X	X
1.6	AKL	1595	74	1999	2002	X	X	X	X	X	X	X	X
1.6	ALM	1595	55	1999	2002	X	X	X	X	X	X	X	X
1.6	APF	1595	74	1999	2000	X	X	X	X	X	X	X	X
1.6	AUR	1595	74	2000	2002	X	X	X	X	X	X	X	X
1.8 20V Turbo	AQX	1781	115	1999	2002	X	X	X	X	X	X	X	X
1.8 20V Turbo	AYP	1781	115	2000	2002	X	X	X	X	X	X	X	X
1.9 SDi	AGP	1896	50	1999	2002	X	X	X	X	X	X	X	X
1.9 SDi	AQM	1896	50	1999	2002	X	X	X	X	X	X	X	X
1.9 TDi	AGR	1896	66	1999	2002	X	X	X	X	X	X	X	X
1.9 TDi	ALH	1896	81	1999	2002	X	X	X	X	X	X	X	X
1.9 TDi	ASK (no data ?)	1896	81	1999		X		X	X	X			X
1.9 TDi	ASV	1896	81	1999	2002	X	X	X	X	X	X	X	X
Cordoba 2003													
1.2 16V	AZQ	1198	47	2003		X	X	X	X		X	X	
1.4 16V	AUB	1390	74	2003		X	X	X	X		X	X	
1.4 16V	BBY	1390	55	2003		X	X	X	X		X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	
SEAT													
Cordoba 2003													
1.4 16V	BBZ	1390	74	2003		X	X	X	X	X	X	X	
1.4 TDi	AMF	1422	55	2003		X	X	X	X	X	X	X	
1.9 SDi	ASY	1896	47	2003		X	X	X	X	X	X	X	
1.9 TDi	ASZ	1896	96	2003		X	X	X	X	X	X	X	
1.9 TDi	ATD	1896	74	2003		X	X	X	X	X	X	X	
Ibiza 1999 2002													
1.0	ALD	999	37	1999	2002	X	X	X	X	X	X	X	X
1.0	ANV	999	37	1999	2002	X	X	X	X	X	X	X	X
1.0	AUC	999	37	2000	2002	X	X	X	X	X	X	X	X
1.0 16V	AFR	999	51	2000	2002	X	X	X	X	X	X	X	X
1.0 16V	AVZ	999	51	2000	2002	X	X	X	X	X	X	X	X
1.4	AKK	1390	44	1999	2002	X	X	X	X	X	X	X	X
1.4	ANW	1390	44	1999	2002	X	X	X	X	X	X	X	X
1.4	AUD	1390	44	1999	2002	X	X	X	X	X	X	X	X
1.4 16V	APE	1390	55	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	AQQ	1390	74	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	AUA	1390	55	2000	2002	X	X	X	X	X	X	X	X
1.4 16V	AUB	1390	74	2001	2002	X	X	X	X	X	X	X	X
1.4 16V (naar ibiza 2002)	BBY	1390	55			X		X	X	X			X
1.6	AEH	1595	74	1999	2002	X	X	X	X	X	X	X	X
1.6	AKL	1595	74	1999	2002	X	X	X	X	X	X		X
1.6	ALM	1598	55	1999	2002	X	X	X	X	X	X	X	X
1.6	APF	1595	74	1999	2000	X	X	X	X	X	X	X	X
1.6	AUR	1595	74	2000	2002	X	X	X	X	X	X	X	X
1.8 20V Turbo	AQX	1781	115	1999	2002	X	X	X	X	X	X	X	X
1.8 20V Turbo	AYP	1781	115	2000	2002	X	X	X	X	X	X	X	X
1.9 SDi	AGP	1896	50	1999	2002	X	X	X	X	X	X	X	X
1.9 SDi	AQM	1896	50	1999	2002	X	X	X	X	X	X	X	X
1.9 TDi	AGR	1896	66	1999	2002	X	X	X	X	X	X	X	X
1.9 TDi	ALH	1896	81	1999	2002	X	X	X	X	X	X	X	X
1.9 TDi (Cupra)	ASV	1896	81	1999	2002	X	X	X	X	X	X	X	X
Ibiza 2002													
1.2 16V	AZQ	1198	47	2002		X	X	X	X	X	X	X	X
1.4 16V	AUB	1390	74	2002		X	X	X	X	X	X	X	X
1.4 16V	BBY	1390	55	2002		X	X	X	X	X	X	X	X
1.4 16V	BBZ	1390	74	2002		X	X	X	X	X	X	X	X
1.4 16V 75	BKY	1390	55	2004		X		X					

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir.	Diagr.	Repair Times	Fuses & Relays
SEAT																			
Ibiza 2002																			
1.4 TDi	AMF	1422	55	2002		X	X	X	X	X				X	X			X	
1.8 20V Turbo	BJX	1781	110	2004		X			X										
1.8 20V Turbo	BKV	1781	110	2004		X			X										
1.8 20V Turbo Cupra	BBU	1781	132	2004		X			X										
1.9 SDi	ASY	1896	47	2002		X	X	X	X	X				X	X			X	
1.9 TDi	ASZ	1896	96	2002		X	X	X	X	X			X	X	X			X	
1.9 TDi	ATD	1896	74	2002		X	X	X	X	X			X	X	X			X	
1.9 TDi 150	ARL	1896	110	2004		X			X										
1.9 TDi Cupra	BPX	1896	118	2004		X			X										
2.0	AZL		85	2004		X			X										
2.0	BBX					X			X										
B	BAH					X			X										
E	BLZ					X			X										
Ibiza 1984 1993																			
0.9	138B./146A	903	32	1986	1993	X	X	X	X	X				X				X	X
1.2	021A.1000	1193	46	1984	1993	X	X	X	X	X			X	X				X	X
1.2 i	021C.1000	1193	52	1990	1993	X	X	X	X	X				X				X	X
1.5	021A.2000	1461	63	1984	1993	X	X	X	X	X			X	X				X	X
1.5 i	021 /C2000	1461	66	1991	1993	X	X	X	X	X				X				X	X
1.5 SXi	021A/B2000	1461	63	1986	1993	X	X	X	X	X			X	X				X	X
1.7 D	138A.5000	1714	41	1984	1993	X	X	X	X	X				X				X	X
1.7 i	021C3.000	1675	72	1991	1993	X	X	X	X	X				X				X	X
Ibiza 1993 2000																			
1.0	AAU	1043	33	1993	1999	X	X	X	X	X	X	X	X	X	X			X	X
1.0	AER	999	37	1996	1999	X	X	X	X	X	X	X	X	X	X			X	X
1.3	2G	1272	40	1993	1994	X	X	X	X	X			X	X	X			X	X
1.3	AAV	1272	40	1993	1994	X	X	X	X	X		X	X	X	X			X	X
1.4	AEX	1390	44	1996	1998	X	X	X	X	X	X	X	X	X	X			X	X
1.4	APQ	1391	44	1997	1999	X	X	X	X	X		X		X	X			X	X
1.4	ABD	1391	44	1993	1996	X	X	X	X	X	X	X	X	X	X			X	X
1.4 16V	AFH	1391	74	1997	1999	X	X	X	X	X	X	X	X	X	X			X	X
1.6	1F	1595	55	1994	1997	X	X	X	X	X		X	X	X	X	X		X	X
1.6	AEE	1598	55	1997	1999	X	X	X	X	X	X	X	X	X	X			X	X
1.6	AFT	1595	74	1996	1999	X	X	X	X	X	X	X	X	X	X			X	X
1.6	ABU	1598	55	1993	1999	X	X	X	X	X	X	X	X	X	X			X	X
1.7 SDi	AHB	1718	42	1997	1999	X	X	X	X	X	X	X		X	X				X
1.8	ACC	1781	63	1994	1999	X	X	X	X	X				X	X				X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagn.	Fuses & Relays
SEAT													
Ibiza 1993 2000													
1.8	ADZ	1781	66	1994	1999	X	X	X	X	X	X	X	X
1.8	ABS	1781	66	1993	1999	X	X	X	X	X	X	X	X
1.8 16V	ADL	1781	95	1993	1999	X	X	X	X	X	X	X	X
1.9 D	1Y	1896	47	1993	1999	X	X	X	X	X	X	X	X
1.9 SDi	AEY	1896	47	1995	1999	X	X	X	X	X	X	X	X
1.9 TD	AAZ	1896	55	1993	1997	X	X	X	X	X	X	X	X
1.9 TDi	1Z	1896	66	1996	1997	X	X	X	X	X	X	X	X
1.9 TDi	AFN	1896	81	1997	1999	X	X	X	X	X	X	X	X
1.9 TDi	AHU	1896	66	1997	1999	X	X	X	X	X	X	X	X
2.0	2E	1984	85	1993	1997	X	X	X	X	X	X	X	X
2.0	AGG	1984	85	1996	1999	X	X	X	X	X	X	X	X
2.0 16V	ABF	1984	110	1996	1999	X	X	X	X	X	X	X	X
Inca 1995 2002													
1.4	AEX	1390	44	1996	1998	X	X	X	X	X	X	X	X
1.4	AKV	1390	44	1996	2000	X	X	X	X	X	X	X	X
1.4	APQ	1390	44	1998	2002	X	X	X	X	X	X	X	X
1.4	AUD	1390	44	2000	2002	X	X	X	X	X	X	X	X
1.4 16V	AUA	1390	55	2000	2002	X	X	X	X	X	X	X	X
1.6	1F	1598	55	1996	1998	X	X	X	X	X	X	X	X
1.6	AEE	1598	55	1996	2000	X	X	X	X	X	X	X	X
1.6	ALM	1598	55	1996	2000	X	X	X	X	X	X	X	X
1.7 SDi	AHB	1718	42	1996	2000	X	X	X	X	X	X	X	X
1.9 D	1Y	1896	47	1996	2002	X	X	X	X	X	X	X	X
1.9 SDi	AEY	1896	47	1996	2002	X	X	X	X	X	X	X	X
1.9 SDi	AGP	1896	50	2000	2002	X	X	X	X	X	X	X	X
1.9 SDi	AYQ	1896	47	2000	2002	X	X	X	X	X	X	X	X
Leon 1999 2005													
1.4 16V	AHW	1390	55	1999	2005	X	X	X	X	X	X	X	X
1.4 16V	APE	1390	55	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	AUA	1390	55	2000	2005	X	X	X	X	X	X	X	X
1.4 16V	AXP	1390	55	2000	2002	X	X	X	X	X	X	X	X
1.4 16V	BCA	1390	55	2002	2002	X	X	X	X	X	X	X	X
1.6	AEH	1595	74	1999	2005	X	X	X	X	X	X	X	X
1.6	AKL	1595	74	1999	2005	X	X	X	X	X	X	X	X
1.6	APF	1595	74	2000	2005	X	X	X	X	X	X	X	X
1.6 16V	ATN	1597	77	2000	2005	X	X	X	X	X	X	X	X
1.6 16V	AUS	1597	77	2000	2001	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
SEAT													
Leon 1999 2005													
1.6 16V	AZD	1597	77	2000	2002	X	X	X	X	X	X		X
1.6 16V	BCB	1597	77	2002	2005	X	X	X	X		X		X
1.8 20V	AGN	1781	92	1999	2005	X	X	X	X		X		X
1.8 20V	APG	1781	92	2000	2005	X	X	X	X	X	X		X
1.8 20V	APT	1781	92	2000	2005	X	X	X	X		X		X
1.8 20V Turbo	AJQ	1781	132	2000	2001	X	X	X	X	X	X		X
1.8 20V Turbo	APP	1781	132	1999	2005	X	X	X	X	X	X		X
1.8 20V Turbo	ARY	1781	132	2000	2002	X	X	X	X	X	X		X
1.8 20V Turbo	AUQ	1781	132	2000	2005	X	X	X	X	X	X		X
1.8 20V Turbo (Cupra-R)	AMK	1781	154	2002	2005	X	X	X	X		X		X
1.8 20V Turbo (Cupra-R)	BAM (empty)	1781	165	2003	2005	X	X		X				
1.9 SDi	AQM	1896	50	2000	2002	X	X	X	X	X	X		X
1.9 TDi	AGR	1896	66	1999	2005	X	X	X	X	X	X		X
1.9 TDi	AHF	1896	81	1999	2002	X	X	X	X	X	X		X
1.9 TDi	ALH	1896	66	1999	2005	X	X	X	X	X	X		X
1.9 TDi	ARL	1896	110	2000	2002	X	X	X	X	X		X	X
1.9 TDi	ASV	1896	81	1999	2005	X	X	X	X	X	X		X
1.9 TDi	ASZ	1896	96	2003	2005	X	X	X	X		X		X
2.3 VR5	AGZ	2324	110	1998	2000	X	X	X	X		X		X
2.3 VR5	AQN	2324	125	2000	2005	X	X	X	X		X		X
2.8 Cupra 24V	AUE	2792	150	2001	2002	X	X	X	X		X		X
2.8 Cupra 24V	BDE	2792	150	2001	2002	X	X	X	X		X		X
Leon 2006													
1.6 MPi	BGU	1596		2006		X	X		X		X		
1.6 MPi	BSE	1596	75	2006		X	X	X	X		X		
1.9 TDi	BKC	1886	77	2006		X	X	X	X		X		
1.9 TDi	BLS	1886				X	X		X		X		
2.0 FSi	BLR	1984	110	2006		X	X	X	X		X		
2.0 FSi	BVY	1984		2006		X	X		X		X		
2.0 FSi	BWA	1984		2006		X	X		X		X		
2.0 TDi	AZV	1968		2006		X	X		X		X		
2.0 TDi	BKD	1968				X	X		X		X		
2.0 TDi	BMM	1968		2006		X	X		X		X		
Malaga 1985 1992													
1.2	021A.1000	1193	46	1985	1988	X	X	X	X		X		X
1.2 i	021C.1000	1193	52	1989	1993	X	X	X	X		X		X
1.5	021A.2000	1461	63	1985	1989	X	X	X	X		X		X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
SEAT																			
Malaga 1985 1992																			
1.5 i	021A/B2000	1461	66	1986	1989	X	X	X	X	X				X				X	
1.5 i	021A/B2000	1461	66	1989	1992	X	X	X	X	X				X				X	
1.7 D	138A.5000	1714	40	1985	1992	X	X	X	X	X				X				X	
Marbella 1987 2000																			
0.8	08NCA	843	25	1990	2000	X	X	X	X	X				X				X	
0.8	100GL(DG)	843	25	1987	1990	X	X	X	X	X				X				X	
0.9	09-NCA	903	29	1990	2000	X	X	X	X	X			X	X				X	
0.9	100GL-7000	903	29	1987	1990	X	X	X	X	X				X				X	
Terra 1987 2000																			
0.9	09 NCA	903	29	1987	1990	X	X	X	X	X				X				X	
0.9	09 NCA	903	29	1990	2000	X	X	X	X	X				X				X	
1.3 D	MN	1272	33	1990	1994	X	X	X	X	X				X				X	
1.4 D	1W	1398	35	1990	2000	X	X	X	X	X				X				X	
Toledo 1991 1999																			
1.6	1F	1595	52	1991	1994	X	X	X	X	X	X	X	X	X		X	X	X	
1.6	1F	1595	55	1994	1998	X	X	X	X	X		X		X				X	X
1.6	ABN	1595	55	1992	1994	X	X	X	X	X			X	X		X	X	X	
1.6	AFT	1595	74	1996	1999	X	X	X	X	X	X	X	X	X				X	
1.6	AKS	1595	74	1997	1999	X	X	X	X	X			X	X					
1.6	EZ	1595	55	1991	1994	X	X	X	X	X			X	X				X	X
1.8	ABS	1781	66	1993	1999	X	X	X	X	X	X	X	X	X		X	X	X	
1.8	ACC	1781	63	1994	1999	X	X	X	X	X	X	X		X				X	
1.8	ADZ	1781	66	1994	1999	X	X	X	X	X	X	X	X	X		X	X	X	
1.8	RP	1781	66	1991	1994	X	X	X	X	X	X	X	X	X		X	X	X	
1.8 16V	KR	1781	102	1991	1994	X	X	X	X	X	X		X	X				X	X
1.8 16V	PL	1781	95	1991	1994	X	X	X	X	X	X	X	X	X				X	X
1.9 D	1Y	1896	50	1991	1999	X	X	X	X	X		X	X	X		X	X	X	
1.9 TD	AAZ	1896	55	1991	1997	X	X	X	X	X		X	X	X		X	X	X	
1.9 TDi	1Z	1896	66	1995	1999	X	X	X	X	X		X	X	X				X	X
1.9 TDi	AFN	1896	81	1996	1998	X	X	X	X	X		X	X	X				X	
1.9 TDi	AHU	1896	66	1996	1998	X	X	X	X	X		X	X	X				X	X
2.0	2E	1984	85	1991	1994	X	X	X	X	X		X		X				X	X
2.0	2E	1984	85	1994	1999	X	X	X	X	X	X	X	X	X		X	X	X	
2.0	AGG	1984	85	1996	1999	X	X	X	X	X	X	X	X	X				X	
2.0 16V	ABF	1984	110	1994	1999	X	X	X	X	X	X	X	X	X		X	X	X	
2.0i	ADY/AKR (mag weg)	1984	85			X			X		X	X							

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
SEAT													
Toledo	1999	2005											
1.4	APE	1390	55	1999	2000	X	X	X	X	X	X		X
1.4 16V	AHW	1390	55	1999	2002	X	X	X	X		X		X
1.4 16V	AUA	1390	55	2000	2005	X	X	X	X	X	X		X
1.4 16V	AXP	1390	55	2000	2005	X	X	X	X		X		X
1.4 16V	BCA	1390	55	2002	2002	X	X	X	X		X		X
1.6	AEH	1595	74	1998	2005	X	X	X	X		X		X
1.6	AKL	1595	74	1998	2005	X	X	X	X		X		X
1.6	APF	1595	74	1999	2005	X	X	X	X				X
1.6 16V	AUS	1597	77	2000	2001	X	X	X	X	X	X		X
1.6 16V	AZD	1597	77	2000	2002	X	X	X	X	X	X		X
1.6 16V	BCB	1597	77	2002	2005	X	X	X	X		X		X
1.8	AGN	1781	92	1998	2005	X	X	X	X		X		X
1.8	APG	1781	92	1999	2005	X	X	X	X	X	X		X
1.8 20V	APT	1781	92	2000	2005	X	X	X	X		X		X
1.8 20V Turbo	AJQ	1781	132	2000	2005	X	X	X	X		X		X
1.8 20V Turbo	AMK	1781	154	2002	2005	X	X	X	X		X		X
1.8 20V Turbo	AUQ	1781	132	2002	2005	X	X	X	X		X		X
1.9 SDi	AQM	1896	50	2000	2002	X	X	X	X		X		X
1.9 TDi	AGR	1896	66	1999	2005	X	X	X	X	X	X		X
1.9 TDi	AHF	1896	81	1999	2002	X	X	X	X	X	X		X
1.9 TDi	ALH	1896	66	2000	2005	X	X	X	X	X	X		X
1.9 TDi	ARL	1896	110	2000	2000	X	X	X	X	X	X		X
1.9 TDi	ASV	1896	81	2000	2005	X	X	X	X	X	X		X
1.9 TDi	ASZ	1896	96	2003	2005	X	X	X	X		X		X
2.3 VR5	AGZ	2324	110	1998	2000	X	X	X	X		X		X
2.3 VR5	AQN	2324	125	2000	2005	X	X	X	X	X	X		X
Toledo 2005													
1.6 MPi	BGU	1595	75	2005		X	X	X	X		X		
1.6 MPi	BSE	1596	75	2005		X	X	X	X		X		
1.6 MPi	BSF	1596	75	2005		X	X		X		X		
1.9 TDi	BJB	1896	77	2005		X	X		X		X		
1.9 TDi	BKC	1896	77	2005		X	X		X		X		
1.9 TDi	BLS	1896	77	2006		X	X		X		X		
2.0 FSi	BLR	1984	110	2005		X	X		X		X		
2.0 FSi	BLY	1984	110	2005		X	X		X		X		
2.0 FSi	BVY	1984	110	2005		X	X		X		X		
2.0 FSi	BVZ	1984	110	2005		X	X		X		X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
SEAT																			
Toledo 2005																			
2.0 TDi	AZV	1968	100	2005		X	X			X					X				
2.0 TDi	BKD	1968	103	2005		X	X			X					X				
2.0 TDi	BMM	1968	103	2005		X	X			X					X				
SKODA																			
Fabia 2000																			
1.0	AQV	997	37	2001	2003	X	X	X	X	X	X	X		X	X		X	X	
1.0	ARV	997	37	2001	2003	X	X	X	X	X	X	X	X	X	X	X	X	X	
1.0	ATY	997	37	1999	2003	X	X	X	X	X		X	X	X	X	X	X	X	
1.2	AWY	1198	40	2002	2004	X	X	X	X	X				X	X		X	X	
1.2	BMD	1198	40	2004		X	X	X	X	X				X	X		X	X	
1.2 12V	AZQ	1198	47	2003	2005	X	X	X	X	X				X	X		X	X	
1.2 12V	BME	1198	47	2004		X	X	X	X	X				X	X		X	X	
1.4	AME	1397	50	1999	2003	X	X	X	X	X	X	X	X	X	X	X	X	X	
1.4	AQW	1397	50	2000	2003	X	X	X	X	X	X	X		X	X		X	X	
1.4	ATZ	1397	50	1999	2000	X	X	X	X	X	X	X	X	X	X	X	X	X	
1.4	AZE	1397	44	2000	2003	X	X	X	X	X	X	X	X	X	X	X	X	X	
1.4	AZF	1397	44	2000	2003	X	X	X	X	X	X	X		X	X		X	X	
1.4 16V	AUA	1390	55	2000	2002	X	X	X	X	X	X	X	X	X	X	X	X	X	
1.4 16V	AUB	1390	74	1999	2002	X	X	X	X	X	X	X	X	X	X	X	X	X	
1.4 16V	BBY	1390	55	2002	2004	X	X	X	X	X				X	X		X	X	
1.4 16V	BBZ	1390	74	2002		X	X	X	X	X				X	X		X	X	
1.4 16V	BKY	1390	55	2004		X	X	X	X	X				X	X		X	X	
1.4 TDi	AMF	1422	55	2003		X	X	X	X	X				X	X		X	X	
1.9 SDi	ASY	1896	47	1999		X	X	X	X	X	X	X	X	X	X	X	X	X	
1.9 TDi	ATD	1896	74	2000		X	X	X	X	X	X	X	X	X	X	X	X	X	
1.9 TDi RS	ASZ	1896	96	2003		X	X	X	X	X				X	X		X	X	
2.0	AZL	1984	85	2000		X	X	X	X	X	X	X	X	X	X	X	X	X	
Favorit 1989 1994																			
1.3	135	1289	46	1988	1991	X	X	X	X	X				X			X	X	
1.3	135B	1289	40	1993	1994	X	X	X	X	X				X			X	X	
1.3	135E	1289	40	1991	1993	X	X	X	X	X				X			X	X	
Felicia 1994 2000																			
1.3	135	1289	42	1994	1998	X	X	X	X	X			X	X		X	X	X	
1.3i	135B	1289	40	1994	1997	X	X	X	X	X	X	X	X	X		X	X	X	
1.3i	135M	1289	40	1996	2000	X	X		X										
1.3i	136B	1289	50	1994	1997	X	X	X	X	X	X	X	X	X		X	X	X	
1.3i	136M	1289	42	1996	2000	X	X		X			X						X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
SKODA													
Felicia 1994 2000													
1.6i	AEE	1598	55	1995	2000		X	X	X	X	X	X	X
1.9 D	AEF	1896	47	1995	2000		X	X	X	X	X	X	X
Octavia II 2004													
1.4	BCA	1390	55	2004			X	X	X	X	X	X	X
1.6	BGU	1595	75	2004			X	X	X	X	X	X	X
1.6 FSi	BLF	1598	85	2004			X	X	X	X	X	X	X
1.9 TDi	BJB	1896	77	2004			X	X	X	X	X	X	X
1.9 TDi	BKC	1896	77	2004			X	X	X	X	X	X	X
2.0 16V FSi	BLR	1984	110	2004			X	X	X	X	X	X	X
2.0 16V FSi	BLX	1984	110	2004			X	X	X	X	X	X	X
2.0 16V FSi	BLY	1984	110	2004			X	X	X	X	X	X	X
2.0 TDi	AZV	1968	100	2004			X	X	X	X	X	X	X
2.0 TDi	BKD	1968	103	2004			X	X	X	X	X	X	X
Octavia Tour 1996													
1.4 16V	AXP	1390	55	2000	2002		X	X	X	X	X	X	X
1.4 16V	BCA	1390	55	2002			X	X	X	X	X	X	X
1.4 8V	AMD	1396	44	1999	2001		X	X	X	X	X	X	X
1.6 8V	AEE	1598	55	1996	2004		X	X	X	X	X	X	X
1.6 8V	AEH	1595	74	1997	2004		X	X	X	X	X	X	X
1.6 8V	AKL	1595	74	1997	2004		X	X	X	X	X	X	X
1.6 8V	AVU	1595	75	2000	2002		X	X	X	X	X	X	X
1.6 8V	BFQ	1595	75	2002			X	X	X	X	X	X	X
1.8 20V	AGN	1781	92	1996	1999		X	X	X	X	X	X	X
1.8 20V Turbo	AGU	1781	110	1998			X	X	X	X	X	X	X
1.8 20V Turbo	ARZ	1781	110	1999	2000		X	X	X	X	X	X	X
1.8 20V Turbo	AUM	1781	110	2000			X	X	X	X	X	X	X
1.8 20V Turbo 4x4	ARX	1781	110	2000	2004		X	X	X	X	X	X	X
1.8 20V Turbo RS	AUQ	1781	132	2000	2004		X	X	X	X	X	X	X
1.9 SDi	AGP	1896	50	1997	2001		X	X	X	X	X	X	X
1.9 SDi	AQM	1896	50	2000	2004		X	X	X	X	X	X	X
1.9 TDi	AGR	1896	66	1996	2004		X	X	X	X	X	X	X
1.9 TDi	AHF	1896	81	1997	2004		X	X	X	X	X	X	X
1.9 TDi	ALH	1896	66	2000	2004		X	X	X	X	X	X	X
1.9 TDi	ASV	1896	81	1999	2004		X	X	X	X	X	X	X
1.9 TDi	ASZ	1896	96	2002	2004		X	X	X	X	X	X	X
1.9 TDi 4x4	ATD	1896	74	2000			X	X	X	X	X	X	X
2.0 8V	AEG	1984	85	2001	2004		X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diag.	
SKODA													
Octavia Tour 1996													
2.0 8V	APK	1984	85	2000	2004	X	X	X	X	X	X	X	X
2.0 8V	AQY	1984	85	1999	2002	X	X	X	X	X	X	X	X
2.0 8V	AZJ	1984	85	2002	2004	X	X	X	X	X	X	X	X
2.0 8V 4x4	AZH	1984	85	2000	2002	X	X	X	X	X	X	X	X
temp						X	X	X					
Superb 2002													
1.8 Turbo	AWT	1781	110	2002		X	X	X	X	X	X		X
1.9 TDi	AVB	1896	74	2002		X	X	X	X	X	X		X
1.9 TDi	AVF	1896	96	2004		X	X	X	X	X	X		X
1.9 TDi	AWX	1896	96	2002		X	X	X	X	X	X		X
2.0	AZM	1984	85	2002		X	X	X	X	X	X		X
2.5 V6 TDi	AYM	2496	114	2002	2004	X	X	X	X	X	X		X
2.5 V6 TDi	BDG	2496	120	2003		X	X	X	X	X	X		X
2.8 V6 30V	AMX	2771	142	2002		X	X	X	X	X	X		X
2.8 V6 30V	BBG	2771	140	2002		X	X	X	X	X	X		X
SMART													
Smart test 1998													
600	M160 12	599	40	1998									
600	M160 13	599	33	1998									
test	test	0	0	0	0								
W450 Fortwo 1998													
0.6	160.910	599	33	1998	2001	X	X	X	X				X
0.6	160.910	599	40	1998	2001	X	X	X	X				X
0.6	160.910	599	45	2001	2003	X	X	X	X		X		X
0.6	160.920	599	33	1998	2001	X	X	X	X				X
0.6	160.920	599	40	1998	2001	X	X	X	X				X
0.6	160.920	599	45	2001	2003	X	X	X	X		X		X
0.7	160.910	698	37	2003		X	X	X	X		X		
0.7	160.920	698	37	2003		X	X	X	X		X		
0.7	nnb	698	37	1998		X		X					
0.7	nnb	698	45	1998		X		X					
0.7 BRABUS	160.910	698	55	2003		X	X	X	X		X		
0.7 BRABUS	160.920	698	55	2003		X	X	X	X		X		
0.8 CDi	660.940	799	30	1999		X	X	X	X		X	X	
test						X	X	X					
W452 Roadster 2003 2006													
0.7	160.921	698	45	2003	2006	X	X	X	X		X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
SMART																			
W452 Roadster 2003 2006																			
0.7	160.922	698	60	2003	2006	X	X	X		X					X				
0.7 BRABUS	160.923	698	75	2003	2006	X	X	X		X					X				
W454 Forfour 2004																			
1.1 12V	134.910	1124	55	2004		X	X	X							X				
1.3 16V	135.930	1332	66	2004		X	X	X							X				
1.5 12V CDi	639.939	1499	50	2004		X	X	X							X				
1.5 12V CDi	639.939	1499	70	2004		X	X	X							X				
1.5 16V	135.950	1499	80	2004		X	X	X							X				
SUBARU																			
Forester 1997 2002																			
2.0i 16V	EJ20J	1994	92	1997	2002	X	X	X		X				X			X	X	
2.0i 16V Turbo	EJ20	1994	125	1997	2002	X	X	X		X				X			X	X	
Impreza 1993 2000																			
1.6 16V	EJ161	1597	70	1998	2000	X	X		X									X	
1.6 16V	EJ16E	1597	66	1993	1996	X	X	X	X	X				X			X		
1.6 16V	EJ16J	1597	66	1996	1998	X	X		X					X				X	
1.6 16V 4x4	EJ16E	1597	66	1993	1996	X	X	X	X	X				X			X		
1.8 16V	EJ18E	1820	76	1993	1996	X	X	X	X	X				X			X		
1.8 16V	EJ18J	1820	76	1996	1998	X	X		X										
1.8 16V 4x4	EJ18E	1820	76	1993	1996	X	X	X	X	X				X			X		
2.0 16V	EJ201	1994	92	1998	2000	X	X		X					X				X	
2.0 16V	EJ20E	1994	85	1995	2000	X	X	X	X	X				X			X	X	
2.0 16V 4x4	EJ20E	1994	85	1995	2000	X	X	X	X	X				X			X	X	
2.0 16V Turbo	EJ205	1994	160	1998	2000	X	X		X					X				X	
2.0 16V Turbo 4x4	EJ20T	1994	155	1994	2000	X	X	X	X	X				X			X	X	
2.5 16V AWD	EJ25	2457	123	1998	2000	X			X									X	
Impreza 2000 2006																			
1.6	EJ161	1597	70	2000		X	X	X	X	X	X			X				X	
2.0	EJ201	1994	92	2000		X	X	X	X	X	X			X				X	
2.0 WRX STi	EJ207	1994	195	2001		X	X	X	X	X	X			X				X	
2.0 WRX Turbo	EJ205	1994	160	2000		X	X	X	X	X	X			X				X	
2.5	EJ251	2475	112	2000		X	X	X	X	X	X			X				X	
Justy 1984 1988																			
1.0 4x2	EF-10	997	40	1984	1988	X	X	X	X	X				X			X	X	
1.0 4x4	EF-10	997	40	1984	1988	X	X	X	X	X				X			X	X	
1.2 4x2	EF-12	1189	45	1987	1988	X	X	X	X	X				X			X	X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagn.	Engine	Service Reset	Air Cond.	Wir. Diagn.	Repair Times	Fuses & Relays
SUBARU																			
Justy 1984 1988																			
1.2 4x4	EF-12	1189	45	1987	1988	X	X	X	X	X				X				X	X
Justy 1988 1995																			
1.0	EF-10	997	37	1988	1995	X	X	X		X				X				X	X
1.2	EF-12	1189	45	1988	1992	X	X	X		X				X				X	X
1.2 i 9V	EF-12 MUJ	1189	54	1993	1995	X	X	X		X				X				X	
Justy 1995 2003																			
1.3i	G13BA	1298	50	1995	2003	X	X	X		X				X				X	X
Legacy 1989 1993																			
1.8 16V	EJ-18	1820	76	1989	1991	X	X	X	X	X			X	X				X	X
1.8i 16V	EJ-18	1820	76	1989	1993	X	X	X	X	X			X	X				X	X
2.0i 16V	EJ-20 MUB	1994	85	1989	1993	X	X	X	X	X				X				X	X
2.0i 16V Turbo	EJ-20 BUB	1994	147	1991	1993	X	X	X	X	X				X				X	X
2.2i 16V	EJ-22	2212	100	1989	1993	X	X	X	X	X				X				X	X
Legacy 1993 1998																			
2.0i 16V	EJ-20 MUB	1994	85	1993	1998	X	X	X	X	X			X	X				X	X
2.0i 16V 4x4	EJ-20 MUB	1994	85	1993	1998	X	X	X	X	X			X	X				X	X
2.0i 16V Turbo	EJ-20 BUB	1994	147	1993	1998	X	X	X	X	X			X	X				X	X
2.0i 16V Turbo 4x4	EJ-20 BUB	1994	147	1993	1998	X	X	X	X	X			X	X				X	X
2.2i 16V	EJ-22	1994	96	1997	1998	X	X		X	X				X					X
2.2i 16V 4x4	EJ-22	2212	94	1993	1997	X	X	X	X	X			X	X				X	X
2.5i 16V	EJ-25	2457	110	1997	1998	X	X	X	X	X			X	X				X	X
Legacy 1998 2003																			
2.0 16V	EJ-20	1994	92	1998	2003	X	X	X		X				X					X
2.5 16V	EJ-25	2457	115	1998	2003	X	X	X		X				X					X
Leone 1300 1984 1994																			
1.3 4X2	EA65	1298	48	1984	1989	X	X	X	X	X				X					X
1.3 4X2	EA65	1298	48	1990	1994	X	X	X	X	X				X					
Leone 1600 1984 1994																			
1.6 4X2	EA71	1595	54	1987	1989	X	X	X	X	X				X					X
1.6 4X2	EA71	1595	55	1990	1994	X	X	X	X	X				X					
1.6 4X4	EA71	1595	54	1987	1989	X	X	X	X	X				X					X
1.6 4X4	EA71	1595	55	1990	1994	X	X	X	X	X				X					
Leone 1800 1984 1994																			
1.8 4X2	EA-81	1782	66	1986	1989	X	X	X	X	X				X					X
1.8 4X4	EA-81	1781	66	1990	1994	X	X	X	X	X				X					
1.8 4X4 AM/AN	EA-81/82	1781	66	1984	1989	X	X	X	X	X				X					X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
SUBARU																			
Leone 1800 1984 1994																			
1.8i 4X2	EA-82	1781	77	1986	1989	X	X	X	X	X				X					X
1.8i 4X4 Turbo	EA-82T	1781	96	1990	1994	X	X	X	X	X				X					
1.8i 4X4 Turbo	EA-82T	1781	100	1984	1993	X	X	X	X	X				X					X
1.8i full time 4X4	EA-82	1781	72	1990	1994	X	X	X	X	X				X					
Mini jumbo 1982 1993																			
0.7	EK42	665	27	1988	1989	X	X	X	X	X				X					
0.8	EN08	758	31	1989	1993	X	X	X	X	X				X					
SVX 1992 1996																			
3.3i	EG-33	3319	169	1992	1996	X	X	X	X	X				X					
Vivio 1993 2001																			
0.6i	EN07	658	32	1993	2001	X	X	X	X	X				X					
4X4	EN07	658	32	1993	2001	X	X	X	X	X				X					
ECVT	EN07	658	32	1993	2001	X	X	X	X	X				X					
XT 1986 1991																			
Turbo Coupé	EA82	1781	100	1986	1991		X	X	X	X				X					
Turbo Coupé 4x4	EA82	1781	100	1986	1991		X	X	X	X				X					
SUZUKI																			
Alto 1986 1994																			
0.8 GA, GL	F8B/Y64	796	29	1986	1989	X	X	X	X	X				X			X		
0.8 GLX	F8B/Y64	796	29	1989	1994	X	X	X	X	X				X			X		
Alto 1994 2002																			
1.0i	G10B	993	39	1994	2002	X	X	X		X				X			X	X	
Alto 2002																			
1.1	F10D	1061	46	2002		X	X	X		X				X				X	
Baleno 1995 2000																			
1.3i 16V	G13BB	1298	63	1995	2000	X	X	X		X	X			X			X	X	
1.6i 16V	G16B	1590	71	1997	2000	X	X	X		X	X			X			X	X	
1.6i 16V	G16B	1590	73	1995	1997	X	X	X		X	X			X			X	X	
1.6i 16V mag weg	G16B	1590	73	1995	1997	X		X		X	X							X	
1.8i 16V	J18A	1839	89	1996	2000	X	X	X		X	X			X			X	X	
Baleno 2000 2003																			
1.3 16V	G13BB	1298	63	2000	2003	X	X	X		X				X				X	
1.6 16V	G16B	1590	70	2000	2003	X	X	X		X	X			X			X	X	
1.6 16V 4WD	G16B	1590	70	2000	2003	X	X	X		X	X			X			X	X	
1.8 16V	J18A	1839	89	2000	2003	X	X	X		X	X			X			X	X	
1.8 16V 4WD	J18A	1839	89	2000	2003	X	X	X		X	X			X			X	X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
SUZUKI																			
Baleno mag we	1995																		
1.3i 16V	G13BB	1298	63	1995														X	X
1.6i 16V	G16B	1590	73	1995														X	X
1.8 16V	J18A	1839	89	1996														X	X
Cappucino	1994	1999																	
SX306	F6A	657	47	1993		X	X	X											
Grand Vitara	1998	2005																	
1.6 16V	G16B	1590	69	1998	2005	X	X	X	X	X	X			X					X
2.0 16V	J20A	1995	94	1998	2005	X	X	X	X	X	X			X					X
2.0 TD	RF	1998	64	1998	2001	X	X	X	X	X				X					X
2.0 TDi	RHZ	1997	80	2000	2003	X	X	X	X	X				X					X
2.0 TDi 16V	RHW	1997	80	2002	2005	X	X	X	X	X				X					X
2.5 V6	H25A	2493	106	1998	2001	X	X	X	X	X				X					X
2.5 V6	H25A	2493	116	2001	2005	X	X	X	X	X				X					X
XL7 2.0 TDi 16V	RHW	1998	80	2003	2005	X	X	X	X	X				X					X
XL7 2.7 V6	H27A	2736	127	2001	2005	X	X	X	X	X				X					X
XL7 2.7 V6	H27B	2736	135	2003	2005	X	X	X	X	X				X					X
Grand Vitara	2005																		
1.6	M16A	1586	78	2005		X	X	X	X	X				X					
2.0	J20	1995	103	2005		X	X	X	X	X				X					
Ignis	2000	2003																	
1.3 16V	M13A	1328	61	2000	2003	X	X	X	X	X				X					
1.5 VVT	M15A	1490	80	2003	2003	X	X	X	X	X				X				X	
Ignis	2003																		
1.3 VVT	M13A	1328	69	2003		X	X	X	X	X				X				X	
1.5 VVT	M15A	1490	73	2003		X	X	X	X	X				X				X	
Jimny	1999																		
1.3	G13BB	1298	59	1999	2001	X	X	X		X				X					X
1.3 16V	M13A	1328	63	2001		X	X	X		X				X					X
1.5 DDiS	K9K	1461	48	2004		X	X	X		X				X					X
Liana	2001																		
1.3i	M13A	1328	66	2001		X	X	X	X	X	X			X					X
1.6i	M16A	1586	78	2001		X	X	X	X	X	X			X					X
Samurai	1988	2000																	
1.3 SJ50	G13BA	1298	51	1988	2000	X	X	X	X	X				X				X	
1.3 SJ70	G13A	1324	43	1988	1990	X	X	X	X	X				X				X	
1.3i	G13BA	1298	51	1988	1990	X	X	X	X	X				X				X	

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
SUZUKI													
SJ 1980 1988													
410	F 10A	970	33	1980	1988	X	X	X	X	X	X	X	X
413	G 13A	1324	47	1984	1988	X	X	X	X	X	X	X	X
Swift 1984 1989													
1.0	G 10	993	37	1986	1989	X	X	X	X	X	X	X	X
1.3	G 13	1324	50	1984	1989	X	X	X	X	X	X	X	X
1.3	G 13A	1324	50	1986	1989	X	X	X	X	X	X	X	X
1.3 GT/GXi	G 13B	1298	74	1986	1989	X	X	X	X	X	X	X	X
Swift 1989 2003													
1.0	G 10	993	40	1989	1994	X	X	X	X	X	X	X	X
1.0i	G 10A	993	39	1991	2003	X	X	X	X	X	X	X	X
1.3	G 13B	1298	49	1989	1991	X	X	X	X	X	X	X	X
1.3i	G 13BA	1298	50	1991	2000	X	X	X	X	X	X	X	X
1.3i 16V	G 13BB	1298	63	2001	2003	X	X	X	X	X	X	X	X
1.3i GTi	G 13B	1298	74	1989	1996	X	X	X	X	X	X	X	X
1.6i 16V	G 16B	1590	68	1989	2001	X	X	X	X	X	X	X	X
mag weg	G 16B	1600	70	1989	2003	X	X	X	X	X	X	X	X
Swift 2004													
1.3	M13A	1328	68	2004		X	X	X	X	X	X	X	X
1.3 DDiS	Z13DT	1248	51	2004		X	X	X	X	X	X	X	X
1.5	M15A	1490	75	2004		X	X	X	X	X	X	X	X
Vitara 1988 1998													
1.6	G16A	1590	55	1988	1993	X	X	X	X	X	X	X	X
1.6i	G16A	1590	59	1991	1998	X	X	X	X	X	X	X	X
1.6i ????	G16A	1590	59	1991	1998	X	X	X	X	X	X	X	X
1.6i 16V	G16B	1590	71	1994	1998	X	X	X	X	X	X	X	X
1.9 TD	XUD9A	1905	55	1997	1998	X	X	X	X	X	X	X	X
2.0 TD	RF	1998	52	1996	1998	X	X	X	X	X	X	X	X
2.0i 16V	J20A	1995	97	1997	1998	X	X	X	X	X	X	X	X
2.0i V6	H20A	1997	100	1995	1998	X	X	X	X	X	X	X	X
Wagon R+ 1997 2000													
1.0 16V	K10A	996	48	1997	2000	X	X	X	X	X	X	X	X
1.2 16V	K12A	1171	51	1998	2000	X	X	X	X	X	X	X	X
1.3	G13BB	1298	56			X	X	X	X	X	X	X	X
Wagon R+ 2000													
1.0 12V	G10	993	39	2004		X	X	X	X	X	X	X	X
1.0 12V	G10A	993	39	2000	2004	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
SUZUKI																			
Wagon R+ 2000																			
1.0 12V	Z10XEP	998	44	2004		X			X										
1.2 16V	Z12XEP	1229	59	2004		X			X										
1.3 16V	G13BB	1298	56	2000	2004	X	X	X	X	X									
1.3 16V VVT	M13	1328	69	2004		X	X	X	X	X				X					
1.3 DDiS	Z13DT	1248	51	2004		X	X		X	X									
X-90 1995																			
1.6i 16V	G16B	1590	71	1995				X									X		
TOYOTA																			
4-Runner 1989 1995																			
2.4 TD	2L-T	2446	66	1990	1995	X	X	X	X	X				X					X
3.0	3VZ-E	2959	105	1989	1995	X	X	X	X	X				X					X
3.0 TD	1KZ-T	2982	92	1993	1995	X	X	X	X	X				X					X
3.0i	3VZ-FE	2959	104	1993	1995	X	X	X	X	X				X					X
Avensis 1998 2003																			
1.6 16V VVT-i	3ZZ-FE	1598	81	2000	2003	X	X	X	X	X	X	X		X			X	X	
1.6i 16V	4A-FE	1587	81	1998	2001	X	X	X	X	X	X	X		X			X	X	
1.6i 16V Lean Burn	4A-FE	1587	74	1998	2001	X	X	X	X	X	X	X		X			X	X	
1.8 16V VVT-i	1ZZ-FE	1794	91	2000	2003	X	X	X	X	X	X	X		X			X	X	
1.8i 16V Lean Burn	7A-FE	1762	81	1998	2001	X	X	X	X	X	X	X		X			X	X	
2.0 D4-D	1CD-FTV	1995	85	2000	2003	X	X	X	X	X	X	X		X			X	X	
2.0 TD	2C-TE	1975	66	1998	2001	X	X	X	X	X				X			X	X	
2.0i 16V	3S-FE	1998	94	1998	2001	X	X	X	X	X	X	X		X			X	X	
2.0i 16V VVT-i D4	1AZ-FE	1998	110	2001	2003	X	X	X	X	X		X		X			X	X	
2.0i 16V VVT-i D4	1AZ-FSE	1998	110	2000	2003	X	X	X	X	X	X	X		X			X	X	
Avensis 2003																			
1.6 16V VVT-i	3ZZ-FE	1598	81	2003		X	X	X	X	X	X	X		X					X
1.8 16V VVT-i	1ZZ-FE	1794	95	2003		X	X	X	X	X	X	X		X					X
2.0 16V	1AZ-FE	1998	100	2003		X	X	X	X	X		X		X					X
2.0 16V VVT-i	1AZ-FE	1998	108	2003		X	X	X	X	X		X		X					X
2.0 16V VVT-i	1AZ-FSE	1998	108	2003		X	X	X	X	X	X	X		X					X
2.0 D-4D	1CD-FTV	1995	85	2003		X	X	X	X	X	X	X		X					X
2.2 D-4D	2AD-FTV	2231	110	2005		X			X										
2.2 D-4D Clean Power	2AD-FHV	2231	130	2005		X			X										
2.4 16V VVT-i	2AZ-FSE	2362	120	2004		X	X	X	X	X		X							X
Avensis Verso 2001 2006																			
1.6 VVT-i	3ZZ-FE	1598	81	2001	2006	X	X	X	X	X				X			X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond.	Wir. Diag.	
TOYOTA													
Avensis Verso 2001 2006													
1.8 VVT-i	1ZZ-FE	1794	95	2001	2006	X	X	X	X	X		X	X
2.0 D4-D	1CD-FTV	1995	85	2001	2006	X	X	X	X	X			X
2.0 VVT-i	1AZ-FE	1998	110	2001	2006	X	X	X	X	X			X
Aygo 2005													
1.0 VVT-i	1KR-FE	998	50	2005		X	X	X		X			
1.4 DI-D	2WZ-TV	1398	40	2005		X	X	X		X			
Camry 1986 1992													
1.8	1S	1832	66	1986	1988	X	X	X		X		X	
1.8 TD	1C-TL	1839	54	1984	1985	X	X			X			
2.0	2S-E	1995	79	1983	1986	X	X			X			
2.0 i	3S-FE	1998	94	1986	1991	X	X	X		X		X	
2.0 i 16V 4WD	3S-FE	1998	86	1987	1991	X	X	X	X	X		X	
2.0 TD	2C-T	1974	62	1986	1991	X	X	X		X		X	
2.5i V6	2VZ-FE	2507	118	1988	1991	X	X	X		X		X	
Camry 1992 1996													
2.2 i	5S-FE	2164	100	1991	1996	X	X	X	X	X		X	X
2.2i 16V	5S-FE	2164	100	1991	1996	X	X	X	X	X		X	X
3.0i V6 24V	3VZ-FE	2959	136	1991	1996	X	X	X		X		X	X
Camry 1996 2001													
2.2i 16V	5S-FE	2164	96	1996	2001	X	X	X		X		X	X
3.0i 24V	1MZ-FE	2995	140	1996	2001	X	X	X		X		X	X
Camry 2001 2004													
2.4 16V VVT-i	2AZ-FE	2362	112	2002			X						X
3.0 24V VVT-i	1MZ-FE	2995	137	2002									X
Carina 1984 1988													
1.6	4A-L	1588	62	1984	1988	X	X	X		X			
1.6	4A-L	1587	62	1984	1988	X	X	X		X		X	
1.8 i	1S-EL	1832	73	1985	1988	X	X	X		X		X	
2.0 D	2C	1974	53	1984	1988	X	X	X		X		X	
Carina 1988 1992													
1.6 16V	4A-F	1588	70	1988	1992	X	X	X		X		X	
1.6i	4A-FE	1587	70	1990	1992	X	X	X	X	X		X	
2.0 D	2C	1974	54	1989	1992	X	X	X		X		X	
2.0i	3S-FE	1998	94	1988	1992	X	X	X		X		X	
Carina 1992 1998													
1.6 16V	4A-FE	1587	85	1992	1998	X	X	X	X	X		X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagn.	Repair Times	Fuses & Relays
TOYOTA																			
Carina 1992 1998																			
1.6i 16V	4A-FE	1587	79	1992	1998	X	X	X	X	X	X			X				X	X
1.6i 16V Wagon	4A-FE	1587	79	1992	1998	X	X	X	X	X	X			X				X	X
1.8i 16V	7A-FE	1762	77	1994	1995	X	X	X	X	X	X			X				X	X
1.8i 16V	7A-FE	1762	77	1996	1998	X	X	X	X	X	X			X				X	X
1.8i 16V Automatic	7A-FE	1762	77	1994	1995	X	X	X	X	X	X			X				X	X
2.0 D	2C	1975	54	1992	1998	X	X	X	X	X				X				X	X
2.0 GTi 16V	3S-GE	1998	116	1992	1998	X	X	X	X	X				X				X	X
2.0i 16V	3S-FE	1998	98	1992	1998	X	X	X	X	X	X			X				X	X
Celica 1989 1994																			
1.6i 16V	4A-FE	1587	77	1989	1994	X	X	X	X	X	X			X				X	
2.0 GTi 16V	3S-GE	1998	103	1989	1989	X	X		X	X				X					
2.0 GTi 16V	3S-GE	1998	115	1989	1994	X	X	X	X	X				X				X	
2.0 i Turbo 4WD 16V	3S-GTE	1998	150	1989	1994	X	X	X	X	X				X				X	
2.0i	3S-FE	1998	115	1989	1995	X	X	X	X	X	X			X				X	
2.2i	5S-FE	2164	100	1993	1995	X	X	X	X	X	X			X					
Celica 2000																			
1.8 VVT-i	1ZZ-FE	1794	105	2000		X	X	X		X	X			X					X
1.8 VVTL-i	2ZZ-GE	1796	141	2001		X	X	X		X	X			X					X
Celica 1985 1989																			
1.6 ST	4AL	1587	63	1987	1989	X	X	X	X	X				X					
1.6i GT 16V T.C.	4A-GEL	1587	91	1987	1988	X	X	X	X	X				X					
2.0 GTi 16V	3S-GELC	1998	110	1986	1989	X	X		X	X				X					
2.0 GTi 16V T.C.	3S-GE	1998	110	1987	1988	X	X	X	X	X				X			X		
2.0 i Turbo 4WD 16V	3S-GTE	1998	138	1987	1989	X	X	X	X	X				X			X		
Celica 1994 2000																			
1.8i	7A-FE	1762	85	1994	2000	X	X	X	X	X	X			X				X	X
2.0i	3S-FE	1998	115	1995	2000	X	X	X	X	X	X			X				X	X
2.0i GT	3S-GE	1998	127	1994	2000	X	X	X	X	X				X				X	X
2.2i	5S-FE	2164	101	1995	2000	X	X	X	X	X	X			X					X
Corolla 1997 2000																			
1.3 16V	4E-FE	1332	63	1997	2000	X	X	X	X	X	X			X				X	X
1.6 16V	4A-FE	1587	79	1997	2000	X	X	X	X	X	X			X				X	X
1.6 16V	4A-FE	1587	81	1997	2000	X	X	X	X	X				X					X
1.8 16V	7A-FE	1762	81	1997	2000	X	X	X	X	X				X			X		X
1.9 D	1WZ	1867	51	1999	2000	X	X	X	X	X				X					X
2.0 D	2C-E	1975	53	1997	1999	X	X	X	X	X				X			X		X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagr.	Repair Times	Fuses & Relays
TOYOTA																			
Corolla 1987 1992																			
1.3	2E	1295	55	1987	1992	X	X	X	X	X				X				X	
1.3i 12V	2E-E	1295	60	1990	1992	X	X	X	X	X	X			X				X	
1.3i 12V	2E-E	1295	60	1990	1992	X	X	X	X	X	X			X				X	
1.6	4A-F	1587	66	1987	1992	X	X	X	X	X				X				X	
1.6 4WD	4A-F	1587	69	1988	1991	X	X	X	X	X				X				X	
1.6 4WD Wagon	4A-F	1587	69	1988	1991	X	X	X	X	X				X				X	
1.6 GTi	4A-GE	1587	92	1987	1992	X	X	X	X	X				X				X	
1.6i 16V	4A-FE	1587	77	1990	1992	X	X	X	X	X	X			X				X	
1.6i 16V.	4A-FE	1587	77	1989	1992	X	X	X	X	X	X			X				X	
1.6i 4WD Sedan	4A-GE/FE	1587	77	1987	1992	X	X	X	X	X				X				X	
1.6i 4WD Wagon	4A-FE	1587	77	1987	1992	X	X	X	X	X				X				X	
1.6i TC16	4A-FE	1587	77	1990	1992	X			X	X	X								
1.8 D	1C	1839	47	1987	1992	X	X	X	X	X				X				X	
1.8 D Wagon	1C	1839	47	1990	1992	X	X	X	X	X				X				X	
Corolla 1992 1997																			
1.3 16V	4E-FE	1332	65	1992	1997	X	X	X	X	X	X			X				X	X
1.3 16V wagon	4E-FE	1332	65	1992	1997	X	X	X	X	X	X			X				X	X
1.6 16V	4A-FE	1587	84	1992	1997	X	X	X	X	X	X			X				X	X
1.6 16V wagon	4A-FE	1587	84	1992	1997	X	X	X	X	X	X			X				X	X
1.8 16V	7A-FE	1762	87	1993	1997	X	X	X	X	X	X			X				X	X
2.0 D	2C	1975	54	1992	1997	X	X	X	X	X				X				X	X
2.0 D wagon	2C	1975	54	1992	1997	X	X	X	X	X				X				X	X
Corolla 2000 2002																			
1.4 VVT-i	4ZZ-FE	1398	71	2000	2002	X	X	X		X	X	X		X					X
1.6 VVT-i	3ZZ-FE	1598	81	2000	2002	X	X	X		X	X	X		X					X
1.9 D	1WZ	1867	51	2000	2001	X	X	X		X				X					X
2.0 D4-D	1CD-FTV	1995	66	2000	2002	X	X	X		X				X					X
Corolla 2001																			
1.4 VVT-i	4ZZ-FE	1398	71	2001		X	X	X		X	X	X		X					X
1.6 VVT-i	3ZZ-FE	1598	81	2001		X	X	X		X	X	X		X					X
1.6 VVT-i	3ZZ-FNE	1598	79	2001	2003	X	X	X		X				X					
1.8 VVT-i	1ZZ-FE	1794	99	2001		X	X	X		X		X		X					X
1.8 VVTL-i	2ZZ-GE	1796	141	2001		X	X	X		X	X	X		X					X
2.0 D4-D 110	1CD-FTV	1995	81	2001	2003	X	X	X		X				X					X
2.0 D4-D 116	1CD-FTV	1995	85	2003		X	X	X		X				X					X
2.0 D4-D 90	1CD-FTV	1995	66	2001		X	X	X		X				X					X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
TOYOTA													
Corolla Verso 2001 2004													
1.4 VVT-i	4ZZ-FE	1398	71	2001	2004	X	X	X	X		X		X
1.6 VVT-i	3ZZ-FE	1598	81	2001	2004	X	X	X	X	X	X		X
1.8 VVT-i	1ZZ-FE	1794	99	2001	2004	X	X	X	X	X	X		X
1.8 VVTL-i	2ZZ-GE	1796	141	2001	2004	X	X	X	X		X		X
2.0 D4-D 90	1CD-FTV	1995	66	2001	2004	X	X	X	X		X		X
Corolla Verso 2004													
1.6 16V VVT-i	3ZZ-FE	1598	81	2004		X	X	X	X	X	X		X
1.8 16V VVT-i	1ZZ-FE	1794	95	2004		X	X	X	X	X	X		X
2.0 D-4D	1CD-FTV	1995	85	2004		X	X	X	X	X	X		X
2.2 D-4D	?	2231	100	2005		X							
2.2 D-4D D-CAT	?	2231	130	2005		X							
moet weg		0	0			X		X	X				X
Hi-Ace RCH & KLH 2001													
2.4 (RCH12,22)	2RZ-E	2438	85	2001	2004	X		X	X		X		
2.5 D-4D (KLH12,18,22,28)	2KD-FTV	2494	65	2001		X	X	X	X		X		
2.5 D-4D (KLH12,18,22,28)	2KD-FTV	2494	75	2001		X	X	X	X		X		
2.7 (RCH13,19,22,23,39)	3RZ-FE	2694	106	2001		X	X	X	X		X		
Hi-Ace RCH & LXH 1996 2002													
2.4 (RCH12,13,19,22,23,29) NEW MODEL	2RZ-E	2438	85	2002	2004	X		X	X		X	X	X
2.4 (RCH12,13,19,23,29)	2RZ-E	2438	85	1999	2002	X	X	X	X		X	X	X
2.4 (RCH12,18)	2RZ-E	2438	85	1996	1997	X	X	X	X		X	X	X
2.4 (RCH12,18,22,28)	2RZ-E	2438	85	1997	1999	X	X	X	X		X	X	X
2.4 D (LXH12,18)	2L	2446	58	1996	1997	X	X	X	X		X	X	X
2.4 D (LXH12,18,22,28)	2L	2446	58	1997	1999	X	X	X	X		X	X	X
2.4 D (LXH12,18,22,28)	2L	2446	58	1999	2002	X	X	X	X		X	X	X
2.4 D (LXH12,18,22,28)	2L-T	2446	66	1999	2002	X	X	X	X		X	X	X
2.4 DT (LHX18,22,28)	2L-T	2446	66	1997	1999	X	X	X	X		X	X	X
2.4 DT (LXH12,18)	2L-T	2446	66	1996	1997	X	X	X	X		X	X	X
2.5 D-4D (KLH12,18,22,28) NEW MODEL	2KD-FTV	2494	65	2001		X	X	X	X		X		
2.5 D-4D (KLH12,18,22,28) NEW MODEL	2KD-FTV	2494	75	2001		X	X		X		X		
2.7 (RCH13,19,22,23,29) NEW MODEL	3RZ-FE	2694	106	2002		X	X	X	X		X	X	X
2.7 (RCH13,19,23,29)	3RZ-FE	2694	106	1999	2002	X	X	X	X		X	X	X
Hi-Ace RZH & LH 1989 1996													
2.0 (RZH 102/112)	1RZ	1998	74	1989	1996	X	X	X	X		X	X	X
2.4 (RZH)	2RZ	2438	88	1989	1996	X	X	X	X		X	X	X
2.4 D (LH)	2L	2446	57	1989	1996	X	X	X	X		X	X	X
2.4 D 4x4 (LH 109/119)	2L	2446	57	1989	1996	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
TOYOTA													
Hi-Ace RZH & LH 1989 1996													
2.4 i 4x4 (RZH 108/118)	2RZ-E	2438	88	1989	1996	X	X	X	X	X	X		X
2.4i (RZH)	2RZ-E	2446	88	1989	1996	X	X	X	X	X	X		X
2.8 D (LH)	3L	2779	67	1989	1996	X	X	X	X	X	X		X
Hi-lux 1984 1997													
1.8	2Y	1812	58	1984	1988	X	X	X	X	X	X		X
2.2 4x4	4Y	2237	68	1989	1993	X	X	X	X	X	X		X
2.2i 4x4	4Y-E	2237	72	1989	1997	X	X	X	X	X	X		X
2.3 4x4	22R	2366	81	1988	1997	X	X	X	X	X	X		X
2.3i 4x4	22R-E	2366	81	1988	1997	X	X	X	X	X	X		X
2.4 D	2L	2446	55	1985	1988	X	X	X	X	X	X		X
2.4 D	2L	2446	60	1989	1997	X	X	X	X	X	X		X
2.4 D 4x4	2L	2446	55	1984	1988	X	X	X	X	X	X		X
2.4 D 4x4	2L	2446	60	1989	1997	X	X	X	X	X	X		X
Land Cruiser 100 1998													
4.2 D (HZJ105)	1HZ (Not europe)	4164	96	1998	2003	X							X
4.2 TD (HDJ100)	1HD-FTE	4164	150	1998		X	X	X	X		X		X
4.2 TD (HDJ100)	1HD-T (Not europe)	4164	123	1998	2002	X							X
4.5 (FZJ100,105)	1FZ-FE (Not europe)	4477	165	1998		X		X					X
4.7 V8 (UZJ100)	2UZ-FE	4664	173	1998		X	X	X	X		X		X
Land Cruiser 300 / Prado 2002													
2.7 (RZJ120,125)	3RZ-FE	2694	110	2002	2004	X		X	X		X		
2.7 (TRJ120,125)	2TR-FE	2694	120	2004		X		X	X		X		
3.0 (KZJ120)	1KZ-TE	2982	96	2002		X		X	X		X		
3.0 (LJ120,125)	5L-E	2986	70	2002		X		X	X		X		
3.0 TD (KDJ120,125)	1KD-FTV	2982	120	2002		X	X	X	X		X		
4.0 V6 (GRJ120,125)	1GR-FE	3956	183	2003		X	X	X	X		X		
test						X		X					
Land Cruiser 70 1984 1999													
2.4 (RJ70,73)	22R	2366	81	1984	1995	X	X	X	X		X	X	X
2.4 D (LJ70,72,73)	2L	2446	55	1985	1995	X	X	X	X		X	X	X
2.4 TD (LJ70,72,73)	2L-T	2446	66	1990	1995	X	X	X	X		X		X
2.4i (RJ70,73)	22R-E	2367	84	1990	1998	X	X		X		X		X
3.4 D (BJ60,70,73,75)	3B	3431	66	1984	1990	X	X	X	X		X		
3.4 TD (BJ60,70,73,75)	13B-T	3431	92	1986	1990	X	X	X	X		X		
3.5 D (PZJ70,73,75)	1PZ	3469	85	1990	1998	X	X	X	X		X		X
4.0 (FJ70,73,75)	3F	3956	107	1990	1998	X	X		X		X		X
4.0 D (HJ60,61,75)	2H	3980	74	1986	1990	X	X	X	X		X		

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diag.	Engine	Service Reset	Air Cond.	Wir. Diag.	Repair Times	Fuses & Relays
TOYOTA																			
Land Cruiser 70 1984 1999																			
4.0 TD (HJ60,61,75)	12H-T	3980	100	1987	1990	X	X	X	X	X				X					
4.2 D (HZJ70,73,75)	1HZ	4164	96	1990	1999	X	X	X	X	X				X	X				X
4.2 D (HZJ71,74,78,79)	1HZ	4164	96	1999		X			X										
4.2 TD (HZJ70,73,75)	1HD-T	4164	123	1990	1998	X	X	X	X	X				X	X		X	X	
4.2 TD (HDJ78,79)	1HD-FTE	4164		2002		X			X										
4.5 (FZJ70,73,75)	1FZ-F	4477			1999	X			X										
4.5i (FZJ70,73,75)	1FZ-FE	4477	158	1994	1999	X	X	X	X	X					X		X	X	
4.5i (FZJ71,74,78,79)	1FZ-FE	4477	165	1999	2003	X			X										
Land Cruiser 80 1990 1998																			
4.0i (FJ80)	3-FE	3956	114	1990	1995										X				X
4.2 D (HZJ80)	1HZ	4164	96	1990	1998									X	X				X
4.2 TD (HDJ80)	1HD-T	4164	123	1990	1998									X	X				X
4.2 TD (HZJ80)	1HD-FT	4164	125	1996	1998										X				X
4.5 (FZJ80)	1FZ-F	4477	145	1995	1998										X				X
4.5i (FZJ80)	1FZ-FE	4477	158	1992	1998			X							X				X
Land Cruiser 90 / Prado 1996 2002																			
2.7 (RZJ90,95)	3RZ-F	2694	97	1996	2000	X								X	X				X
2.7 (RZJ90,95)	3RZ-FE	2694	112	1996	2002	X								X	X				X
2.8 D (LJ90,95)	3L	2779	65	1996	2002	X								X	X				X
3.0 TD (KDJ90,95)	1KD-FTV	2982	120	2001	2002	X	X												X
3.0 TD (KZJ90,95)	1KZ-T	2982	88	1996	2001	X		X						X	X				X
3.0 TD (KZJ90,95)	1KZ-TE	2982	92	1996	2002	X								X	X				X
3.4 V6 (VZJ90,95)	5VZ-FE	3378	131	1996	2002	X	X	X							X				X
Lite Ace 1992 1996																			
1.5	5K	1486	52	1992	1996	X	X	X		X				X					X
2.0	3Y	1998	65	1992	1996	X	X	X		X				X					X
2.0 D	2C	1975	51	1992	1996	X	X	X		X				X					X
2.2	4Y-E	2236	75	1992	1996	X	X	X		X				X					X
MR2 1984 1990																			
1.6i	4A-GE	1600	91	1984	1989	X	X	X	X	X				X			X		
1.6i	4A-GE	1587	85	1986	1990	X	X	X	X	X				X			X		
MR2 1990 1994																			
2.0 GTi 16V	3S-GE	1998	115	1990	1994	X	X	X	X	X	X			X			X		
2.0i	3S-FE	1998	88	1990	1994	X	X	X	X	X				X					
MR2 1999																			
1.8	1ZZ-FE	1794	103	1999		X	X	X		X				X					X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays
TOYOTA													
Paseo 1996 1999													
1.5i	5E-FE	1497	55	1996	1999	X	X	X	X	X		X	X
Picnic 1996 2001													
2.0 16V	3S-FE	1998	94	1996	2001	X	X	X	X	X		X	X
2.2 TD	3C-TE	2184	66	1997	2001	X	X	X	X	X		X	X
Previa 1990 2000													
2.4i	2TZ-FE	2438	99	1990	2000	X	X	X	X	X		X	X
Previa 2000													
2.0 D4-D	1CD-FTV	1995	85	2001		X	X	X	X	X			X
2.4 VVT-i	2AZ-FE	2362	115	2000		X	X	X	X	X			X
Prius NHW11 2000 2004													
1.5 16V	1NZ-FXE	1497	53	2000	2004	X	X	X			X		
Prius NHW20 2004													
1.5 16V	1NZ-FXE	1497	57	2004		X	X	X	X		X		
RAV4 2000 2006													
1.8 VVT-i	1ZZ-FE	1794	92	2000	2006	X	X	X	X		X		X
2.0 D4-D	1CD-FTV	1995	85	2001	2006	X	X	X	X		X		X
2.0 VVT-i	1AZ-FE	1998	110	2000	2006	X	X	X	X		X		X
RAV4 1994 2000													
2.0i	3S-FE	1998	96	1994	2000	X	X	X	X		X	X	X
Starlet 1984 1989													
1.0	1E-L	999	40	1984	1989	X	X	X	X		X		
1.3 12V	2E	1295	55	1984	1989	X	X	X	X		X		
1.5 D	1N	1453	40	1986	1989	X	X	X	X		X		
Starlet 1989 1996													
1.0	1E-L	999	40	1989	1992	X	X	X	X		X	X	X
1.3 i	2E-E	1296	55	1989	1995	X	X	X	X	X		X	X
1.5 D	1N	1453	40	1990	1996	X	X	X	X		X		X
Starlet 1996 1999													
1.3i 16V	4E-FE	1332	55	1996	1999	X	X	X	X	X		X	X
Supra 1986 1993													
2.8 i T.C.	5M-GE	2759	125	1982	1984		X		X		X		
2.8 i T.C.	5M-GE	2759	125	1985	1986		X		X		X		
3.0 i T.C.	7M-GE	2954	150	1987	1989		X	X	X		X	X	
3.0 i Turbo	7M-GTE	2954	173	1986	1993		X	X	X		X	X	
Supra 1993 1999													
3.0 i Turbo	2JZ-GTE	2997	243	1993	1996	X		X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
TOYOTA													
Yaris 1999 2006													
1.0 VVT-i	1SZ-FE	998	50	1999	2006	X	X	X	X	X	X	X	X
1.3 VVT-i	2NZ-FE	1299	63	1999	2006	X	X	X	X	X	X	X	X
1.3 VVT-i	2SZ-FE	1298	64	2004	2006	X	X	X	X	X	X	X	X
1.4 D4-D	1ND-TV	1364	55	2002	2006	X	X	X	X	X			X
1.5 VVT-i	1NZ-FE	1497	78	1999	2006	X	X	X	X	X	X		X
Yaris Verso 1999 2006													
1.3 VVT-i	2NZ-FE	1299	63	1999	2006	X	X	X	X	X	X		X
1.4 D4-D	1ND-TV	1364	55	2002	2006	X	X	X	X	X			X
1.5 VVT-i	1NZ-FE	1497	78	1999	2006	X	X	X	X	X	X		X
TVR													
Chimaera 1992 2002													
4.0	V8	3952	175	1992	2002	X		X					
5.0	V8	4997	240	1997	2002	X		X					
Griffith 1990 2002													
Griffith 4.0	4.0 V8	3952	175	1990	2002	X		X					
Griffith 500	5.0 V8	4998	240	1990	2002	X		X					
VOLKSWAGEN													
Bora 1999 2005													
1.4 16V	AHW	1390	55	1998	2005	X	X	X	X	X	X	X	X
1.4 16V	AKQ	1390	55	1998	2000	X	X	X	X	X	X	X	X
1.4 16V	APE	1390	55	1999	2000	X	X	X	X	X	X		X
1.4 16V	AXP	1390	55	2000	2001	X	X	X	X	X	X		X
1.4 16V	BCA	1390	55	2001	2005	X	X	X	X	X	X		X
1.6	AEH	1595	74	1998	2005	X	X	X	X	X	X	X	X
1.6	AKL	1595	74	1998	2005	X	X	X	X	X	X	X	X
1.6	APF	1595	74	1998	2005	X	X	X	X	X	X		X
1.6	AVU	1597	75	2000	2002	X	X	X	X	X	X		X
1.6	BFQ	1595	75	2002	2005	X	X	X	X	X	X		X
1.6 16V	ATN	1595	77	1999	2000	X	X	X	X	X	X		X
1.6 16V	AUS	1597	77	2000	2000	X	X	X	X	X	X		X
1.6 16V	AZD	1597	77	2000	2001	X	X	X	X	X	X		X
1.6 16V	BCB	1595	77	2001	2005	X	X	X	X		X		X
1.6 FSi	BAD	1595	81	2001	2005	X	X	X	X		X		X
1.8	AGN	1781	92	1998	2000	X	X	X	X	X	X	X	X
1.8 Turbo	AGU	1781	110	2000	2005	X	X	X	X	X	X	X	X
1.8 Turbo	AQA	1781	110	1999	2005	X	X	X	X		X		X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
VOLKSWAGEN													
Bora 1999 2005													
1.8 Turbo	ARX (empty)	1781	110	2000	2001	X	X	X	X				X
1.8 Turbo	ARZ	1781	110	1999	2005	X	X	X	X	X		X	X
1.8 Turbo	AUM	1781	110	2000	2005	X	X	X	X	X		X	X
1.8 Turbo	AUQ	1781	132	2002	2005	X	X	X	X	X		X	X
1.9 SDi	AGP	1896	50	2000	2001	X	X	X	X	X	X	X	X
1.9 SDi	AQM	1896	50	1998	2005	X	X	X	X	X		X	X
1.9 TDi	AGR	1896	66	1998	2002	X	X	X	X	X	X	X	X
1.9 TDi	AHF	1896	81	1998	2005	X	X	X	X	X	X	X	X
1.9 TDi	AJM	1896	85	1998	2001	X	X	X	X	X		X	X
1.9 TDi	ALH	1896	66	1998	2005	X	X	X	X	X	X	X	X
1.9 TDi	ARL	1896	110	2000	2005	X	X	X	X	X		X	X
1.9 TDi	ASV	1896	81	2000	2005	X	X	X	X	X		X	X
1.9 TDi	ASZ	1896	96	2001	2005	X	X	X	X			X	X
1.9 TDi	ATD	1896	74	2000	2005	X	X	X	X	X		X	X
1.9 TDi	AUY	1896	85	2000	2001	X	X	X	X	X		X	X
1.9 TDi	AXR	1896	74	2001	2005	X	X	X	X	X		X	X
2.0	APK	1984	85	1998	2005	X	X	X	X	X		X	X
2.0	AQY	1984	85	1998	2005	X	X	X	X	X		X	X
2.0	AZH	1984	85	2000	2001	X	X	X	X	X		X	X
2.0	AZJ	1984	85	2001	2005	X	X	X	X	X		X	X
VR5	AGZ	2298	110	1998	2001	X	X	X	X	X	X	X	X
VR5	AQN	2324	125	2000	2005	X	X	X	X	X		X	X
VR6	AQP	2792	150	1999	2000	X	X	X	X	X		X	X
VR6	AUE	2792	150	2000	2001	X	X	X	X	X		X	X
VR6	BDE	2792	150	2001	2005	X	X	X	X	X		X	X
Caddy 1996 2003													
1.4	AEX	1390	44	1996	1998	X	X	X	X			X	X
1.4	AUD	1390	44	2000	2003	X	X	X	X			X	X
1.4	AKV	1390	44	1997	2000	X	X	X	X			X	X
1.4 16V	AUA	1390	55	2000	2003	X	X	X	X			X	X
1.6	1F	1598	55	1996	1997	X	X	X	X			X	X
1.6	AEE	1598	55	1996	2001	X	X	X	X			X	X
1.7 SDi	AHB	1718	42	1996	2000	X	X	X	X			X	X
1.9 D	1Y	1896	47	1996	2003	X	X	X	X			X	X
1.9 SDi	AEY	1896	47	1996	2000	X	X	X	X			X	X
1.9 SDi	AYQ	1896	47	2000	2003	X	X	X	X			X	X
1.9 TDi	1Z (Empty)	1896	66	1996	1997	X	X	X	X			X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir. Diagram	Repair Times	Fuses & Relays
VOLKSWAGEN																		
Caddy 1996 2003																		
1.9 TDi	ALE	1896	66	1997	2000	X	X	X	X	X			X	X	X		X	X
Caddy 2004																		
1.4 16V	BCA	1390	55	2004		X	X	X	X	X				X				
1.6	BSE	1595	75	2005		X			X									
1.6	BSF	1595	75	2006		X			X									
1.6 8V	BGU	1595	75	2004	2006	X	X	X	X	X				X				
1.9 TDi	BJB	1896	77	2004		X	X	X	X	X				X				
1.9 TDi	BKC	1896	77	2005		X			X					X				
1.9 TDi	BLS	1896	77	2005		X			X					X				
2.0 SDi	BDJ	1968	51	2004		X	X	X	X	X				X				
2.0 SDi	BST	1968	51	2006		X			X					X				
wa						X		X	X									
Corrado 1988 1995																		
1.8 16V	KR	1781	100	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X
1.8 G60	PG	1781	118	1988	1995	X	X	X	X	X	X	X	X	X		X	X	X
2.0	2E	1984	85	1993	1995	X	X	X	X	X	X	X	X	X		X	X	X
2.0	ADY	1984	85	1994	1995	X	X	X	X	X	X	X	X	X			X	X
2.0 16V	9A	1984	100	1991	1995	X	X	X	X	X	X	X	X	X		X	X	X
2.8 VR6	AAA	2792	132	1991	1995	X	X	X	X	X	X	X	X	X			X	X
2.9 VR6	ABV	2861	140	1991	1995	X	X	X	X	X	X	X	X	X		X	X	X
Fox 2004																		
1.0 8V	AQZ	999	53	2004	2005	X	X	X	X	X				X				X
1.0 8V alcohol	BJE	999	53	2004	2005	X			X									X
1.2 8V	BMD	1198	40	2005		X	X	X	X	X				X				X
1.4 8V	BKR	1390	55	2005		X	X	X	X	X				X				X
1.4 TDi	BNM	1422	51	2005		X	X	X	X	X				X				X
1.6 8V	BAH	1598	74	2004	2005	X	X	X	X	X				X				X
1.6 8V	BJA	1598	74	2004	2005	X	X	X	X	X				X				X
1.6 8V	BLH	1598	74	2004	2005	X	X	X	X	X				X				X
wa						X		X	X									X
Golf II 1983 1992																		
1.0	GN	1043	33	1983	1991	X	X	X	X	X			X	X			X	
1.0	HZ	1043	33	1983	1991	X	X	X	X	X		X	X	X			X	
1.3	2G	1272	40	1987	1991	X	X	X	X	X		X	X	X			X	
1.3	GT	1272	43	1984	1987	X	X	X	X	X			X	X			X	
1.3	HK	1272	40	1983	1991	X	X	X	X	X			X	X			X	
1.3	MH	1272	40	1983	1991	X	X	X	X	X		X	X	X			X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Golf II 1983 1992													
1.3	NU	1272	40	1983	1991	X	X	X	X	X	X	X	X
1.3	NZ	1272	40	1989	1991	X	X	X	X	X	X	X	X
1.6	EZ	1595	55	1983	1989	X	X	X	X	X	X	X	X
1.6	EZA	1595	55	1983	1989	X	X	X	X	X	X	X	X
1.6	HM	1595	55	1984	1988	X	X	X	X	X	X	X	X
1.6	PN	1595	51	1986	1991	X	X	X	X	X	X	X	X
1.6	RF	1595	55	1983	1989	X	X	X	X	X	X	X	X
1.6 D	JP	1588	40	1983	1991	X	X	X	X	X	X	X	X
1.6 D Kat.	1V	1588	44	1989	1991	X	X	X	X	X	X	X	X
1.6 Kat.	EZ	1595	51	1983	1992	X	X	X	X	X	X	X	X
1.6 Kat.	EZA	1595	51	1983	1992	X	X	X	X	X	X	X	X
1.6 Kat.	RF	1595	51	1983	1992	X	X	X	X	X	X	X	X
1.6 TD	JR	1588	51	1983	1991	X	X	X	X	X	X	X	X
1.6 TD	MF	1588	51	1983	1991	X	X	X	X	X	X	X	X
1.6 TD	RA	1588	60	1989	1991	X	X	X	X	X	X	X	X
1.6 TD	SB	1588	60	1989	1991	X	X	X	X	X	X	X	X
1.8	EV	1781	79	1983	1993	X	X	X	X	X	X	X	X
1.8	GU	1781	66	1983	1991	X	X	X	X	X	X	X	X
1.8	GX	1781	66	1983	1991	X	X	X	X	X	X	X	X
1.8	HV	1781	66	1983	1991	X	X	X	X	X	X	X	X
1.8	PB	1781	82	1987	1991	X	X	X	X	X	X	X	X
1.8	PF	1781	82	1987	1991	X	X	X	X	X	X	X	X
1.8	RD	1781	79	1983	1993	X	X	X	X	X	X	X	X
1.8	RH	1781	62	1987	1990	X	X	X	X	X	X	X	X
1.8	RP	1781	66	1987	1991	X	X	X	X	X	X	X	X
1.8 16V	KR	1781	102	1986	1991	X	X	X	X	X	X	X	X
1.8 16V	PL	1781	95	1985	1991	X	X	X	X	X	X	X	X
1.8 G60	PG	1781	118	1989	1991	X	X	X	X	X	X	X	X
1.8 Kat.	RV	1781	77	1987	1991	X	X	X	X	X	X	X	X
1.8 Rallye	1H	1781	118	1989	1989	X	X	X	X	X	X	X	X
1.8 Syncro	GX	1781	66	1986	1988	X	X	X	X	X	X	X	X
1.8 Syncro Country	1P	1781	72	1988	1991	X	X	X	X	X	X	X	X
1.8 Syncro G60	PG	1781	118	1990	1991	X	X	X	X	X	X	X	X
Golf III (Cabrio 1998->) 1991 1998													
1.4 (40/44 kW)	ABD	1391	44	1991	1995	X	X	X	X	X	X	X	X
1.4 (40/44 kW)	AEX	1390	44	1995	1998	X	X	X	X	X	X	X	X
1.4 (40/44 kW)	APQ	1390	44	1997	1998	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Golf III (Cabrio 1998->)	1991	1998											
1.6	AEA	1598	55	1994	1995	X	X	X	X	X	X	X	X
1.6	AFT	1595	74	1996	2000	X	X	X	X	X	X	X	X
1.6	AKS	1595	74	1997	2000	X	X	X	X	X	X	X	X
1.6	ABU	1598	55	1992	1994	X	X	X	X	X	X	X	X
1.6	AEE	1598	55	1995	1998	X	X	X	X	X	X	X	X
1.6	AEK	1595	74	1994	1996	X	X	X	X	X	X	X	X
1.8	ANN	1781	55	1998	2000	X	X	X	X	X	X	X	X
1.8	ANP	1781	66	1998	2000	X	X	X	X	X	X	X	X
1.8	AAM	1781	55	1991	2000	X	X	X	X	X	X	X	X
1.8	ABS	1781	66	1991	1995	X	X	X	X	X	X	X	X
1.8	ADZ	1781	66	1994	2000	X	X	X	X	X	X	X	X
1.9 D	1Y	1896	47	1991	1999	X	X	X	X	X	X	X	X
1.9 SDi	AEY	1896	47	1995	2000	X	X	X	X	X	X	X	X
1.9 TD	AAZ	1896	55	1991	1999	X	X	X	X	X	X	X	X
1.9 TDi	1Z	1896	66	1993	1997	X	X	X	X	X	X	X	X
1.9 TDi	AFN	1896	81	1996	1999	X	X	X	X	X	X	X	X
1.9 TDi	AHU	1896	66	1996	2000	X	X	X	X	X	X	X	X
1.9 TDi	ALE	1896	66	1996	2001	X	X	X	X	X	X	X	X
1.9 TDi	AVG	1896	81	1999	2000	X	X	X	X	X	X	X	X
2.0	AGG	1984	85	1995	2002	X	X	X	X	X	X	X	X
2.0	AKR	1984	85	1997	2000	X	X	X	X	X	X	X	X
2.0	ATU	1984	85	1999	2000	X	X	X	X	X	X	X	X
2.0	AWF	1984	85	2000	2002	X	X	X	X	X	X	X	X
2.0	AWG	1984	85	2000	2002	X	X	X	X	X	X	X	X
2.0	2E	1984	85	1991	1994	X	X	X	X	X	X	X	X
2.0	ADY	1984	85	1994	1997	X	X	X	X	X	X	X	X
2.0 16V	ABF	1984	110	1992	1998	X	X	X	X	X	X	X	X
2.8 VR6	AAA	2792	128	1992	1998	X	X	X	X	X	X	X	X
2.9 VR6	ABV	2861	140	1994	1998	X	X	X	X	X	X	X	X
Golf IV	1998	2003											
1.4 16V	AHW	1390	55	1998	2003	X	X	X	X	X	X	X	X
1.4 16V	AKQ	1390	55	1997	2000	X	X	X	X	X	X	X	X
1.4 16V	APE	1390	55	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	AXP	1390	55	2000	2001	X	X	X	X	X	X	X	X
1.4 16V	BCA	1390	55	2001	2003	X	X	X	X	X	X	X	X
1.6	AEH	1595	74	1998	2003	X	X	X	X	X	X	X	X
1.6	AKL	1595	74	1997	2003	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Golf IV 1998 2003													
1.6	APF	1595	74	1998	2003	X	X	X	X	X	X	X	X
1.6	AVU	1595	75	2000	2002	X	X	X	X	X	X	X	X
1.6	BFQ	1595	75	2002	2003	X	X	X	X	X	X	X	X
1.6 16V	ATN	1597	77	1999	2000	X	X	X	X	X	X	X	X
1.6 16V	AUS	1597	77	2000	2000	X	X	X	X	X	X	X	X
1.6 16V	AZD	1597	77	2000	2001	X	X	X	X	X	X	X	X
1.6 16V	BCB	1597	77	2001	2003	X	X	X	X	X	X	X	X
1.6 FSi	BAD	1597	81	2002	2003	X	X	X	X	X	X	X	X
1.8	AGN	1781	92	1997	2000	X	X	X	X	X	X	X	X
1.8 Turbo	AGU	1781	110	1997	2003	X	X	X	X	X	X	X	X
1.8 Turbo	AQA	1781	110	1998	2000	X	X	X	X	X	X	X	X
1.8 Turbo	ARZ	1781	110	1999	2000	X	X	X	X	X	X	X	X
1.8 Turbo	AUM	1781	110	2000	2003	X	X	X	X	X	X	X	X
1.8 Turbo (GTi)	AUQ	1781	132	2001	2003	X	X	X	X	X	X	X	X
1.9 SDi	AGP	1896	50	1997	2001	X	X	X	X	X	X	X	X
1.9 SDi	AQM	1896	50	1998	2003	X	X	X	X	X	X	X	X
1.9 TDi	AGR	1896	66	1997	2003	X	X	X	X	X	X	X	X
1.9 TDi	AHF	1896	81	1997	2003	X	X	X	X	X	X	X	X
1.9 TDi	AJM	1896	85	1999	2001	X	X	X	X	X	X	X	X
1.9 TDi	ALH	1896	66	1997	2003	X	X	X	X	X	X	X	X
1.9 TDi	ARL	1896	110	2000	2003	X	X	X	X	X	X	X	X
1.9 TDi	ASV	1896	81	2000	2003	X	X	X	X	X	X	X	X
1.9 TDi	ASZ	1896	96	2001	2003	X	X	X	X	X	X	X	X
1.9 TDi	ATD	1896	74	2000	2003	X	X	X	X	X	X	X	X
1.9 TDi	AUY	1896	85	2000	2000	X	X	X	X	X	X	X	X
1.9 TDi	AXR	1896	74	2001	2003	X	X	X	X	X	X	X	X
2.0	APK	1984	85	1998	2003	X	X	X	X	X	X	X	X
2.0	AQY	1984	85	1998	2003	X	X	X	X	X	X	X	X
2.0	AZH	1984	85	2000	2001	X	X	X	X	X	X	X	X
2.0	AZJ	1984	85	2001	2003	X	X	X	X	X	X	X	X
2.0 LPG (75/85kW)	BEH	1984	85	2002	2003	X	X	X	X	X	X	X	X
R32	BFH	3189	177	2002	2004	X	X	X	X	X	X	X	X
R32	BJS	3189	177	2003	2004	X	X	X	X	X	X	X	X
R32	BML	3189	177	2003	2004	X	X	X	X	X	X	X	X
VR5	AGZ	2324	110	1997	2001	X	X	X	X	X	X	X	X
VR5	AQN	2324	125	2000	2003	X	X	X	X	X	X	X	X
VR6	AQP	2792	150	1999	2000	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
VOLKSWAGEN													
Golf IV 1998 2003													
VR6	AUE	2792	150	2000	2001	X	X	X	X	X	X	X	X
VR6	BDE	2792	150	2001	2003	X	X	X	X		X	X	X
Golf V 2003													
1.4 16V	BCA	1390	55	2003		X	X	X	X		X	X	X
1.4 16V FSi	BKG	1390	66	2003	2005	X	X	X	X		X	X	X
1.4 16V FSi	BLN	1390	66	2004		X	X	X	X		X	X	X
1.6	BGU	1595	75	2003		X	X	X	X		X	X	X
1.6	BSE (NO DATA)	1595	75	2004		X		X					X
1.6 16V	BSF (NO DATA)	1595	75	2005		X		X					X
1.6 16V FSi	BAG	1598	85	2003	2005	X	X	X	X		X	X	X
1.6 16V FSi	BLF	1598	85	2004		X	X	X	X		X	X	X
1.6 16V FSi	BLP	1598	85	2004		X	X	X	X		X	X	X
1.9 TDi	BJB	1896	77	2003		X	X	X	X		X	X	X
1.9 TDi	BKC	1896	77	2003		X	X	X	X		X	X	X
1.9 TDi	BRU	1896	66	2003		X	X	X	X		X	X	X
1.9 TDi (DPF)	BLS (NO DATA)	1896	77	2005		X		X					X
2.0	BHY (NO DATA)	1984	77	2004		X		X					X
2.0 16V FSi	AXW	1984	110	2003	2005	X	X	X	X		X	X	X
2.0 16V FSi	BLR	1984	110	2004		X	X	X	X		X	X	X
2.0 16V FSi	BLX	1984	110	2003		X	X	X	X		X	X	X
2.0 16V FSi	BLY	1984	110	2005		X	X	X	X		X	X	X
2.0 16V FSi	BVX (NO DATA)	1984	110	2005		X		X					X
2.0 16V FSi	BVY (NO DATA)	1984	110	2005		X		X					X
2.0 16V FSi	BVZ (NO DATA)	1984	110	2005		X		X					X
2.0 SDi	BDK	1968	55	2003		X	X	X	X		X	X	X
2.0 TDi	AZV	1968	100	2003		X	X	X	X		X	X	X
2.0 TDi	BKD	1968	103	2003		X	X	X	X		X	X	X
2.0 TDi	BMN (NO DATA)	1968	125	2005		X		X					X
2.0 TDi (DPF)	BMM	1968	103	2004		X	X	X	X		X	X	X
2.0 TFSi	AXX	1968	147	2004		X	X	X	X		X	X	X
2.0 TFSi	BPY (NO DATA)	1984	147	2004		X		X					X
2.0 TFSi	BWA (NO DATA)	1984	136	2005		X		X					X
R32	BUB (NO DATA)	3189	184	2005		X		X					X
temp 4motion						X		X					
temp brakes						X		X					
Golf Plus 2005													
1.4 16V	BCA	1390	55	2005		X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram		
VOLKSWAGEN													
Golf Plus 2005													
1.4 16V FSi	BLN	1390	66	2006		X	X	X	X		X		X
1.6	BSE	1595	75	2006		X	X	X	X		X		X
1.6 16V	BSF	1595	75	2006		X	X	X	X		X		X
1.6 16V FSi	BLF	1598	85	2005		X	X	X	X	X	X		X
1.6 16V FSi	BLP	1598	85	2005	2006	X	X	X	X	X	X		X
1.9 TDi	BKC	1968	77	2005		X	X	X	X	X	X	X	X
1.9 TDi	BRU	1896	66	2006		X	X	X	X	X	X		X
2.0 16V FSi	BLR	1984	110	2005		X	X	X	X		X		X
2.0 16V FSi	BLY	1984	110	2005		X	X	X	X		X		X
2.0 16V FSi	BVY	1984	110	2006		X	X	X	X		X		X
2.0 16V FSi	BVZ	1984	110	2006		X	X	X	X		X		X
2.0 TDi	BKD	1968	103	2005		X	X	X	X	X	X	X	X
Jetta II 1984 1992													
1.0	HZ	1043	37	1986	1992	X	X	X	X	X			
1.1	GG	1092	37	1979	1984	X	X	X	X				
1.3	2G	1272	40	1986	1989	X	X	X	X	X		X	
1.3	GT	1272	43	1984	1987	X	X	X	X	X		X	
1.3	HK	1272	40	1984	1989	X	X	X	X	X		X	
1.3	MH	1272	40	1985	1988	X	X	X	X	X		X	
1.3	NZ	1272	40	1987	1992	X	X	X	X	X		X	
1.6	EZ	1595	55	1984	1989	X	X	X	X	X		X	
1.6	EZA	1595	55	1984	1989	X	X	X	X	X	X	X	
1.6	HM	1595	55	1984	1988	X	X	X	X	X	X	X	
1.6	PN	1595	51	1986	1992	X	X	X	X	X	X	X	
1.6	RF	1595	55	1984	1989	X	X	X	X	X		X	
1.6 D	JP	1588	40	1984	1992	X	X	X	X	X	X	X	
1.6 D Kat.	1V	1588	44	1989	1992	X	X	X	X	X	X	X	
1.6 Kat.	EZ	1595	51	1983	1992	X	X	X	X	X	X	X	
1.6 Kat.	EZA	1595	51	1983	1992	X	X	X	X	X	X	X	
1.6 Kat.	RF	1595	51	1983	1992	X	X	X	X	X		X	
1.6 TD	JR	1588	51	1984	1992	X	X	X	X	X	X	X	
1.6 TD	MF	1588	51	1984	1992	X	X	X	X	X		X	
1.6 TD	RA	1588	60	1989	1992	X	X	X	X	X	X	X	
1.6 TD	SB	1588	60	1989	1992	X	X	X	X	X	X	X	
1.8	DX	1781	82	1982	1984	X	X	X	X	X			
1.8	EV	1781	79	1985	1986	X	X	X	X	X		X	
1.8	GU	1781	66	1984	1987	X	X	X	X	X	X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Jetta II 1984 1992													
1.8	GX	1781	66	1986	1992	X	X	X	X	X	X	X	X
1.8	HV	1781	66	1984	1987	X	X	X	X	X	X	X	X
1.8	PB	1781	82	1987	1992	X	X	X	X	X	X	X	X
1.8	PF	1781	82	1987	1992	X	X	X	X	X	X	X	X
1.8	RD	1781	79	1986	1992	X	X	X	X	X	X	X	X
1.8	RH	1781	66	1984	1987	X	X	X	X	X	X	X	X
1.8	RP	1781	66	1987	1992	X	X	X	X	X	X	X	X
1.8 16V	PL	1781	95	1987	1992	X	X	X	X	X	X	X	X
1.8 16V	KR	1781	102	1986	1992	X	X	X	X	X	X	X	X
1.8 Kat.	RH	1781	62	1986	1990	X	X	X	X	X	X	X	X
1.8 Syncro	GU	1781	66	1986	1992	X	X	X	X	X	X	X	X
1.8 Syncro	GX	1781	66	1986	1988	X	X	X	X	X	X	X	X
1.8 Syncro G60	PG	1781	118	1990	1992	X	X	X	X	X	X	X	X
LT 1996 2006													
2.3	AGL	2295	105	1996	2001	X	X	X	X	X	X	X	X
2.5 SDi	AGX	2461	55	1996	2001	X	X	X	X	X	X	X	X
2.5 TDi	AHD	2461	75	1996	1999	X	X	X	X	X	X	X	X
2.5 TDi	ANJ	2461	80	1999		X	X	X	X	X	X	X	X
2.5 TDi	APA	2461	66	1999	2001	X	X	X	X	X	X	X	X
2.5 TDi	AVR (empty)	2461	80	2002		X	X	X	X	X	X	X	X
2.5 TDi	BBE	2461	61	2001		X	X	X	X	X	X	X	X
2.5 TDi	BBF	2461	70	2001		X	X	X	X	X	X	X	X
2.8 TD	BCQ (empty)	2799	116	2002		X	X	X	X	X	X	X	X
2.8 TDi	AGK	2799	92	1997	1999	X	X	X	X	X	X	X	X
2.8 TDi	ATA	2799	96	1999	2002	X	X	X	X	X	X	X	X
2.8 TDi	AUH	2799	116	2002		X	X	X	X	X	X	X	X
LT 1983 1996													
2.4	DL	2383	66	1983	1986	X	X	X	X	X	X	X	X
2.4	DL	2383	66	1986	1992	X	X	X	X	X	X	X	X
2.4	HS	2383	61	1983	1986	X	X	X	X	X	X	X	X
2.4D	1S	2383	51	1988	1992	X	X	X	X	X	X	X	X
2.4D	ACT	2383	51	1992	1996	X	X	X	X	X	X	X	X
2.4D	DW	2383	55	1983	1992	X	X	X	X	X	X	X	X
2.4i	1E	2383	69	1988	1996	X	X	X	X	X	X	X	X
2.4TD	ACL	2383	70	1991	1996	X	X	X	X	X	X	X	X
2.4TD	1G	2383	68	1989	1992	X	X	X	X	X	X	X	X
2.4TD	DV	2383	75	1983	1992	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diag.	Service Reset	Repair Times					
						Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diag.	Fuses & Relays				
VOLKSWAGEN																
Lupo 1998 2005																
1.0	AER	999	37	1998	2002	X	X	X	X	X	X	X	X	X	X	X
1.0	AHT	999	37	1998	2002	X	X	X	X	X	X	X	X	X	X	X
1.0	ALD	999	37	1999	2002	X	X	X	X	X	X	X	X	X	X	X
1.0	ALL	999	37	1998	2002	X	X	X	X	X	X	X	X	X	X	X
1.0	ANV	999	37	1999	2002	X	X	X	X	X	X	X	X	X	X	X
1.0	AUC	999	37	2000	2005	X	X	X	X	X	X	X	X	X	X	X
1.2 TDi (3L)	ANY	1191	45	1999	2002	X	X	X	X	X	X	X	X	X	X	X
1.2 TDi (3L)	AYZ	1191	45	2000	2005	X	X	X	X	X	X	X	X	X	X	X
1.4	AUD	1390	44	2000	2005	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	AFK	1390	74	1999	2002	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	AHW	1390	55	1998	2005	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	AKQ	1390	55	1998	2002	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	APE	1360	55	1999	2002	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	AQQ	1390	74	1999	2002	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	AUA	1390	55	2000	2002	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	AUB	1390	74	2000	2005	X	X	X	X	X	X	X	X	X	X	X
1.4 16V	BBY	1390	55	2002	2005	X	X	X	X	X	X	X	X	X	X	X
1.4 16V (FSi)	ARR	1398	77	2000	2004	X	X	X	X	X	X	X	X	X	X	X
1.4 TDi	AMF	1422	55	1999	2005	X	X	X	X	X	X	X	X	X	X	X
1.6 16V (GTi)	AVY	1598	92	2000	2005	X	X	X	X	X	X	X	X	X	X	X
1.7 SDi	AKU	1716	44	1998	2005	X	X	X	X	X	X	X	X	X	X	X
New Beetle 1998																
1.4 16V	BCA	1390	55	2001	2004	X	X	X	X	X	X	X	X	X	X	X
1.6	AWH	1595	74	1999	2001	X	X	X	X	X	X	X	X	X	X	X
1.6	AYD	1595	75	2000	2004	X	X	X	X	X	X	X	X	X	X	X
1.6	BFS	1595	75	2002		X	X	X	X	X	X	X	X	X	X	X
1.8 Turbo	AVC	1781	110	1999	2001	X	X	X	X	X	X	X	X	X	X	X
1.8 Turbo	AWU	1781	110	2000		X	X	X	X	X	X	X	X	X	X	X
1.9 TDi	ALH	1896	66	1998	2004	X	X	X	X	X	X	X	X	X	X	X
1.9 TDi	ATD	1896	74	2000	2004	X	X	X	X	X	X	X	X	X	X	X
1.9 TDi	AXR	1896	74	2003		X	X	X	X	X	X	X	X	X	X	X
2.0	AQY	1984	85	1998	2003	X	X	X	X	X	X	X	X	X	X	X
2.0	AZJ	1984	85	2001	2004	X	X	X	X	X	X	X	X	X	X	X
3.2 RSi	AXJ	3188	165	2000	2001	X	X	X	X	X	X	X	X	X	X	X
VR5	AQN	2324	125	2000	2004	X	X	X	X	X	X	X	X	X	X	X
Passat II 1985 1988																
1.3	EP	1296	44	1984	1986	X	X	X	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Passat II 1985 1988													
1.3 L,GL	FY/FZ	1272	44	1980	1983	X	X						X
1.6	DT/DTA/RL	1595	55	1984	1988	X	X	X	X		X	X	X
1.6	JU	1588	55	1985	1988	X	X						X
1.6 D	JK	1588	40	1982	1988	X	X	X	X		X	X	X
1.6 Kat.	PP	1595	51	1987	1987	X	X	X	X		X	X	X
1.6 Kombi,Autom.	YP/DT	1588	63	1980	1985	X	X						X
1.6 L,LS,GLS	WY	1588	55	1979	1983	X	X						
1.6 S,LS,GLS	YN/WV	1588	55	1980	1983	X	X						X
1.6 TD	CY	1588	51	1982	1988	X	X	X	X		X	X	X
1.8	DS/JN	1781	66	1984	1988	X	X	X	X		X	X	X
1.8 GT	DZ	1781	82	1983	1984	X	X						X
1.9 5S,5LS,5GLS	WN	1921	85	1980	1983	X	X						
2.0i	JS	1994	85	1984	1986	X	X	X	X			X	X
2.2 GT5i	HY	2226	100	1985	1988	X	X						
2.2 GT5i	KV	2226	98	1985	1988	X	X						
2.2 GT5i	KX	2226	85	1987	1988	X	X						
Passat III 1988 1993													
1.6	ABN	1588	55	1991	1992	X	X	X	X		X	X	X
1.6	ABN	1595	55	1988	1991	X	X	X	X		X	X	X
1.6	EZ	1595	55	1988	1991	X	X	X	X	X	X	X	X
1.6 Kat.	1F	1595	53	1988	1990	X	X	X	X		X	X	X
1.6 Kat.	ABN	1595	53	1988	1990	X	X	X	X		X	X	X
1.6 Kat.	RF	1595	53	1988	1989	X	X	X	X	X	X	X	X
1.6 TD	RA	1588	59	1988	1989	X	X	X	X		X	X	X
1.6 TD	SB	1588	59	1988	1993	X	X	X	X	X	X	X	X
1.8	DS	1781	66	1988	1993	X	X	X	X		X	X	X
1.8	AAM	1781	55	1990	1993	X	X	X	X	X	X	X	X
1.8	ABS	1781	79	1991	1993	X	X	X	X	X	X	X	X
1.8	PB	1781	79	1988	1990	X	X	X	X		X	X	X
1.8	PF	1781	79	1988	1990	X	X	X	X		X	X	X
1.8	RP	1781	66	1988	1990	X	X	X	X		X	X	X
1.8	RP	1781	66	1990	1991	X	X	X	X	X	X	X	X
1.8 16V	KR	1781	102	1988	1989	X	X	X	X		X	X	X
1.8 G60 Syncro	PG	1781	118	1988	1993	X	X	X	X	X	X	X	X
1.8 Kat.	AAM	1781	55	1990	1993	X	X	X	X	X	X	X	X
1.9 D	1Y	1896	50	1989	1993	X	X	X	X		X	X	X
1.9 TD	AAZ	1896	55	1991	1993	X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Passat III 1988 1993													
1.9 TDi	1Z	1896	66	1991	1993	X	X	X	X	X	X		X
2.0	2E	1984	85	1990	1993	X	X	X	X	X	X	X	X
2.0	AAW	1984	85	1991	1993	X	X	X	X		X		X
2.0 16V	9A	1984	100	1988	1993	X	X	X	X	X	X	X	X
2.0 Syncro	2E	1984	85	1990	1993	X	X	X	X	X	X	X	X
2.8 VR6	AAA	2792	128	1991	1993	X	X	X	X	X	X	X	X
Passat III 1993 1996													
1.6	AFT	1595	74	1995	1997	X	X	X	X	X	X	X	X
1.6	AEK	1595	74	1994	1996	X	X	X	X	X	X	X	X
1.8	ABS	1781	66	1993	1996	X	X	X	X	X	X	X	X
1.8	ADZ	1781	66	1994	1996	X	X	X	X	X	X	X	X
1.8	AAM	1781	55	1993	1996	X	X	X	X	X	X	X	X
1.9 TDi	1Z	1896	66	1993	1996	X	X	X	X	X	X	X	X
2.0	ADY	1984	85	1995	1996	X	X	X	X	X	X	X	X
2.0	2E	1984	85	1993	1996	X	X	X	X	X	X	X	X
2.0 16V	ABF	1984	110	1993	1996	X	X	X	X	X	X	X	X
2.8 VR6	AAA	2792	128	1993	1997	X	X	X	X	X	X	X	X
Passat IV 1997 2005													
1.6	ADP	1595	74	1997	1997	X	X	X	X	X	X	X	X
1.6	AHL	1595	74	1996	2000	X	X	X	X	X	X	X	X
1.6	ALZ	1595	75	2000	2005	X	X	X	X	X	X		X
1.6	ANA	1595	74	1999	2000	X	X	X	X	X	X		X
1.6	ARM	1595	74	1999	2000	X	X	X	X	X	X		X
1.8	ADR	1781	92	1996	1999	X	X	X	X	X	X	X	X
1.8	APT	1781	92	1999	2000	X	X	X	X	X	X		X
1.8	ARG	1781	92	1999	2001	X	X	X	X	X	X		X
1.8 Turbo	AEB	1781	110	1996	1999	X	X	X	X	X	X	X	X
1.8 Turbo	ANB	1781	110	1999	2000	X	X	X	X	X	X		X
1.8 Turbo	APU	1781	110	1999	2000	X	X	X	X	X	X		X
1.8 Turbo	AWT	1781	110	2000	2005	X	X	X	X	X	X		X
1.9 TDi	AFN	1896	81	1996	1999	X	X	X	X	X	X	X	X
1.9 TDi	AHH	1896	66	1998	2000	X	X	X	X	X	X		X
1.9 TDi	AHU	1896	66	1996	2000	X	X	X	X	X	X	X	X
1.9 TDi	AJM	1896	85	1999	2000	X	X	X	X	X	X		X
1.9 TDi	ATJ	1896	85	2000	2001	X	X	X	X	X	X		X
1.9 TDi	AVB	1896	74	2000	2005	X	X	X	X	X	X		X
1.9 TDi	AVF	1896	96	2000	2005	X	X	X	X	X	X		X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir. Diagram	Repair Times	Fuses & Relays
VOLKSWAGEN																		
Passat IV 1997 2005																		
1.9 TDi	AVG	1896	81	1999	2000	X	X	X	X	X	X		X	X	X		X	X
1.9 TDi	AWX	1896	96	2000	2005	X	X	X	X	X	X			X	X		X	X
2.0	ALT	1984	96	2001	2005	X	X	X	X	X	X			X	X		X	X
2.0	AZM	1984	85	2000	2005	X	X	X	X	X	X			X	X		X	X
2.5 V6 TDi	AFB	2496	110	1998	2000	X	X	X	X	X	X		X	X	X		X	X
2.5 V6 TDi	AKN	2496	110	1999	2003	X	X	X	X	X	X		X	X	X		X	X
2.5 V6 TDi	BAU	2496	132	2003	2005	X	X	X	X	X	X			X	X		X	X
2.5 V6 TDi	BDH	2496	132	2003	2005	X	X	X	X	X	X			X	X		X	X
2.8 V6 30V	ACK	2771	142	1996	1999	X	X	X	X	X	X	X	X	X	X		X	X
2.8 V6 30V	AGE	2771	132	1997	1999	X	X	X	X	X				X	X		X	X
2.8 V6 30V	ALG	2771	142	1997	1999	X	X	X	X	X	X	X	X	X	X		X	X
2.8 V6 30V	AMX	2771	142	2000	2005	X	X	X	X	X	X			X	X		X	X
2.8 V6 30V	APR	2771	142	1999	2000	X	X	X	X	X	X	X	X	X	X		X	X
2.8 V6 30V	AQD	2771	142	1999	2000	X	X	X	X	X	X	X	X	X	X		X	X
2.8 V6 30V	ATX	2771	140	1999	2000	X	X	X	X	X			X	X	X		X	X
2.8 V6 30V	BBG	2771	140	2000	2005	X	X	X	X	X	X			X	X			X
4.0 W8	BDN	3999	202	2001	2005	X	X	X	X	X	X			X	X		X	X
VR5	AGZ	2327	110	1996	2000	X	X	X	X	X	X	X	X	X	X	X	X	X
VR5	AZX	2327	125	2001	2005	X	X	X	X	X	X			X	X		X	X
Passat V 2005																		
1.6	?	1595	75	2005		X			X									X
1.6 FSi	BLF	1598	85	2005		X	X		X						X			X
1.6 FSi	BLP	1598	85	2005		X	X		X						X			X
1.9 TDi	BKC	1896	77	2005		X	X		X						X			X
1.9 TDi	BLS	1896	77	2005		X	X		X						X			X
2.0 FSi	BLR	1984	110	2005		X	X		X						X			X
2.0 FSi	BLX	1984	110	2005		X	X		X						X			X
2.0 FSi	BLY	1984	110	2005		X	X		X						X			X
2.0 TDi	BKP	1968	103	2005		X	X		X						X			X
2.0 TDi	BMA	1968	103	2005		X	X		X						X			X
2.0 TDi	BMP	1968	103	2005		X	X		X						X			X
2.0 TFSi	AXX	1984	147	2005		X	X		X						X			X
3.2 FSi V6	?	3189	184	2005		X			X									X
Phaeton 2002																		
3.2 VR6	AYT	3189	177	2002		X	X	X		X				X	X			X
3.2 VR6	BKL	3189	177	2003		X	X	X		X				X	X			X
3.2 VR6	BRK	3189	177	2004		X	X	X		X				X	X			X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Phaeton 2002													
4.2 V8	BGH	4172	246	2003		X	X	X	X		X	X	X
4.2 V8	BGJ	4172	246	2003		X	X	X	X		X	X	X
5.0 V10 TDi	AJS	4921	230	2003		X	X	X	X			X	X
6.0 W12	BAN	5998	309	2002		X	X	X	X		X	X	X
6.0 W12	BAP	5998	309	2003		X	X	X	X		X	X	X
Polo II 1981 1994													
1.0	AAK	1043	33	1990	1990	X	X	X	X		X	X	X
1.0	AAU	1043	33	1990	1994	X	X	X	X	X	X	X	X
1.0	ACM	1043	33	1990	1994	X	X	X	X		X	X	X
1.0	GL	1043	29	1981	1983	X	X	X	X		X		X
1.0	GL	1043	29	1983	1989	X	X	X	X		X		X
1.0	HZ	1043	33	1984	1986	X	X	X	X		X		X
1.0	HZ	1043	33	1986	1994	X	X	X	X		X		X
1.3	NU	1272	40	1983	1989	X	X	X	X		X		X
1.3	2G	1272	40	1989	1994	X	X	X	X	X	X	X	X
1.3	3F	1272	57	1990	1994	X	X	X	X	X	X	X	X
1.3	AAV	1272	40	1991	1994	X	X	X	X	X	X	X	X
1.3	GK	1272	55	1982	1983	X	X	X	X		X		X
1.3	GT	1272	43	1983	1988	X	X	X	X		X		X
1.3	HK	1272	40	1983	1990	X	X	X	X		X		X
1.3	HW	1272	40	1983	1990	X	X	X	X		X		X
1.3	MH	1272	40	1983	1989	X	X	X	X		X		X
1.3	NZ	1272	40	1986	1994	X	X	X	X	X	X		X
1.3 D	MN	1272	33	1986	1990	X	X	X	X		X		X
1.3 G40	MK	1272	83	1990	1994	X	X	X	X		X	X	X
1.3 G40	MK	1272	85	1985	1989	X	X	X	X		X		X
1.3 G40	PY	1272	85	1987	1990	X	X	X	X	X	X		X
1.4 D	1W	1398	35	1990	1994	X	X	X	X	X	X	X	X
Polo III 1994 2001													
1.0	AER	999	39	1996	2000	X	X	X	X	X	X	X	X
1.0	AEV	1043	33	1994	1996	X	X	X	X	X	X	X	X
1.0	ALD	999	37	1999	2001	X	X	X	X	X	X	X	X
1.0	ALL	999	37	1997	2000	X	X	X	X	X	X	X	X
1.0	AUC	999	37	1999	2001	X	X	X	X	X	X	X	X
1.3	ADX	1298	40	1994	1997	X	X	X	X	X	X		X
1.4	AGY (empty)	1390	62	1996	2001	X	X	X	X		X		
1.4	AKK	1390	44	1999	2001	X	X	X	X	X	X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Polo III 1994 2001													
1.4	AKV	1390	44	1997	1999	X	X	X	X	X	X	X	X
1.4	ANX	1390	40	1998	2000	X	X	X	X	X	X	X	X
1.4	AUD	1390	44	1999	2001	X	X	X	X	X	X	X	X
1.4 (40/44 kW)	AEX	1390	44	1995	1998	X	X	X	X	X	X	X	X
1.4 (40/44 kW)	AKP	1390	40	1999	2001	X	X	X	X	X	X	X	X
1.4 (40/44 kW)	APQ	1390	44	1997	2000	X	X	X	X	X	X	X	X
1.4 16V	AFH	1390	74	1996	2000	X	X	X	X	X	X	X	X
1.4 16V	AFK	1390	55	1999	2001	X	X	X	X	X	X	X	X
1.4 16V	AHW	1390	55	1999	2001	X	X	X	X	X	X	X	X
1.4 16V	APE	1390	55	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	AQQ	1390	74	1999	2000	X	X	X	X	X	X	X	X
1.4 16V	AUA	1390	55	1999	2002	X	X	X	X	X	X	X	X
1.4 16V	AUB	1390	74	2000	2002	X	X	X	X	X	X	X	X
1.4 TDi	AMF	1422	55	1999	2001	X	X	X	X	X	X	X	X
1.6	AEA	1598	55	1994	1995	X	X	X	X	X	X	X	X
1.6	AEE	1598	55	1995	2000	X	X	X	X	X	X	X	X
1.6	AFX (empty)	1598	74	1996	2001	X	X	X	X	X	X	X	X
1.6 16V	ARC	1598	92	1999	2001	X	X	X	X	X	X	X	X
1.6 16V	AVY	1598	92	2000	2001	X	X	X	X	X	X	X	X
1.6 16V GTi	AJV	1598	88	1998	2000	X	X	X	X	X	X	X	X
1.7 SDi	AHG	1718	42	1997	2000	X	X	X	X	X	X	X	X
1.7 SDi	AKU	1718	44	1997	2000	X	X	X	X	X	X	X	X
1.8	AFV (empty)	1781	82	2000	2001	X	X	X	X	X	X	X	X
1.9 D	AEF	1896	47	1994	2001	X	X	X	X	X	X	X	X
1.9 SDi	AGD	1896	47	1996	2001	X	X	X	X	X	X	X	X
1.9 SDi	ASX	1896	47	1999	2001	X	X	X	X	X	X	X	X
Polo IV 2001													
1.2	AWY	1198	40	2002	2004	X	X	X	X	X	X	X	X
1.2	BMD	1198	40	2004		X	X	X	X	X	X	X	X
1.2 12V	AZQ	1198	47	2001	2005	X	X	X	X	X	X	X	X
1.2 12V	BME	1198	47	2004		X	X	X	X	X	X	X	X
1.4	BLM	1390	61	2003	2005	X	X	X	X	X	X	X	X
1.4 16V	AUA	1390	55	2001	2002	X	X	X	X	X	X	X	X
1.4 16V	AUB	1390	74	2001	2002	X	X	X	X	X	X	X	X
1.4 16V	BBY	1390	55	2001		X	X	X	X	X	X	X	X
1.4 16V	BBZ	1390	74	2002		X	X	X	X	X	X	X	X
1.4 16V	BKY	1390	55	2004		X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir.	Diagr.	Repair Times	Fuses & Relays
VOLKSWAGEN																			
Polo IV 2001																			
1.4 FSi 16V	AXU	1390	63	2002		X	X	X	X	X	X			X	X		X	X	
1.4 TDi	AMF	1422	55	2001	2005	X	X	X	X	X	X			X	X		X	X	
1.4 TDi	BAY	1422	55	2001	2005	X	X	X	X	X	X			X	X		X	X	
1.4 TDi	BNM	1422	51	2005		X	X		X						X				
1.4 TDi	BNV	1422	59	2005		X	X		X						X				
1.6	BAH	1598	74	2002	2005	X	X	X	X	X				X	X			X	
1.9 SDi	ASY	1896	47	2001	2006	X	X	X	X	X	X			X	X		X	X	
1.9 TDi	ASZ	1896	96	2003	2005	X	X	X	X	X	X			X	X		X	X	
1.9 TDi	ATD	1896	74	2001	2005	X	X	X	X	X	X			X	X		X	X	
1.9 TDi	AXR	1896	74	2001		X	X	X	X	X	X			X	X		X	X	
1.9 TDi	BLT	1896	96	2004		X	X	X	X	X	X			X	X		X		
GTi 1.8 Turbo	BJX	1781	110	2006		X		X	X						X				
Polo Classic (Estate 1998->) 1995 2002																			
1.4	AEX	1390	44	1995	1998	X	X	X	X	X	X		X	X	X	X	X	X	
1.4	AKK	1390	44	1999	2001	X	X	X	X	X	X		X	X	X	X	X	X	
1.4	ANW	1390	44	1999	2000	X	X	X	X	X	X		X	X	X	X	X	X	
1.4	AUD	1390	44	2000	2002	X	X	X	X	X				X	X		X	X	
1.4 16V	APE	1390	55	1999	2000	X	X	X	X	X	X		X	X	X	X	X	X	
1.4 16V	AUA	1390	55	1999	2002	X	X	X	X	X	X		X	X	X	X	X	X	
1.6	1F	1595	55	1995	1997	X	X	X	X	X	X		X	X	X	X	X	X	
1.6	AEE	1595	55	1996	2000	X	X	X	X	X			X	X	X	X	X	X	
1.6	AEH	1595	74	1999	2001	X	X	X	X	X			X	X	X	X	X	X	
1.6	AFT	1595	74	1995	1999	X	X	X	X	X	X		X	X	X	X	X	X	
1.6	AKL	1595	74	1999	2001	X	X	X	X	X			X	X	X	X	X	X	
1.6	ALM	1595	55	1998	2001	X	X	X	X	X			X	X	X	X	X	X	
1.6	APF	1595	74	2000	2000	X	X	X	X	X			X	X	X	X	X	X	
1.6	AUR	1595	74	2000	2001	X	X	X	X	X				X	X		X	X	
1.7 SDi	AHB	1718	42	1996	2000	X	X	X	X	X	X			X	X		X	X	
1.7 SDi	AKW	1718	44	1997	1999	X	X	X	X	X			X	X	X	X	X	X	
1.8	ADZ	1791	66	1997	2002	X	X	X	X	X	X			X	X		X	X	
1.9 D	1Y	1896	47	1996	2000	X	X	X	X	X			X	X	X		X	X	
1.9 SDi	AEY	1896	47	1995	2000	X	X	X	X	X	X		X	X	X	X	X	X	
1.9 SDi	AGP	1896	50	1999	2001	X	X	X	X	X	X		X	X	X	X	X	X	
1.9 SDi	AQM	1896	50	1999	2001	X	X	X	X	X	X		X	X	X	X	X	X	
1.9 TDi	AFN	1896	81	1996	1999	X	X	X	X	X			X	X	X	X	X	X	
1.9 TDi	AGR	1896	66	1999	2001	X	X	X	X	X			X	X	X	X	X	X	
1.9 TDi	AHU	1896	66	1997	2000	X	X	X	X	X	X		X	X	X	X	X	X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Polo Classic (Estate 1998->)	1995	2002											
1.9 TDi	ALE	1896	66	1997	1999	X	X	X	X	X	X	X	X
1.9 TDi	ALH	1896	66	1999	2002	X	X	X	X	X	X	X	X
1.9 TDi	ASV	1896	81	1999	2001	X	X	X	X	X	X	X	X
Scirocco 1982 1992													
1.6	RE	1595	53	1986	1990	X	X		X	X			
1.6	EG	1588	81	1982	1982	X	X	X	X				X
1.6	EW	1595	55	1984	1987	X	X	X	X	X	X		X
1.6 Kat.	EW	1595	51	1983	1992	X	X	X	X	X	X		X
1.8	JH	1781	70	1983	1992	X	X	X	X	X		X	X
1.8	DX	1781	82	1984	1987	X	X	X	X	X			X
1.8	EX	1781	66	1983	1991	X	X	X	X	X			X
1.8 16V	KR	1781	102	1987	1989	X	X	X	X	X		X	X
1.8 16V Kat.	PL	1781	95	1987	1989	X	X	X	X	X		X	X
Sharan 1995													
1.8 Turbo	AJH	1781	110	1997	2000	X	X	X	X	X	X	X	X
1.8 Turbo	AWC	1781	110	2000		X	X	X	X		X	X	X
1.9 TDi	1Z	1896	66	1995	2001	X	X	X	X	X	X	X	X
1.9 TDi	AFN	1896	81	1997	2001	X	X	X	X	X	X	X	X
1.9 TDi	AHU	1896	66	1996	2001	X	X	X	X	X	X	X	X
1.9 TDi	ANU	1781	66	1999		X	X	X	X	X	X		X
1.9 TDi	ASZ	1781	96	2002		X	X	X	X		X		X
1.9 TDi	AUY	1896	85	2000		X	X	X	X		X		X
1.9 TDi	AVG	1781	81	1999	2000	X	X	X	X		X		X
2.0	ADY	1984	85	1995	2001	X	X	X	X	X	X	X	X
2.0	ATM	1984	85	2000		X	X	X	X		X		X
VR6	AAA	2792	128	1995	1998	X	X	X	X	X	X	X	X
VR6	AMY	2792	128	1998	2001	X	X	X	X	X	X		X
VR6	AYL	2792	150	2000		X	X	X	X	X	X		X
Taro 1989 1992													
1.8	2Y	1812	61	1989	1992	X	X	X	X		X		X
2.2 4x4	4Y	2237	69	1989	1992	X	X	X	X		X		X
2.4 4x4	22R	2446	84	1989	1992	X	X		X				
2.4 D	2L	2446	61	1989	1992	X	X	X	X		X		X
2.4 D 4x4	2L	2446	61	1989	1992	X	X	X	X		X		X
Touareg 2002													
2.5 TDi	BAC	2460	128	2003		X	X	X			X	X	X
2.5 TDi	BLK	2460	120	2003	2004	X	X	X			X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir. Diagram	Repair Times	Fuses & Relays
VOLKSWAGEN																		
Touareg 2002																		
2.5 TDi	BPD	2460	120	2004		X	X	X		X				X	X			X
3.2 VR6	AZZ	3189	162	2002		X	X	X		X	X			X	X			X
3.2 VR6	BAA	3189	162	2003	2004	X	X	X		X	X			X	X			X
3.2 VR6	BKJ	3189	162	2002	2003	X	X	X		X	X			X	X			X
3.2 VR6	BMV	3189	177	2004		X	X	X		X				X	X			X
3.2 VR6	BMX	3189	177	2004		X	X	X		X				X	X			X
3.2 VR6	BRJ	3189	162	2003		X	X	X		X				X	X			X
4.2 V8	AXQ	4172	162	2003		X	X	X		X	X			X	X			X
4.2 V8	BHX	4172	228	2003		X	X	X		X				X	X			X
5.0 V10 TDi	AYH	4921	230	2002	2004	X	X	X		X					X			X
5.0 V10 TDi	BKW	4921	230	2003		X	X	X		X					X			X
5.0 V10 TDi	BLE	4921	230	2004		X	X	X		X					X			X
6.0 W12	BJN	5998	331	2004		X	X							X	X			X
Touran 2003																		
1.6	BGU	1595	75	2003		X	X	X	X	X	X			X	X		X	X
1.6 16V FSi	BAG	1598	85	2003		X	X	X	X	X	X			X	X		X	X
1.9 TDi	AVQ	1896	74	2003		X	X	X	X	X	X			X	X		X	X
1.9 TDi	BKC	1896	77	2003		X	X	X	X	X	X			X	X		X	X
2.0 16V FSi	AXW	1984	110	2003		X	X	X	X	X	X			X	X		X	X
2.0 16V TDi	AZV	1968	100	2003		X	X	X	X	X	X			X	X		X	X
2.0 16V TDi	BKD	1968	103	2004		X	X	X	X	X				X	X		X	X
Transporter T3 1980 1990																		
1.6 D	CS	1588	37	1980	1987	X	X	X	X	X				X			X	
1.6 TD	JX	1588	51	1984	1990	X	X	X	X	X				X			X	
1.7 D	KY	1715	42	1987	1990	X	X	X	X	X				X			X	
1.9	DG	1913	57	1985	1987	X	X	X	X	X				X			X	
1.9	DG	1913	57	1987	1992	X	X	X	X	X				X			X	
1.9	SP	1913	54	1986	1987	X	X	X	X	X				X			X	
1.9	DG	1913	57	1982	1985	X	X	X	X	X				X			X	
1.9	SP	1913	54	1987	1988	X	X	X	X	X				X			X	
1.9	DF	1913	44	1982	1992	X	X	X	X	X				X			X	
1.9	EY	1913	41	1982	1989	X	X	X	X	X				X			X	
1.9 i	GW	1913	66	1983	1984	X	X	X	X	X				X			X	
1.9 i	GW	1913	66	1984	1985	X	X	X	X	X				X			X	
1.9 i	DH	1913	63	1983	1989	X	X	X	X	X				X			X	
2.1 i	DJ	2109	82	1985	1992	X	X	X	X	X				X			X	
2.1 i	MV	2109	70	1985	1992	X	X	X	X	X				X			X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
VOLKSWAGEN													
Transporter T3	1980	1990											
2.1 i	SR	2109	64	1986	1990	X	X	X	X	X		X	
2.1 i	SS	2109	68	1989	1992	X	X	X	X	X		X	
Transporter T4	1990	2003											
1.8	PD	1781	49	1990	1992	X	X	X	X		X	X	
1.9 D	1X	1896	45	1990	1996	X	X	X	X		X	X	X
1.9 TD	ABL	1896	50	1992	2003	X	X	X	X	X	X	X	X
2.0	AAC	1968	62	1990	2003	X	X	X	X	X	X	X	X
2.4 D	AJA	2370	55	1997	2003	X	X	X	X		X	X	X
2.4 D	AAB	2370	57	1990	1998	X	X	X	X		X	X	X
2.5	AAF	2461	81	1990	1994	X	X	X	X	X	X	X	X
2.5	ACU	2461	81	1994	1996	X	X	X	X	X	X	X	X
2.5	AET	2461	85	1996	2003	X	X	X	X	X	X	X	X
2.5	APL	2461	85	1999	2000	X	X	X	X		X	X	X
2.5	AVT	2461	85	1999	2003	X	X	X	X		X	X	X
2.5 TDi	ACV	2460	75	1995	2003	X	X	X	X		X	X	X
2.5 TDi	AHY	2496	111	1998	2000	X	X	X	X		X	X	X
2.5 TDi	AJT	2460	65	1998	2003	X	X	X	X		X	X	X
2.5 TDi	AUF	2461	75	1999	2003	X	X	X	X		X	X	X
2.5 TDi	AXG	2496	111	2000	2003	X	X	X	X		X	X	X
2.5 TDi	AXL	2461	75	2001	2003	X	X	X	X		X	X	X
2.5 TDi	AYC	2461	75	2001	2003	X	X	X	X		X	X	X
VR6	AES	2792	103	1996	2000	X	X	X	X	X	X	X	X
VR6	AMV	2792	150	2000	2003	X	X	X	X		X	X	X
Transporter T5	2003												
1.9 TDi	AXB	1896	77	2003		X	X	X	X		X	X	X
1.9 TDi	AXC	1896	63	2003		X	X	X	X		X		X
2.0	AXA	1984	85	2003		X	X	X	X		X		X
2.5 TDi	AXD	2460	96	2003		X	X	X	X		X		X
2.5 TDi	AXE	2460	128	2003		X	X	X	X		X		X
2.5 TDi	BLJ	2460	120	2003		X	X	X	X		X		X
3.2 VR6	BKK	3189	173	2003		X	X	X	X		X		X
3.2 VR6	BDL	3189	173	2003		X	X	X	X		X		X
Vento	1991	1998											
1.4 (40/44kW)	ABD	1391	44	1992	1995	X	X	X	X	X	X	X	X
1.4 (40/44kW)	AEX	1390	44	1995	1998	X	X	X	X	X	X	X	X
1.6	AEA	1598	74	1994	1995	X	X	X	X	X	X	X	X
1.6	AEE	1598	55	1995	1998	X	X	X	X	X	X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLKSWAGEN													
Vento 1991 1998													
1.6	AFT	1598	74	1996	1998	X	X	X	X		X	X	X
1.6	AKS	1598	74	1997	1998	X	X	X	X		X	X	X
1.6	ABU	1598	55	1992	1994	X	X	X	X	X	X	X	X
1.6	AEK	1595	74	1994	1996	X	X	X	X		X	X	X
1.8	AAM	1781	55	1992	1998	X	X	X	X	X	X	X	X
1.8	ABS	1781	66	1992	1994	X	X	X	X	X	X	X	X
1.8	ADZ	1781	66	1994	1998	X	X	X	X		X	X	X
1.9 D	1Y	1896	47	1992	1998	X	X	X	X		X	X	X
1.9 SDi	AEY	1896	47	1995	1998	X	X	X	X		X	X	X
1.9 TD	AAZ	1896	55	1992	1998	X	X	X	X		X	X	X
1.9 TDi	1Z	1896	66	1993	1996	X	X	X	X		X	X	X
1.9 TDi	AFN	1896	81	1996	1998	X	X	X	X		X	X	X
1.9 TDi	ALE	1896	66	1997	1998	X	X	X	X		X	X	X
1.9 TDi	AHU	1896	66	1996	1998	X	X	X	X		X	X	X
2.0	AGG	1984	85	1995	1998	X	X	X	X		X	X	X
2.0	AKR	1984	85	1997	1998	X	X	X	X		X	X	X
2.0	2E	1984	85	1992	1994	X	X	X	X		X	X	X
2.0 16V	ABF	1984	110	1992	1998	X	X	X	X		X	X	X
2.0 GT	ADY	1984	85	1994	1997	X	X	X	X		X	X	X
2.8 VR6	AAA	2792	128	1992	1998	X	X	X	X	X	X	X	X
VOLVO													
240 1982 1993													
2.0	B 19 A	1986	71			X		X					
2.0	B 19 A/K	1986	71			X		X					
2.0	B 20 A	1986	71			X		X					
2.0	B 20 F	1986	0			X		X					
2.0	B 200 K	1986	74	1984	1989	X	X	X	X	X		X	
2.0i	B 200 E	1990	86	1984	1993	X	X	X	X		X		X
2.0i	B 200 F	1986	82	1990	1993	X	X	X	X	X			X
2.0i turbo	B 200 ET	1986				X		X	X		X		
2.1	B 21 A	2127	74			X		X					
2.1	B 21 A	2127	79			X		X					
2.1	B 21 E	2127	90			X		X					
2.1i	B 21 E	2127	90			X		X					
2.1i	B 21 E	2127	90			X		X					
2.1i Turbo	B 21 ET	2127	114			X		X					
2.1i Turbo	B 21 ET	2127	114			X		X					

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond.	Wir. Diagram	Repair Times	Fuses & Relays
VOLVO																			
240 1982 1993																			
2.3	B 23 A	2316	82			X			X										
2.3i	B 23 E	2316	100			X			X	X									
2.3i	B 23 E	2316	103			X			X										
2.3i	B 230 A	2316	81	1984	1988	X	X	X	X	X				X				X	
2.3i	B 230 E	2316	96	1990	1993	X	X	X	X	X				X				X	
2.3i	B 230 E	2320	96			X			X	X									X
2.3i	B 230 F	2316	85	187	1992	X	X	X	X	X	X	X		X				X	
2.3i	B 230 K	2316	85	1986	1988	X	X	X	X	X				X				X	
2.3i	B 230 KH	2316	85			X			X	X									
2.3i turbo	B 230 ET	2316		1982		X			X		X			X					
2.4 D	D 24	2383	60	1982	191	X	X	X	X	X				X				X	
2.4 D6	D 24	2383	60			X			X	X									
2.4 D6	D 24	2383	60			X			X	X									
340 / 360 1982 1991																			
1.4	B 14.4E	1397	51	1988	1992	X	X	X	X	X				X					
1.4	B 14.4S	1397	53	1983	1991	X	X	X	X	X				X				X	
1.6 D	D 16	1596	40	1984	1991	X	X	X	X	X				X				X	
1.7	B 172 K/KD	1721	60	1985	1991	X	X	X	X	X				X				X	
2.0	B 200 K/KD	1986	76	1983	1989	X	X	X	X	X				X				X	
2.0i	B 200 E/F	1986	86	1983	1989	X	X	X	X	X				X				X	
2.0i	B 200 F/K	1986	76	1984	1991	X	X	X	X	X				X				X	
440 / 460 1989 1997																			
1.6i	B 16 F	1596	61	1991	1997	X	X	X	X	X	X	X	X	X		X	X	X	
1.7	B 18 K	1721	59	1989	1992	X	X	X	X	X		X	X	X		X	X	X	
1.7	B 18 KP	1721	66	1989	1992	X	X	X	X	X		X	X	X		X	X	X	
1.7 Kat.	B 18 KPD	1721	64	1989	1992	X	X	X	X	X				X				X	
1.7i	B 18 E	1721	80	1989	1990	X	X	X	X	X		X		X					X
1.7i	B 18 EP	1721	78	1990	1995	X	X	X	X	X	X	X	X	X		X	X	X	
1.7i	B 18 F	1721	70	1989	1990	X	X	X	X	X	X		X	X		X	X	X	
1.7i	B 18 FP	1721	75	1989	1995	X	X	X	X	X	X		X	X		X	X	X	
1.7i Turbo	B 18 FT	1721	88	1989	1997	X	X	X	X	X	X	X	X	X		X	X	X	
1.8i	B 18 U	1794	66	1991	1997	X	X	X	X	X	X	X	X	X				X	X
1.9 Turbo D	D 19 T	1870	66	1994	1997	X	X	X	X	X			X	X				X	X
2.0i	B 20 F	1998	80	1993	1997	X	X	X	X	X	X	X	X	X				X	X
mag weg	B 16 F	1596	0			X			X	X		X							
mag weg	B 18 FP	1721	75			X			X	X	X	X						X	
mag weg	B 18 FT	1721	88			X		X	X	X		X							

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	
VOLVO													
440 / 460 1989 1997													
mag weg	B 18 U	1794	0			X			X	X			
mag weg	B 20 F	1998	81			X			X	X			
480 1986 1995													
1.7i	B 18 E/ED	1721	80	1986	1989	X	X	X	X	X		X	X
1.7i	B 18 EF/FF	1781	78	1988	p-92	X	X		X	X			X
1.7i	B 18 F	1721	80	1988	1990	X	X	X	X	X		X	X
1.7i	B 18 FP	1721	75	1989	1992	X	X	X	X	X		X	X
1.7i Turbo	B 18 FT	1721	88	1988	1995	X	X	X	X	X		X	X
2.0i	B 20 F/FM	1998	81	1992	1995	X	X	X	X	X			X
740 / 760 1982 1992													
740 2.0	B 200 K	1986	78	1984	1989	X	X	X	X		X		X
740 2.0i	B 200 E	1986	87	1988	1989	X	X	X	X		X		X
740 2.0i	B 200 F	1986	82	1989	1992	X	X	X	X	X		X	X
740 2.0i 16V	B 204 E	1986	102	1988	1991	X	X	X	X	X			
740 2.0i Turbo	B 200 ET	1986	118			X			X				
740 2.0i Turbo	B 200 ET	1986	120	1984	1988	X	X	X	X		X		X
740 2.0i Turbo 16V	B 204 GT/FT	1991	147	1989	1991	X	X	X	X	X		X	
740 2.3	B 230 K	2316	84	1984	1986	X	X	X	X		X		X
740 2.3	B 230 KH	2316	85	1987	1991	X	X	X	X		X		X
740 2.3i	B 230 E	2316	96	1984	1989	X	X	X	X		X		X
740 2.3i	B 230 F	2316	85	1986	1991	X	X	X	X	X		X	X
740 2.3i 16V	B 234 F	2316	114	1988	1992	X	X	X	X	X			X
740 2.3i Turbo	B 230 ET	2316	130	1984	1989	X	X	X	X		X		X
740 2.3i Turbo	B 230 FT/GT	2316	119	1987	1991	X	X	X	X		X		X
740 2.4 D	D 24	2383	60	1984	1992	X	X	X	X		X	X	X
740 2.4 Turbo D	D 24 T	2383	81	1984	1991	X	X	X	X		X	X	X
740 2.4 Turbo D Intercooler	D 24 TIC	2383	90	1987	1991	X	X	X	X		X	X	X
760 2.3i Turbo	B 23 ET/230 ET	2316	130	1982	1990	X	X	X	X		X		X
760 2.3i Turbo	B 230 FT/GT	2316	125	1988	1991	X	X	X	X		X		
760 2.4 D	D 24	2383	60	1982	1984	X	X	X	X		X	X	X
760 2.4 Turbo D	T 24 D	2383	80	1986	1989	X	X	X	X		X		X
760 2.4 Turbo D Intercooler	D 24TIC	2383	90	1986	1991	X	X	X	X		X		X
760 2.8i V6	B 28 E	2849	115	1982	1986	X	X	X	X		X		X
760 2.8i V6	B 280 E	2849	125	1986	1991	X	X	X	X		X		X
760 2.8i V6	B 280 F	2849	108	1986	1991	X	X	X	X		X		X
780 1986 1991													
2.0 Turbo	B 200 ET	1986		1986	1990	X	X		X		X		

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Adjustment	Techn. Drawings	Lubricants	Motor Manag.	ABS	Wiring Diagram	Engine	Service Reset	Air Cond. Wir.	Diagr.	Repair Times	Fuses & Relays
VOLVO																			
780 1986 1991																			
2.3 Turbo	B 230 ET	2316		1986	1990	X	X		X		X			X					
2.4 Turbo D	D 24T	2383	90	1987	1991	X	X	X	X	X				X					
2.8i V6	B 280 E/F	2849	125	1986	1991	X	X	X	X	X	X			X			X		
850 / S70 / V70 1992 2000																			
2.0 10V	B 5202 FS/S	1984	93	1995	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2.0 20V	B 5204 FS	1984	105	1992	1996	X	X	X	X	X	X	X	X	X	X		X	X	X
2.0 20V Turbo	B 5204 T	1984	155	1994	1997	X	X	X	X		X	X	X	X	X		X	X	X
2.0 20V Turbo	B 5204 T2	1984	132	1996	1998	X	X	X	X			X	X	X	X		X	X	X
2.0 20V Turbo	B 5204 T3	1984	166	1997	2000	X	X	X	X		X	X		X	X		X	X	X
2.0 20V Turbo	B 5204 T4	1984	132	1999	2000	X	X	X	X		X	X		X	X			X	X
2.3 20V	B 5234 FS/S	2319	120	1994	1999	X	X	X	X				X	X	X			X	X
2.3 20V	B 5234 T2	2319	160	1995	1998	X	X	X	X					X	X			X	X
2.3 20V R	B 5234 T4	2319	184	1996	1998	X	X	X	X	X	X	X		X	X			X	X
2.3 20V R AWD	B 5234 T6	2319	176	1998	1998	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2.3 20V T-5	B 5234 T	2319	166	1994	1997	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2.3 20V T-5 R	B 5234 T3	2319	176	1997	2000	X	X	X	X	X	X	X		X	X		X	X	X
2.3 20V T-5 R	B 5234 T5	2319	176	1995	1997	X	X	X	X					X	X			X	X
2.4 20V	B 5244 S	2435	125	2000	2000	X	X	X	X					X	X			X	X
2.4 20V	B 5244 S2	2435	103	2000	2000	X	X	X	X		X			X	X			X	X
2.4 20V Bi-Fuel	B 5244 SG	2435	103	2000	2000	X	X	X	X					X	X		X	X	X
2.4 20V Bi-Fuel	B 5244 SG2	2435	103	2000	2000	X	X	X	X					X	X			X	X
2.4 20V R	B 5244 T2	2435	195	2000	2000	X	X	X	X					X	X			X	X
2.4 20V Turbo (empty)	B 5244 T3	2435	147			X			X		X								
2.5 10V	B 5252 FS/S	2435	103	1993	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2.5 10V	B 5252 IS/S	2435	103	1993	1999	X	X	X	X	X		X	X	X	X	X	X	X	X
2.5 20V	B 5254 FS	2435	125	1992	1996	X	X	X	X	X	X			X	X		X	X	X
2.5 20V	B 5254 S	2435	125	1996	1999	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2.5 20V LPT	B 5254 T	2435	142	1997	1999	X	X	X	X	X	X	X	X	X	X		X	X	X
2.5 Bi-Fuel (empty)	GB 5252 S	2435	103	1998	2000	X			X						X			X	X
2.5 TDi	D 5252 T	2460	103	1996	2000	X	X	X	X	X	X		X	X	X		X	X	X
mag weg????	B 5254 S	0	0			X			X	X		X							
940/960/S90/V90 1991 1998																			
2.0	B 200 F	1986	82	1991	1995	X	X	X	X	X	X	X	X	X		X	X	X	
2.0 (empty)	B 200 E	2316	87	1991	1991	X	X	X	X										
2.0 (empty)	B 200 G	1986		1992	1994	X	X	X	X										
2.0 16V	B 204 E	1986	114	1991	1992	X	X	X	X	X	X			X				X	
2.0 16V Turbo	B 204 FT	1986	140	1991	1994	X	X	X	X	X	X	X		X				X	

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLVO													
940/960/S90/V90	1991	1998											
2.0 16V Turbo	B 204 GT	1986	147	1991	1998	X	X	X	X	X	X		X
2.0 Turbo	B 200 FT	1986	114	1991	1998	X	X	X	X	X	X	X	X
2.3	B 230 F	2316	85	1991	1994	X	X	X	X	X	X	X	X
2.3	B 230 FB	2316	96	1991	1995	X	X	X	X	X	X	X	X
2.3 (empty)	B 230 E	2316	96	1991	1991	X	X	X	X				
2.3 (empty)	B 230 FD	2316		1993	1995	X	X	X	X				
2.3 16V	B 234 F	2316	114	1991	1992	X	X	X	X	X	X	X	X
2.3 LPT	B 230 FK	2316	99	1995	1998	X	X	X	X	X	X	X	X
2.3 Turbo	B 230 FT	2316	121	1991	1998	X	X	X	X	X	X	X	X
2.3 Turbo	B 230 GT	2316	125	1991	1994	X	X	X	X	X	X	X	X
2.4 D	D 24	2383	60	1992	1993	X	X	X	X		X	X	X
2.4 TD	D 24 T	2383	80	1991	1993	X	X	X	X		X	X	X
2.4 TD Intercooler	D 24 TIC	2383	90	1991	1996	X	X	X	X		X	X	X
2.5 24V	B 6254 FS/S	2473	125	1995	1998	X	X	X	X	X	X	X	X
2.8 (empty)	B 280 E	2849	125	1991	1991	X		X					
2.8 (empty)	B 280 F	2849	108	1991	1991	X		X					
3.0 24V	B 6304 FS/S	2922	150	1991	1994	X	X	X	X	X	X	X	X
3.0 24V	B 6304 S2	2922	132	1997	1998	X	X	X	X	X	X	X	X
mag weg	B 6304 F	2922	0			X		X	X	X			
C70 1998 2006													
2.0 20V Turbo	B 5204 T2	1984	132	1998	1999	X	X	X	X	X	X	X	X
2.0 20V Turbo	B 5204 T3	1984	166	1998	2000	X	X	X	X	X	X	X	X
2.0 20V Turbo	B 5204 T4	1984	120	1999	2006	X	X	X	X		X	X	X
2.3 20V T5	B 5234 T3	2319	176	1998	2002	X	X	X	X	X	X	X	X
2.3 20V Turbo	B 5234 T9	2319	180	2003	2006	X	X	X	X		X	X	
2.4 20V	B 5244 S	2435	125	2000	2000	X	X	X	X		X	X	X
2.4 20V Turbo	B 5244 T	2435	142	2000	2002	X	X	X	X		X	X	X
2.4 20V Turbo	B 5244 T7	2435	147	2003	2006	X	X	X	X		X	X	X
2.5 20V	B 5254 S	2435	125	1999	1999	X	X	X	X		X	X	X
2.5 20V LPT	B 5254 T	2435	142	1998	1999	X	X	X	X	X	X	X	X
S40 / V40 1996 2004													
1.6 16V	B 4164 S	1587	77	1997	1999	X	X	X	X	X	X	X	X
1.6 16V	B 4164 S2	1587	80	2000	2004	X	X	X	X	X	X	X	X
1.8 16V	B 4184 S	1731	85	1996	1999	X	X	X	X	X	X	X	X
1.8 16V	B 4184 S2	1731	90	2000	2004	X	X	X	X		X	X	X
1.8 16V	B 4184 S3	1783	85	2000	2004	X	X	X	X		X	X	X
1.8 16V Bi-Fuel	B 4184 S10	1731	90	2001	2004	X	X	X	X		X	X	X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Adjustment	Lubricants	ABS	Engine	Air Cond. Wir.	Diagr.	
VOLVO													
S40 / V40 1996 2004													
1.8 16V Bi-Fuel	B 4184 S9	1731	90	2001	2004	X	X	X	X	X	X	X	X
1.8 16V GDi	B 4184 SJ	1834	90	2001	2004	X	X	X	X	X	X	X	X
1.8 16V GDi	B 4184 SM	1834	92	1998	2001	X	X	X	X	X	X	X	X
1.9 16V T4	B 4194 T	1855	147	1998	1999	X	X	X	X	X	X	X	X
1.9 16V T4	B 4194 T2	1855	147	2000	2000	X	X	X	X	X	X	X	X
1.9 16V T4	B 4194 T5	1855	147	2001	2004	X	X	X	X	X	X	X	X
1.9 TD	D 4192 T	1870	66	1996	1999	X	X	X	X	X	X	X	X
1.9 TD	D 4192 T2	1870	70	1999	2000	X	X	X	X	X	X	X	X
1.9 TD	D 4192 T3	1870	85	2001	2004	X	X	X	X	X	X	X	X
1.9 TD	D 4192 T4	1870	75	2001	2004	X	X	X	X	X	X	X	X
2.0 16V	B 4204 S	1948	103	1996	1999	X	X	X	X	X	X	X	X
2.0 16V	B 4204 S2	1948	100	2000	2004	X	X	X	X	X	X	X	X
2.0 16V LPT	B 4204 T	1948	118	1998	1999	X	X	X	X	X	X	X	X
2.0 16V Turbo	B 4204 T2	1948	118	2000	2000	X	X	X	X	X	X	X	X
2.0 16V Turbo	B 4204 T3	1948	121	2001	2004	X	X	X	X	X	X	X	X
2.0 16V Turbo	B 4204 T5	1948	147	2001	2003	X	X	X	X	X	X	X	X
S40 / V50 2004													
1.8 16V	B 4184 S11	1798	92	2004		X	X	X	X		X		X
2.0 16V TD	D 4204 T	1998	100	2004		X	X	X	X	X	X		X
2.0 16V TD	D 4204 T2	1998	98	2004		X	X	X	X	X	X		X
2.4 20V	B 5244 S4	2435	125	2004		X	X	X	X	X	X		X
2.4 20V	B 5244 S5	2435	103	2004		X	X	X	X	X	X		X
2.5 20V T5	B 5254 T3	2521	162	2004		X	X	X	X	X	X		X
S60 2001													
2.0 20V Turbo	B 5204 T5	1984	132	2001		X	X	X	X	X	X		X
2.3 20V Turbo	B 5234 T3	2319	184	2001	2004	X	X	X	X	X	X		X
2.3 20V Turbo	B 5234 T7	2319	147	2001	2004	X	X	X	X	X	X		X
2.4 20V	B 5244 S	2435	125	2001		X	X	X	X	X	X		X
2.4 20V	B 5244 S2	2435	103	2001		X	X	X	X	X	X		X
2.4 20V D5	D 5244 T	2400	120	2001		X	X	X	X	X	X		X
2.4 20V TD	D 5244 T2	2400	96	2002		X	X	X	X	X	X		X
2.4 20V TD	D 5244 T3 (empty)	2400		2004		X	X	X	X	X	X		X
2.4 20V Turbo	B 5244 T3	2435	147	2001	2003	X	X	X	X	X	X		X
2.4 20V Turbo	B 5244 T4 (empty)	2435		2005		X	X	X	X	X	X		X
2.4 20V Turbo	B 5244 T5 (empty)	2435		2005		X	X	X	X	X	X		X
2.4 20V Turbo R	B 5254 T4	2521	220	2004		X	X	X	X	X	X		X
2.4 Bi-Fuel	B 5244 SG	2435	103	2002		X	X	X	X	X	X		X

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Identification	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times	Fuses & Relays
							Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays
VOLVO													
S60 2001													
2.4 Bi-Fuel	B 5244 SG2	2435	103	2002		X	X	X	X		X	X	X
2.5 20V Turbo	B 5254 T2	2435	154	2003		X	X	X	X		X	X	X
S80 1999													
2.0 T5	B 5204 T3	1984	166	1999	2000	X	X	X	X		X	X	X
2.0 Turbo	B 5204 T4	1984	120	1999	2000	X	X	X	X		X	X	X
2.0 Turbo	B 5204 T5	1984	132	2000		X	X	X	X		X	X	X
2.3 Turbo	B 5234 T7	2319	147	2000	2004	X	X	X	X		X	X	X
2.4	B 5244 S	2435	125	1999		X	X	X	X		X	X	X
2.4	B 5244 S2	2435	103	1999		X	X	X	X	X	X	X	X
2.4 Bi-Fuel	B 5244 SG	2435	103	2001		X	X	X	X		X	X	X
2.4 Bi-Fuel	B 5244 SG2	2435	103	2002		X	X	X	X		X	X	X
2.4 TD	D 5244 T	2400	120	2001		X	X	X	X		X	X	X
2.4 TD	D 5244 T2	2400	96	2002		X	X	X	X		X	X	X
2.4 Turbo	B 5244 T3	2435	147	2001	2003	X	X	X	X		X	X	X
2.4 Turbo	B 5244 T4 (empty)	2435		2005		X	X	X	X		X	X	X
2.5 TDi	D 5252 T	2460	103	1999	2001	X	X	X	X		X	X	X
2.5 Turbo	B 5254 T2	2435	154	2003		X	X	X	X		X	X	X
2.8 T6	B 6284 T	2783	200	1999	2001	X	X	X	X	X	X	X	X
2.9	B 6294 S	2922	147	2000	2002	X	X	X	X		X	X	X
2.9	B 6294 S2	2922	144	2003		X	X	X	X		X	X	X
2.9 Turbo	B 6294 T	2922	200	2002		X	X	X	X		X	X	X
3.0	B 6304 S3	2922	150	1999	1999	X	X	X	X		X	X	X
V70 / XC70 2000													
2.0 20V Turbo	B 5204 T5	1984	132	2000		X	X	X	X	X	X	X	X
2.3 20V T5	B 5234 T3	2319	184	2000	2004	X	X	X	X	X	X	X	X
2.3 20V Turbo	B 5234 T7	2319	147	2001		X	X	X	X		X	X	X
2.4 20V	B 5244 S	2435	103	2000		X	X	X	X	X	X	X	X
2.4 20V	B 5244 S2	2435	125	2000		X	X	X	X		X	X	X
2.4 20V Bi-Fuel	B 5244 SG	2435	103	2001		X	X	X	X		X	X	X
2.4 20V Bi-Fuel	B 5244 SG2	2435	103	2001		X	X	X	X		X	X	X
2.4 20V D5	D 5244 T	2401	120	2001		X	X	X	X	X	X	X	X
2.4 20V T5	B 5244 T5 (empty)	2435	191	2005		X	X	X	X		X	X	X
2.4 20V TD	D 5244 T2	2401	96	2002		X	X	X	X		X	X	X
2.4 20V TD	D 5244 T3 (empty)	2401		2004		X	X	X	X		X	X	X
2.4 20V Turbo	B 5244 T3	2435	147	2000	2003	X	X	X	X		X	X	X
2.4 20V Turbo	B 5244 T4 (empty)	2435		2005		X	X	X	X		X	X	X
2.5 20V R	B 5254 T4	2521	220	2004		X	X	X	X		X	X	X

Legend: N = new, X = present

Make description

Model description From To

Type description	Engine code	Capacity	Output	From	To	Maintenance	Techn. Drawings	Motor Manag.	Wiring Diagram	Service Reset	Repair Times							
						Identification	Adjustment	Lubricants	ABS	Engine	Air Cond. Wir. Diagram	Fuses & Relays						
VOLVO																		
V70 / XC70 2000																		
2.5 20V Turbo	B 5254 T2	2435	154	2003		X	X	X	X		X	X			X			
2.5 TD	D 5252 T	2460	103	2000	2001	X	X	X	X		X	X			X			
XC90 2003																		
2.4 D5	D 5244 T	2401	120	2003		X	X	X	X	X	X	X			X			
2.5 Turbo	B 5254 T2	2521	154	2003		X	X	X	X	X	X	X			X			
2.9 T6	B 6294 T	2922	200	2003		X	X	X	X	X	X	X			X			
4.4 V8	B 8444 S			2005		X	X	X			X							
0 7164						6940	6535	6488	6228	6134	3047	1991	2195	5796	2551	1565	3951	5110